

INDEX

MODEL	SALES DESIGNATION	MODEL	SALES DESIGNATION
126.032.....	380 SE	126.037.....	500 SEL
126.033.....	380 SEL	126.044.....	500 SEC
126.043.....	380 SEC		

CIRCUIT	PAGE	CIRCUIT	PAGE
Air Injection Management	109	Lights (continued)	
Anti Lock Brake System	149	—Hazard	112
Anti Theft Alarm System	150/1	—Headlights	111
Automatic Antenna	136	—Instrument Cluster	122
Automatic Climate Control	127	—License	115
Auxiliary Fan	126	—Marker	115
Central Locking System	137	—Park	114
Charging System	110	—Stop	113
Cigar Lighters		—Tail	114
—Front	136	—Trunk	148
—Rear	148	—Turn Signal	112
Clock	118	Orthopedic Seats	134/1
Component Locations	201	Outside Heated Mirrors	139/1
Cruise Control	113	Power Distribution	104
Diagnostic Socket	107,108	Power Distribution—ACC	127
Fuel Delivery	107	Power Seats	132
Fuse Box	103	Power Windows	128
Fuse-Circuit List	102	Radio	136
Gauges	116	Rear Defogger	135
Ground Distribution	154	Rear Seat Adjustment	134
Ground Distribution—ACC	127	RH Outside Mirror	139
Heated Seats	138	Seat Backrest Locking System	146
Horns	124	Seatbelt Extenders	144
Idle Speed Stabilization	109	Sliding Roof	135
Ignition	107	Start/Cold Start	106
Lambda Control	108	Supplemental Restraint System	147
Lights		Tachometer	116
—Backup	124	Transmission Kickdown	107/1
—Center Console	122	Warning Indicators	116
—Courtesy	140	Warning System	118/1
—Fog Lights	111	Washer Jet Heaters	125
—Glove Box	124	Wiper/Washer	125

REVISIONS:

FUSE — CIRCUIT LIST

MY 1983/MY 1984/MY 1985

Fuse		Circuits Protected	Connection to Circuit	Page
No.	Amps (color)			
1	8 (WT)	Lights: Marker/License Lights: Park/Tail (RH) Warning System Illumination: Instrument Cluster/ Center Console	58R	115 114 118/4 122
2	8 (WT)	Headlights (RH High Beam/ Indicator)	56a	111
3	8 (WT)	Lights: Park/Tail (LH)	58L	114
4	8 (WT)	Headlights (LH High Beam)	56a	111
5	25 (BU)	Power Seats (Front Power Seat Switches: Front Height and Fwd-Back)	15R/30	132
6	16 (PK)	Headlights (RH Low Beam)/Fog Lights	56b	111
7	16 (PK)	Headlights (Flash) Wiper/Washer Power Windows RH Outside Mirror Power Seats	15R	111 125 128 139 132
8	8 (WT)	Headlights (LH Low Beam)	56b	111
9	8 (WT) 16 (PK)*	Glove Box Light Wiper/Washer (Washer Jet Heaters) Front Cigar Lighter/Radio *Orthopedic Seats ① *Heated Seats (Front)	15R	124 125 136 134/2 138
10	8 (WT)	Transmission Kickdown ① Backup Lights Auxiliary Fan Automatic Climate Control ① Outside Air Temperature Gauge	15	107/1 124 126 127 118
11	25 (BU)	Automatic Climate Control	15X	127

Fuse		Circuits Protected	Connection to Circuit	Page
No.	Amps (color)			
12	8 (WT)	Stoplights/Cruise Control Warning Indicators/Gauges Turn Signal Lights Warning System Anti Lock Brake System ② Anti Theft Alarm System ①	15	113 116 112 118/4 149 150/3
13	8 (WT)	Seat Backrest Locking System Cock Radio Central Locking System Hazard Lights Diagnostic Socket	30	146 118 136 137 112 107
14	25 (BU)	Rear Cigar Lighters Rear Defogger Heated Seats (Rear) Horns Seatbelt Extenders Warning System	15	148 135 138 124 144 121
15	8 (WT)	Seatbelt Extenders Power Seats Trunk Light Courtesy Lights Automatic Antenna Warning System Anti Theft Alarm System ①	30	144 132 148 140 136 118/4 150/3
16	16 (PK)	Rear Seat Adjustment Sliding Roof	15	134 135
a	16 (PK)	Power Windows (RF/LR)	15R	128
b	16 (PK)	Power Windows (LF/RR)	15R	128
c	16 (PK)	Auxiliary Fan	30	126
d	25 (BU)	Power Seats (Front Power Seat Switches: Rear Height and Backrest)	15R/30	132
	30	Rear Defogger	15	135

Auxiliary Fuse Box

	30	Rear Defogger	15	135
--	----	---------------	----	-----


REVISIONS: ① AS OF MODEL YEAR 1984
② AS OF MODEL YEAR 1985

FUSE BOX

MY 1985

FUSES
(SEE PAGE 102)

RELAYS
(SEE BELOW)

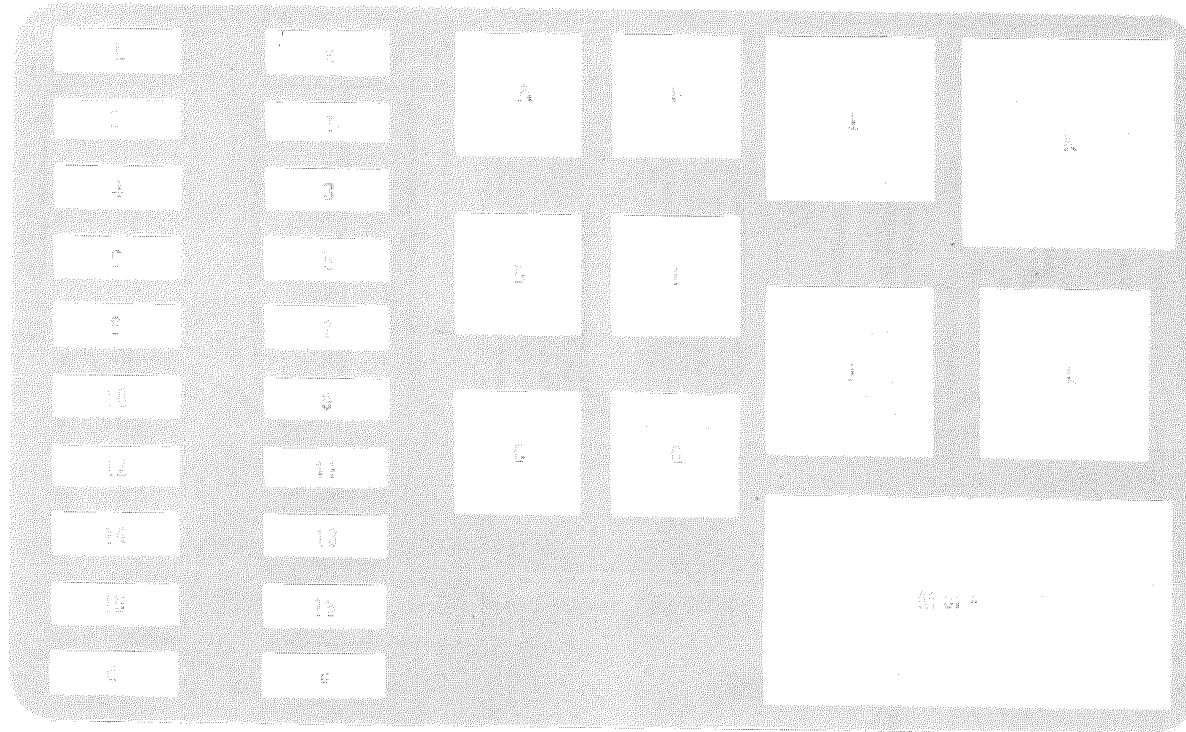


RELAY CODE	RELAY USE
A	Seat Control Relay (Power Seats)
B	High Speed Relay (Auxiliary Fan)
C	Low Speed Relay (Auxiliary Fan)
E	Power Separation Relay (Power Seats)
F	Window Relay (Power Windows)
G	Air Injection Relay (Air Injection Management/Idle Speed Stabilization)

RELAY CODE	RELAY USE
I	Over Voltage Protection Relay (Lambda Control/Diagnostic Socket)
J	Compressor Time Delay Relay (ACC)
K	Rear Defogger Timer Relay (Rear Defogger/Sliding Roof)
L	Interval Wipe Control (Wiper/Washer)
M or *	Electronic Fuel Pump Relay (Wiper/Washer)

REVISIONS:

MY 1983/MY 1984/MY 1985

(For Component Locations See Page 211)

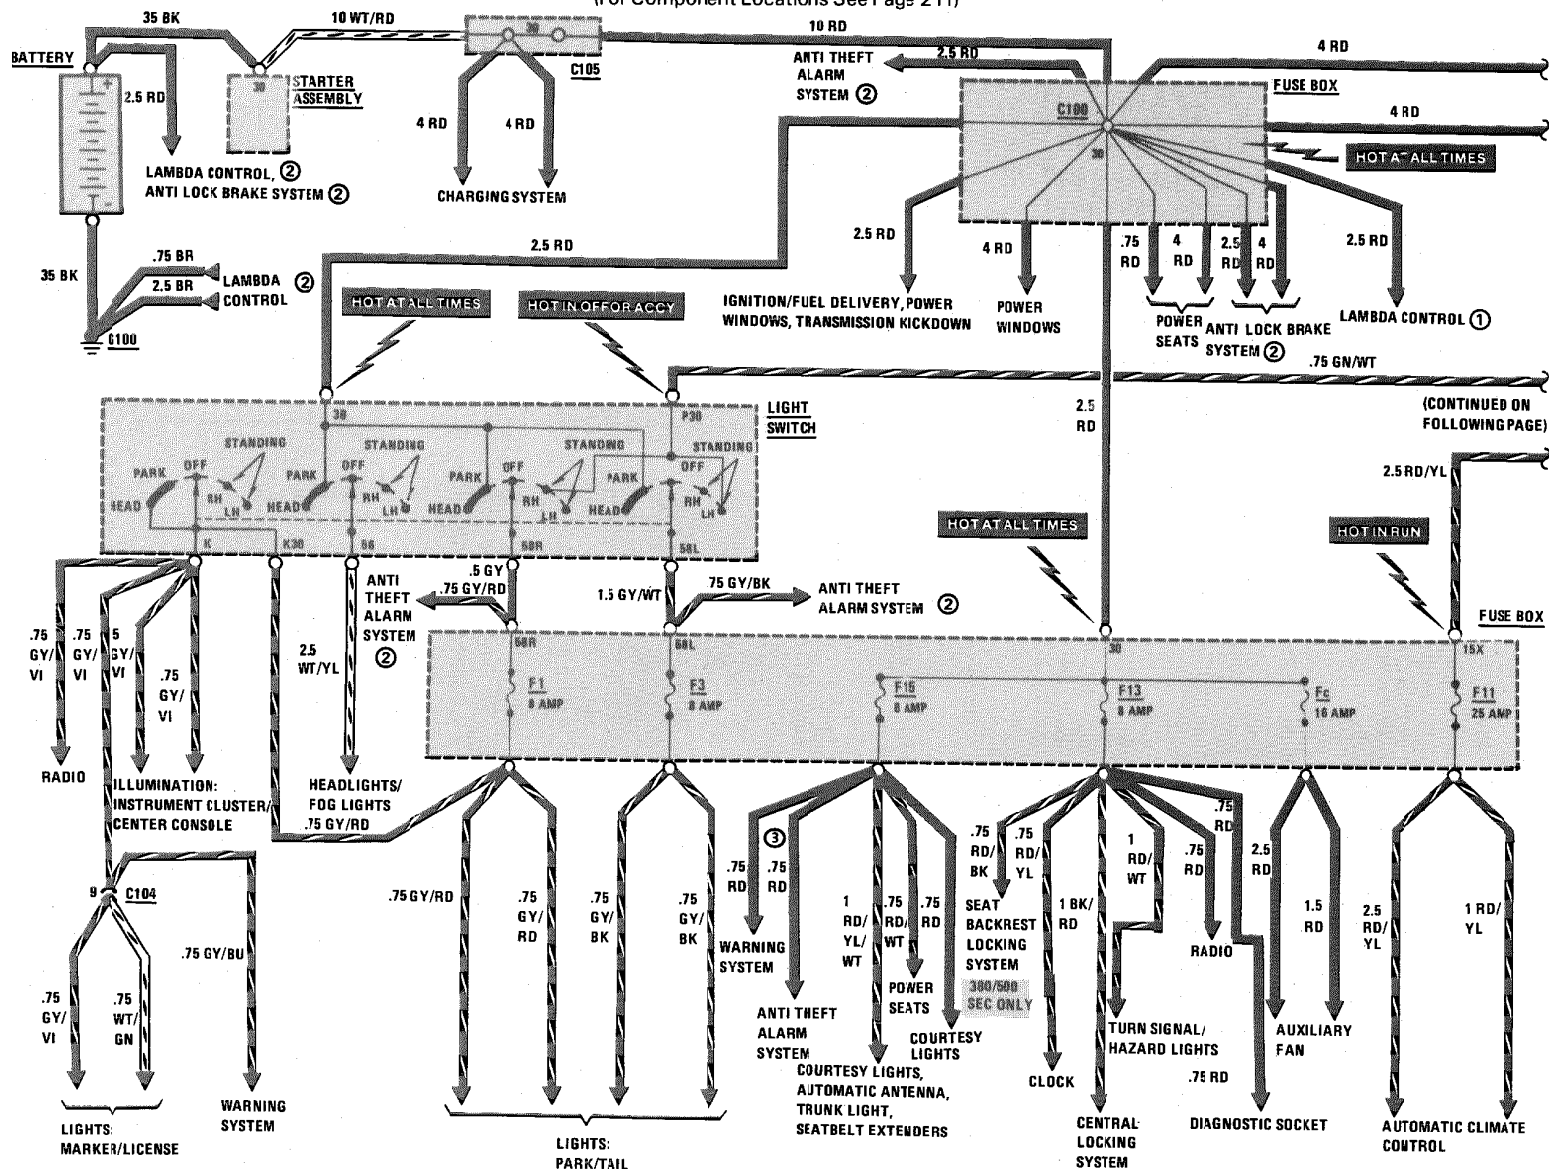


REVISIONS: ① MODEL YEAR 1983 AND MODEL YEAR 1984 ONLY
② AS OF MODEL YEAR 1985
③ MODEL YEAR 1984 AND 1985

POWER DISTRIBUTION


(For Component Locations See Page 211)

MY 1983/MY 1984/MY 1985

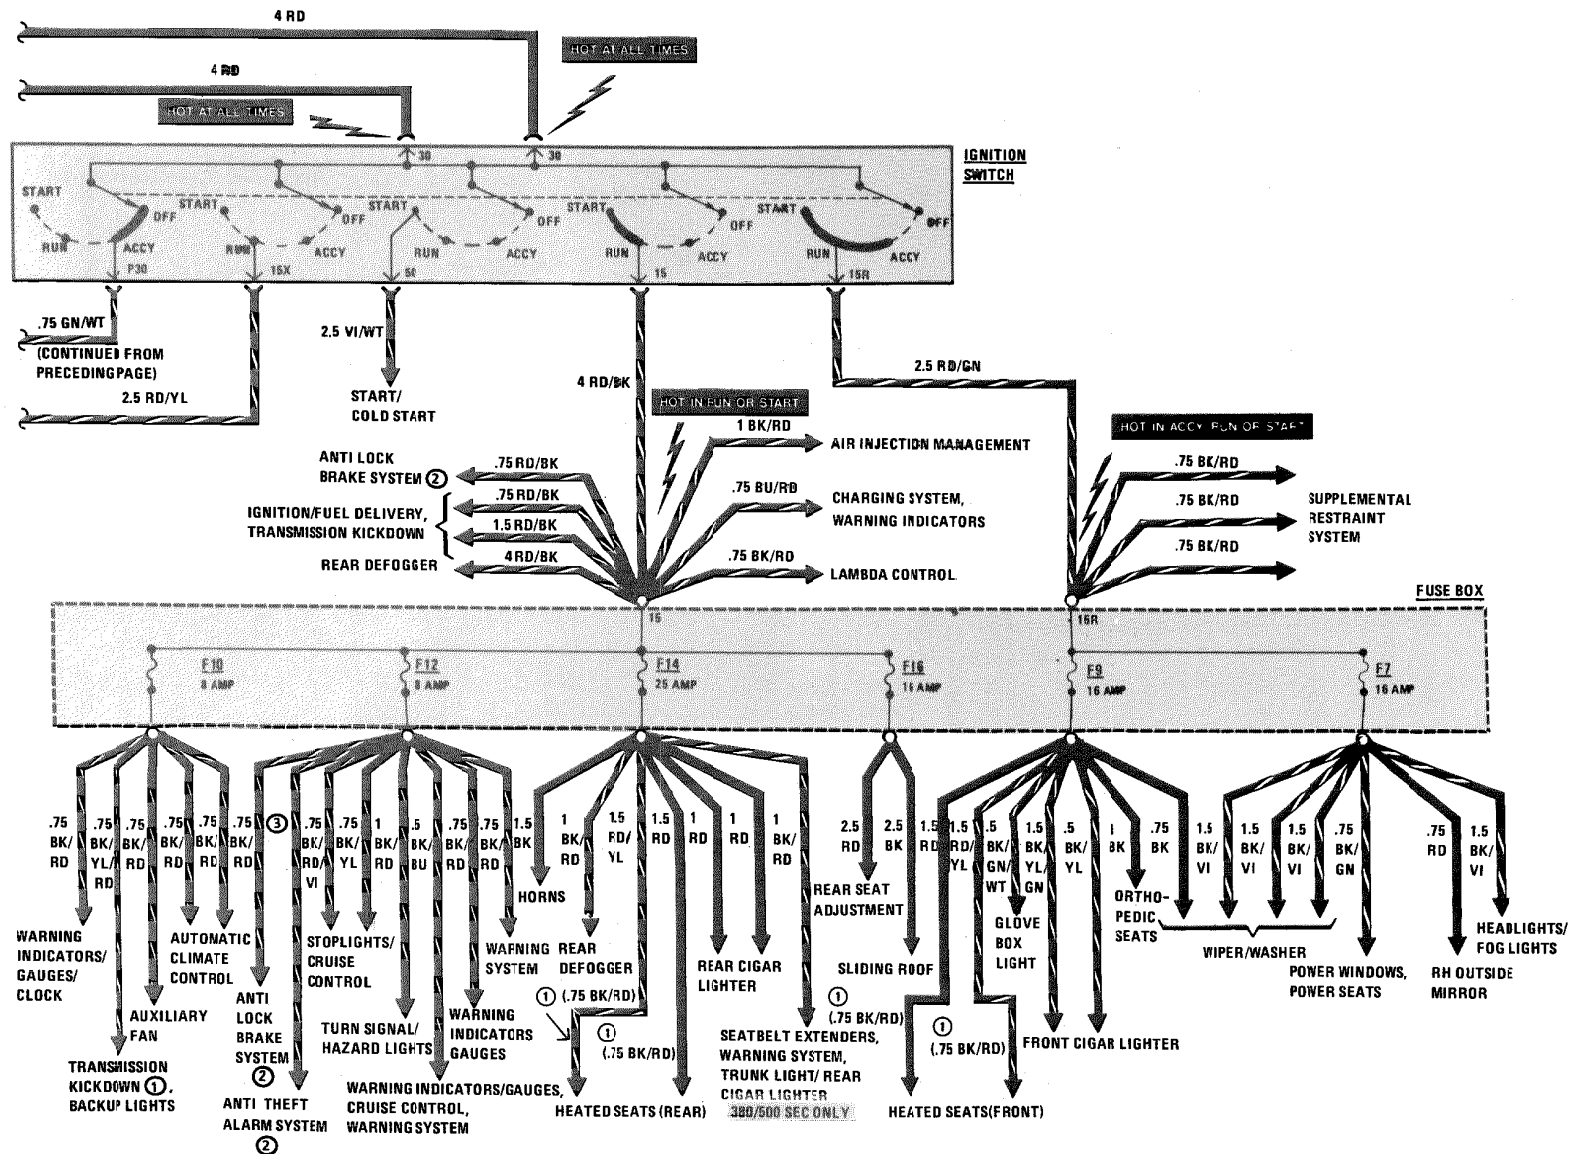

MY 1983 / MY 1984 / MY 1985


(For Component Locations See Page 214)

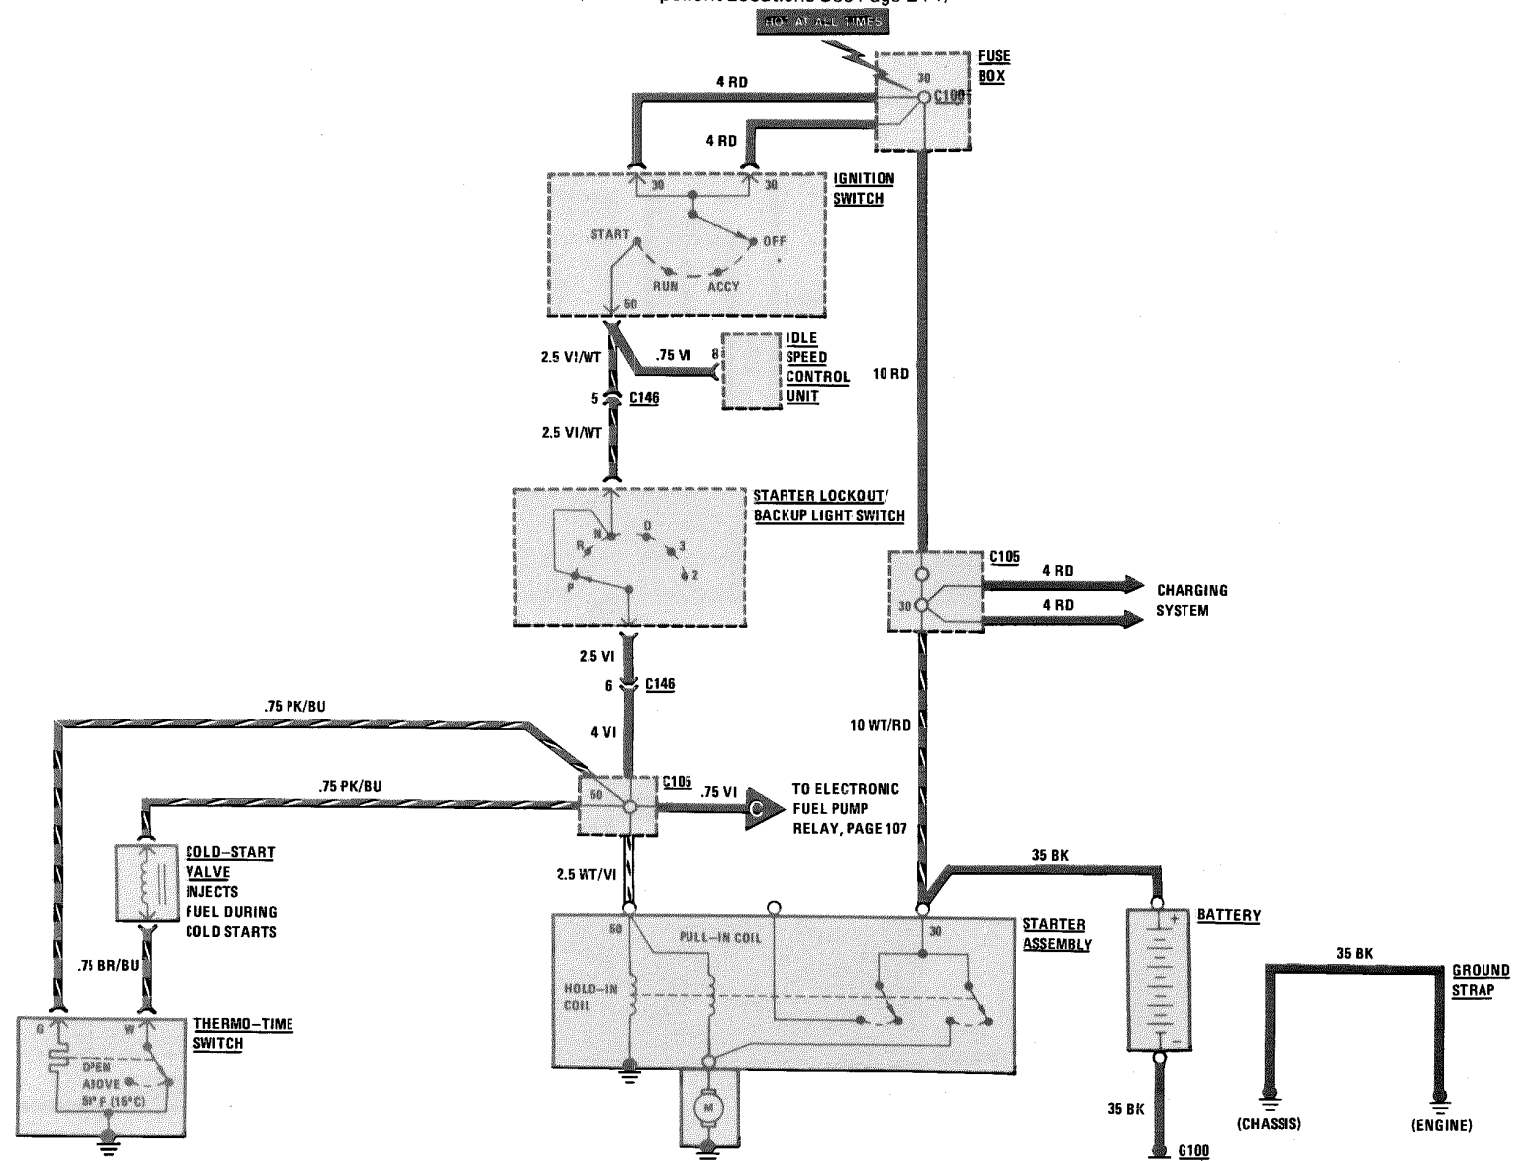

REVISIONS:

MY 1983/MY 1984/
MY 1985

MY 1985

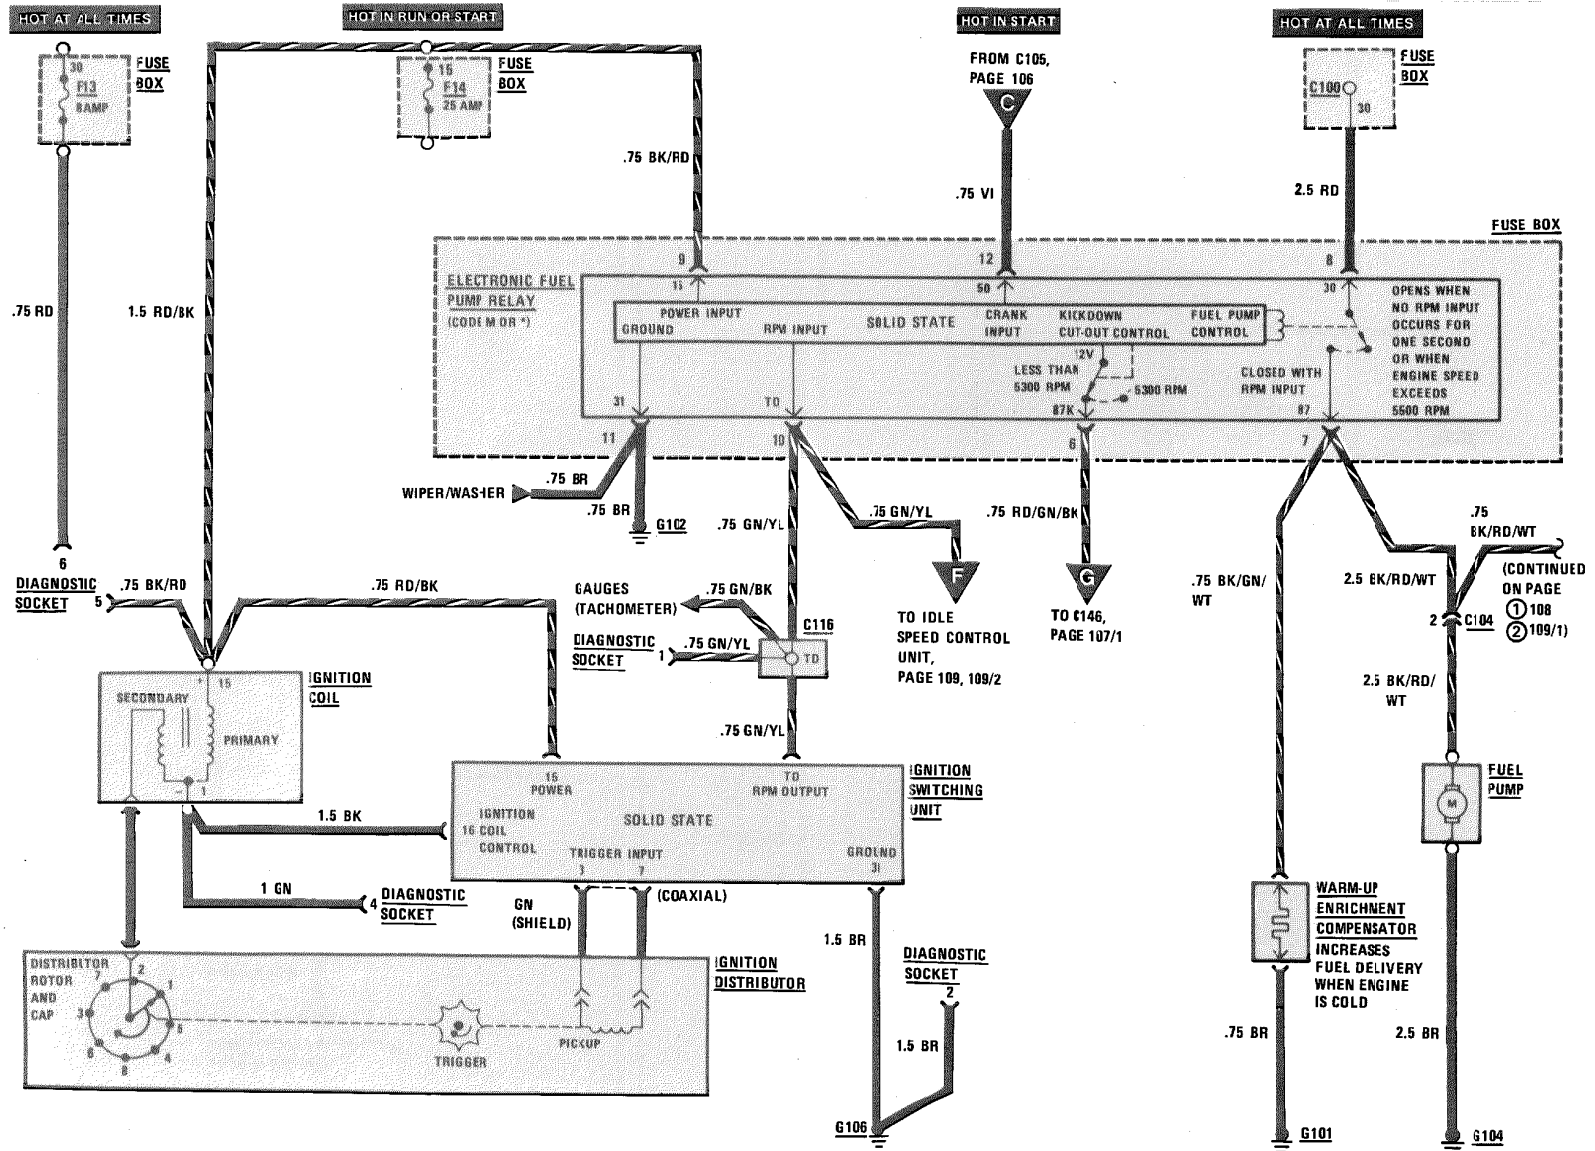

REVISIONS: ① AS OF MODEL YEAR 1983
② AS OF MODEL YEAR 1985

4/86


126.032/.033/.037/.043/.044

107


TRANSMISSION KICKDOWN

(For Component Location See Page 208)

380 SEL/SEC MY 1983
380 SE MY 1984/MY 1985

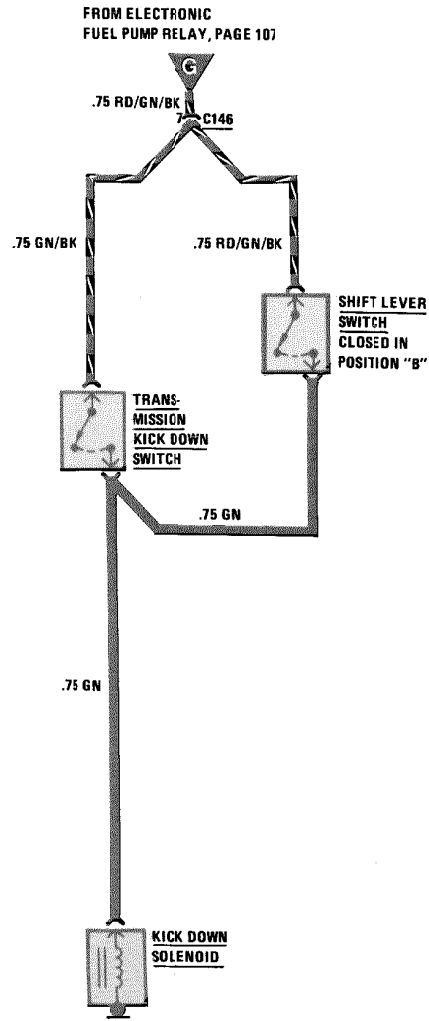

500 SEL/SEC
MY 1984/MY 1985

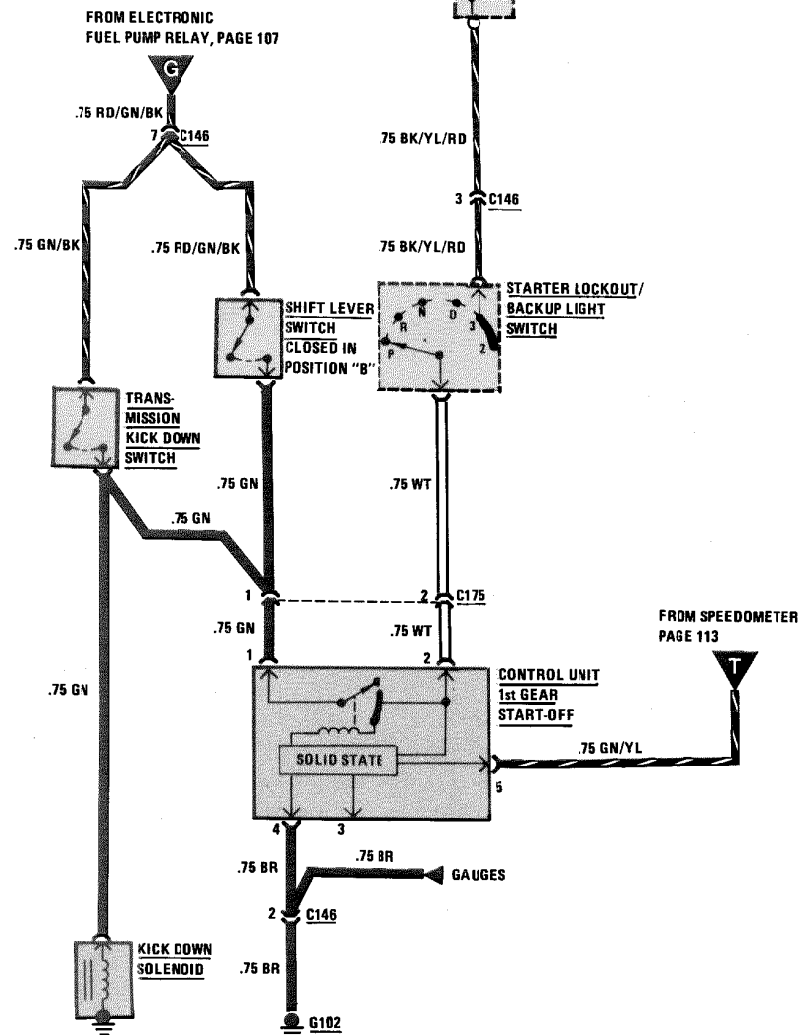


REVISIONS:

THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

MY 1983/MY 1984

REVISIONS:

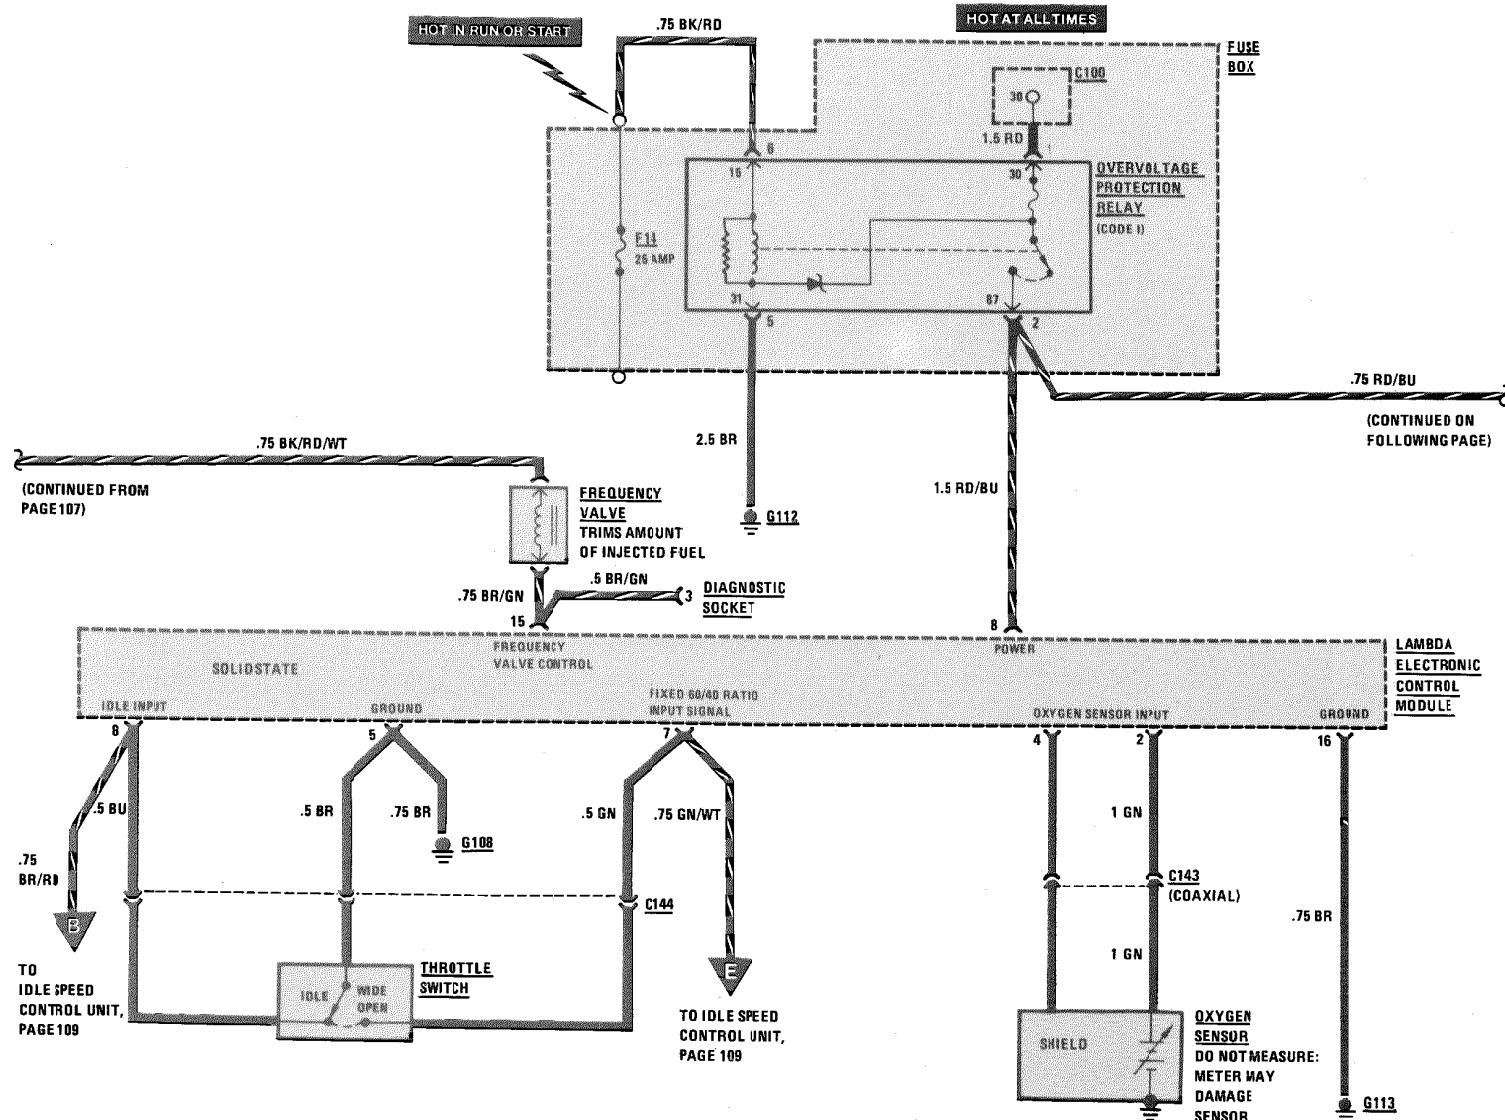

MY 1983/
MY 1984


**FROM LAMBDA ELECTRONIC
CONTROL MODULE, PAGE 108**

**FROM LAMBDA ELECTRONIC
CONTROL MODULE, PAGE 108**

**FROM ELECTRONIC FUEL
PUMP RELAY, PAGE 107**

START

COMPRESSOR CLUTCH CONTROL

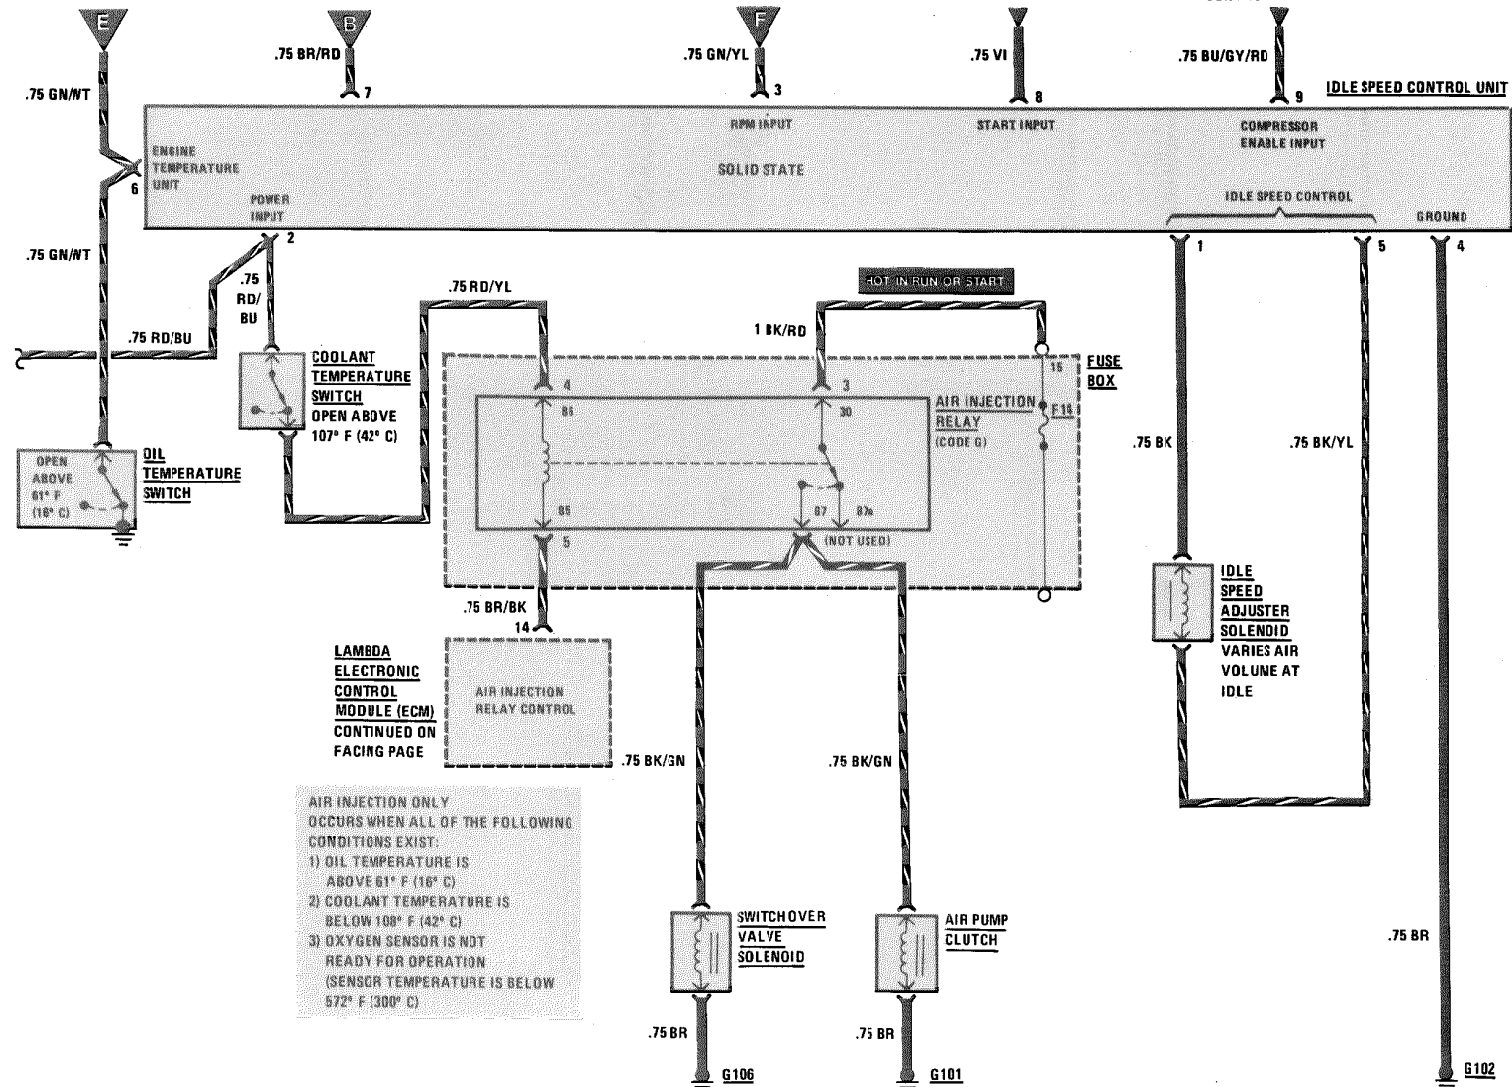

**AIR INJECTION ONLY
OCCURS WHEN ALL OF THE FOLLOWING
CONDITIONS EXIST:**


- 1) OIL TEMPERATURE IS
ABOVE 61° F (16° C)**
- 2) COOLANT TEMPERATURE IS
BELOW 188° F (42° C)**
- 3) OXYGEN SENSOR IS NOT
READY FOR OPERATION
(SENSOR TEMPERATURE IS BELOW
572° F (306° C))**

REVISIONS:

LAMBDA CONTROL/DIAGNOSTIC SOCKET

(For Component Locations See Page 205)

MY 1985

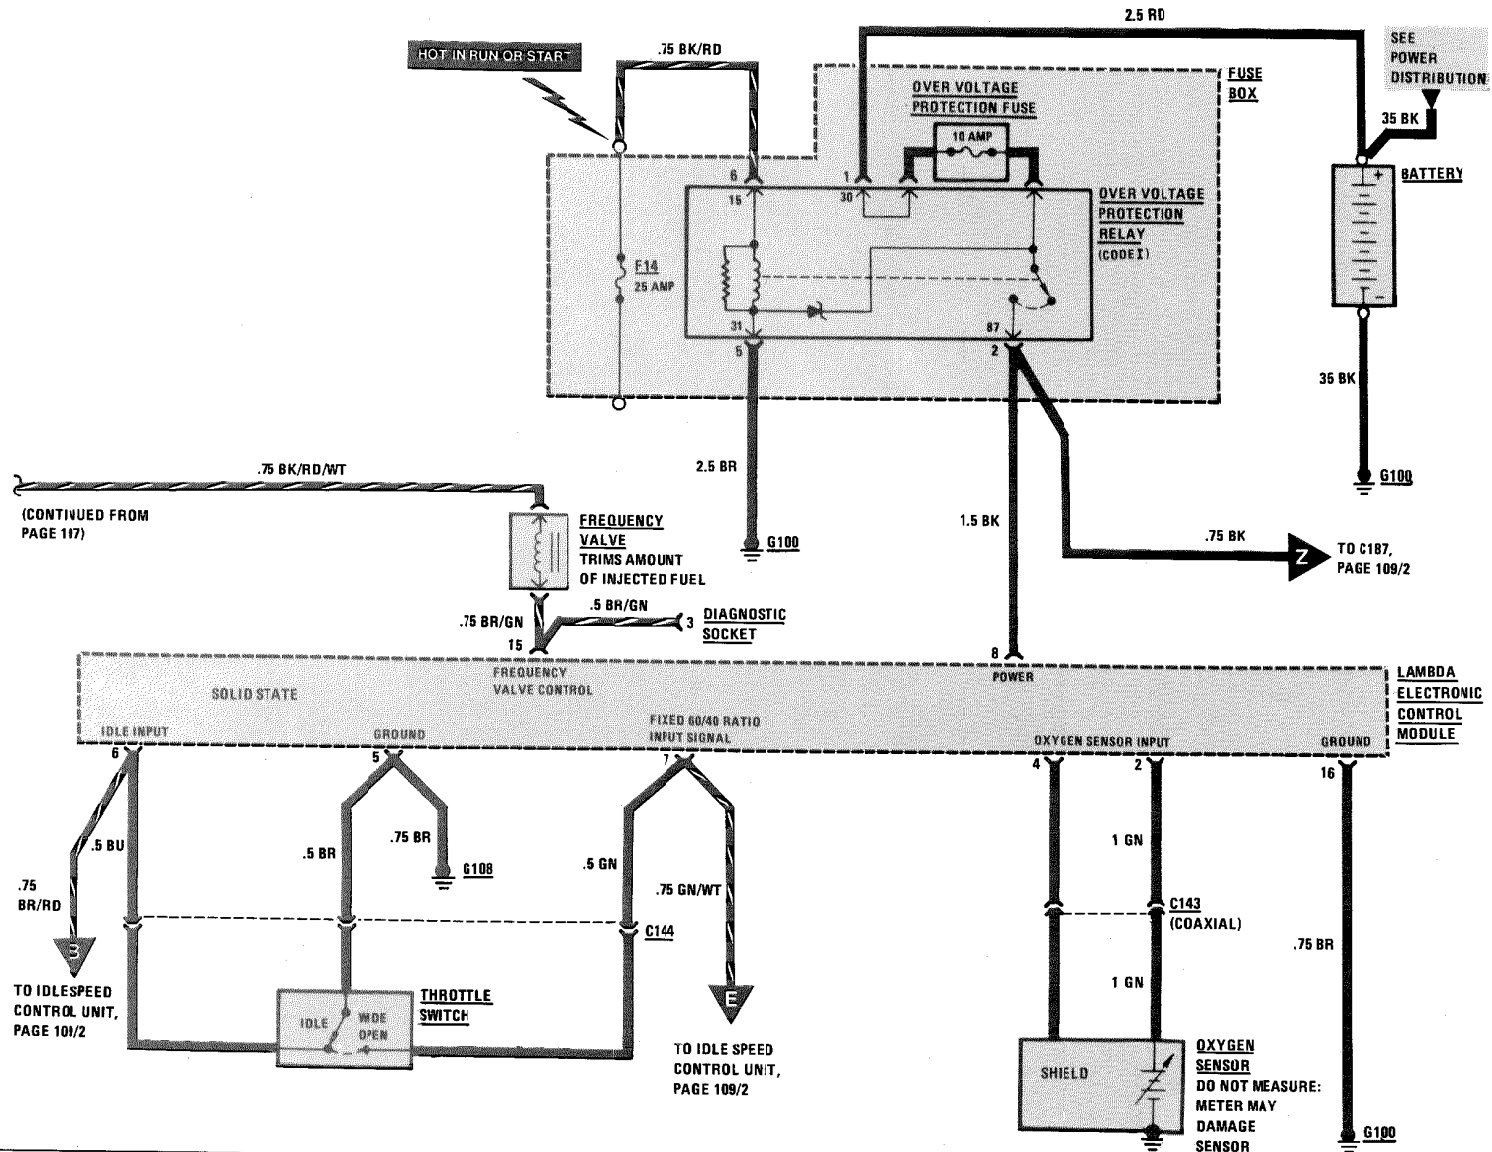

REVISIONS:


109/1

126.032/.037/.044

4/86

MY 1985

(For Component Locations See Page 205)

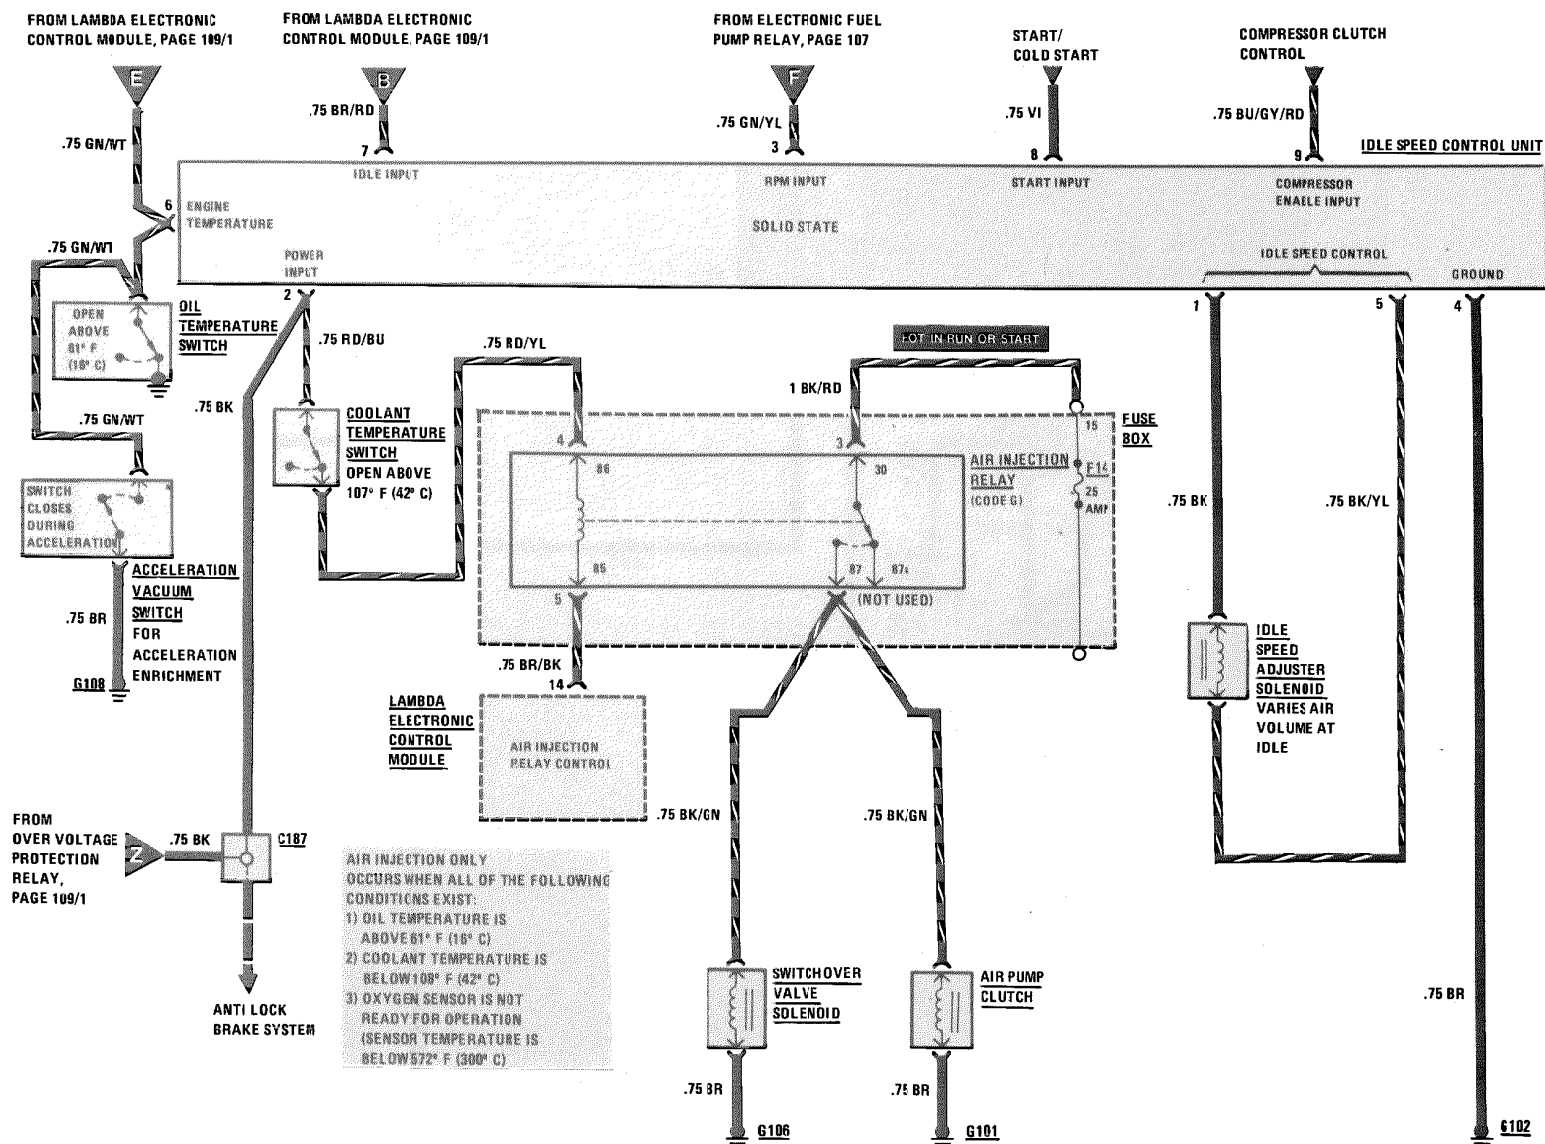

REVISIONS:

4/86


126.032/.037/.044

109/2

CHARGING SYSTEM

(For Component Locations See Page 204)


MY 1983/MY 1984/MY 1985

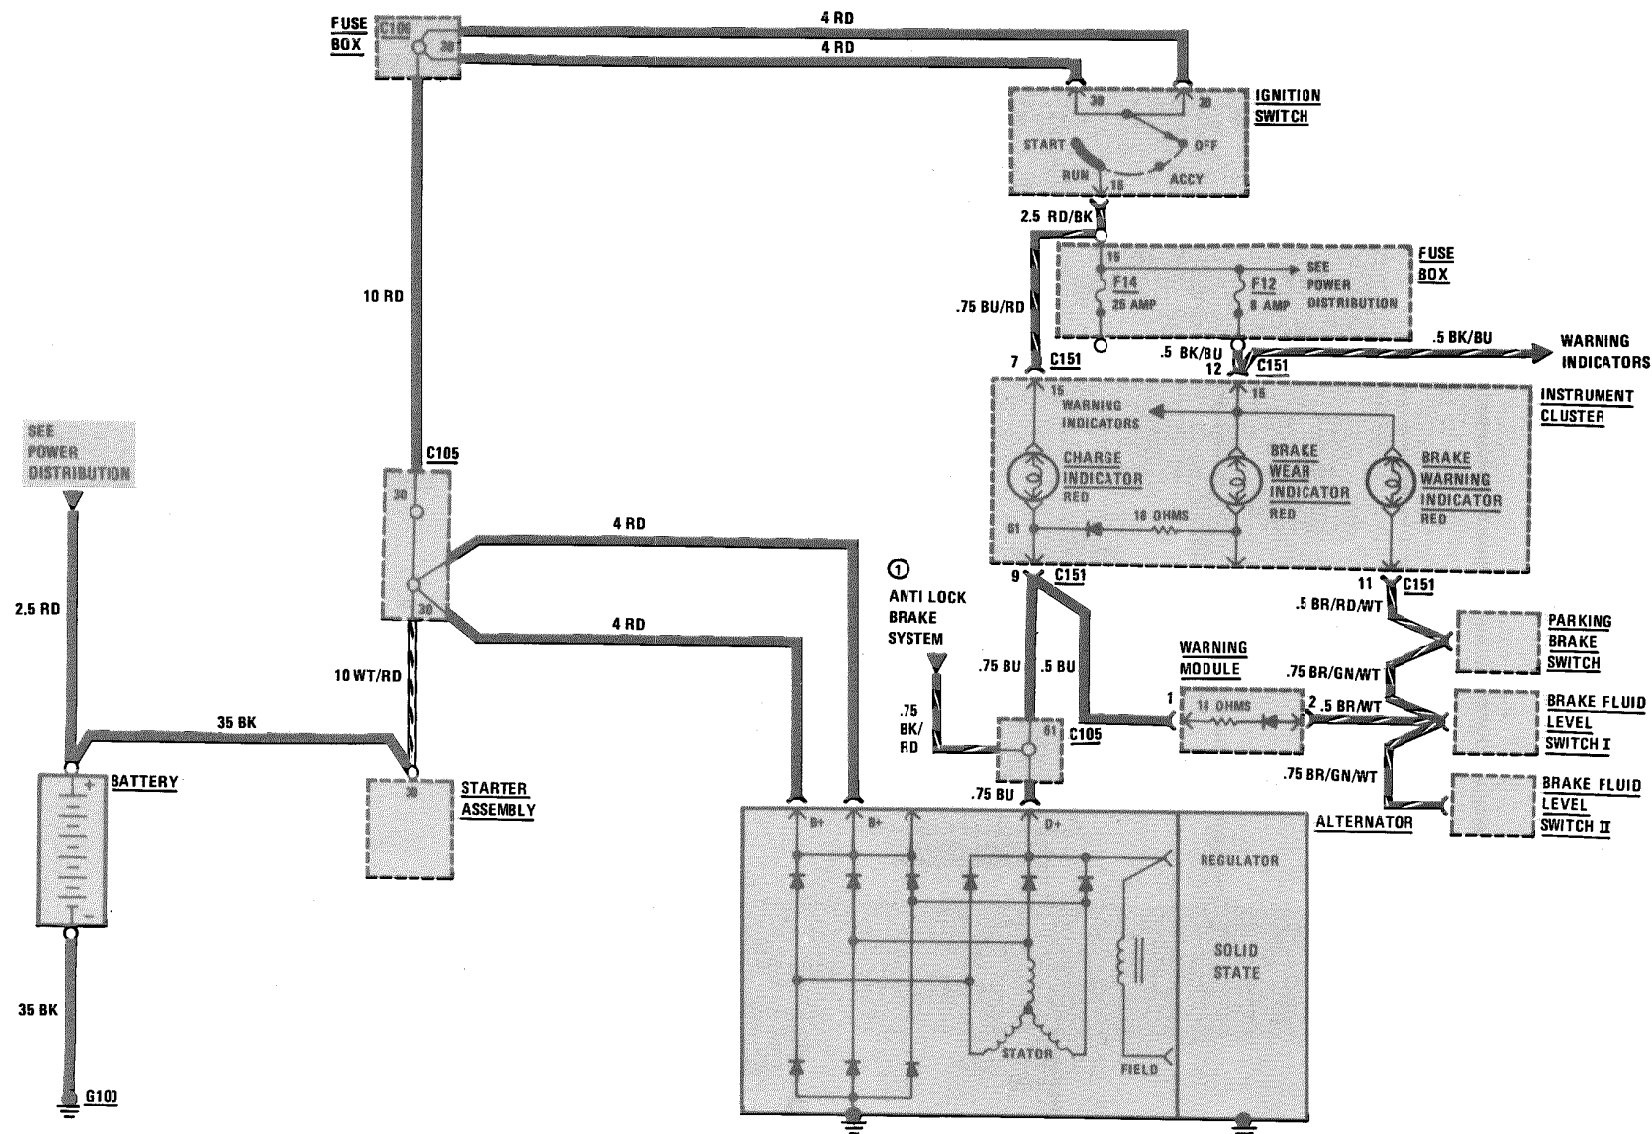

REVISIONS: ① AS OF MODEL YEAR 1985

4186

 126.032/.033/.037/.043/.044




REVISIONS ① AS OF MODEL YEAR 1985

TURN SIGNAL/HAZARD LIGHTS

(For Component Locations See Page 217)

MY 1983/MY 1984/MY 1985

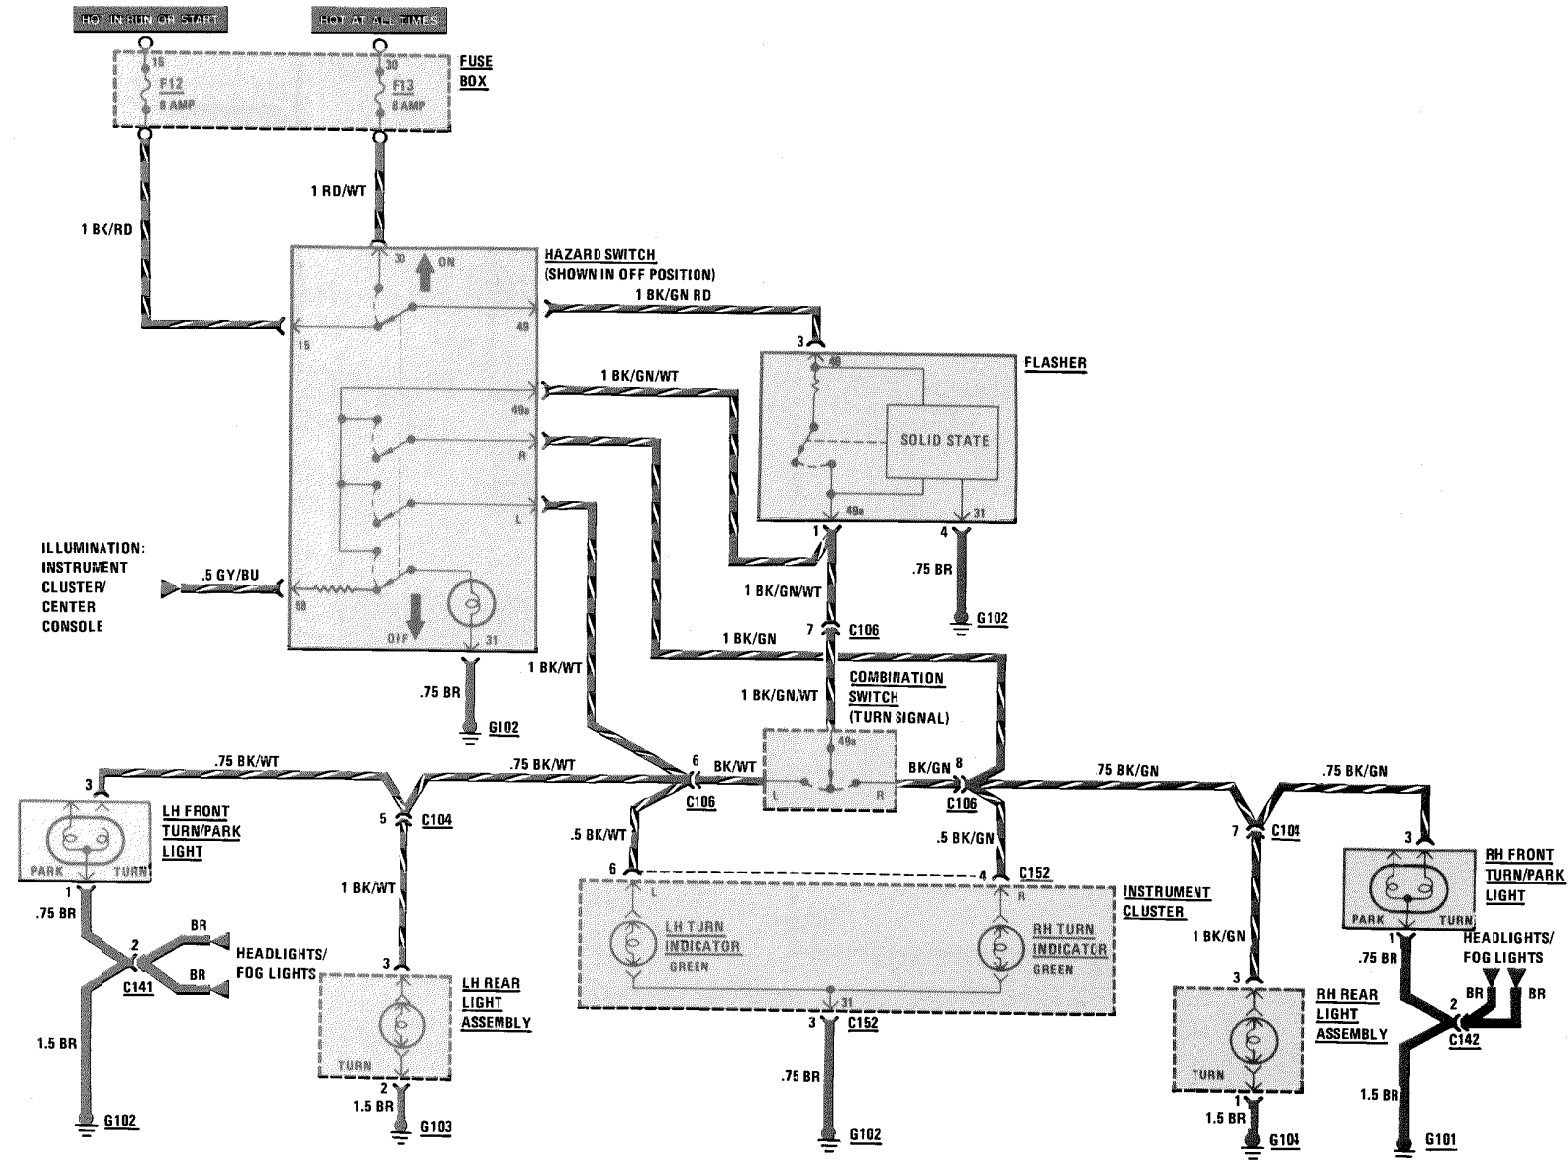

REVISIONS:

112


126.032/.033/.043/.037/.044

4/86

STOPLIGHTS/CRUISE CONTROL

MY 1983/MY 1984

(For Component Locations See Page 215)

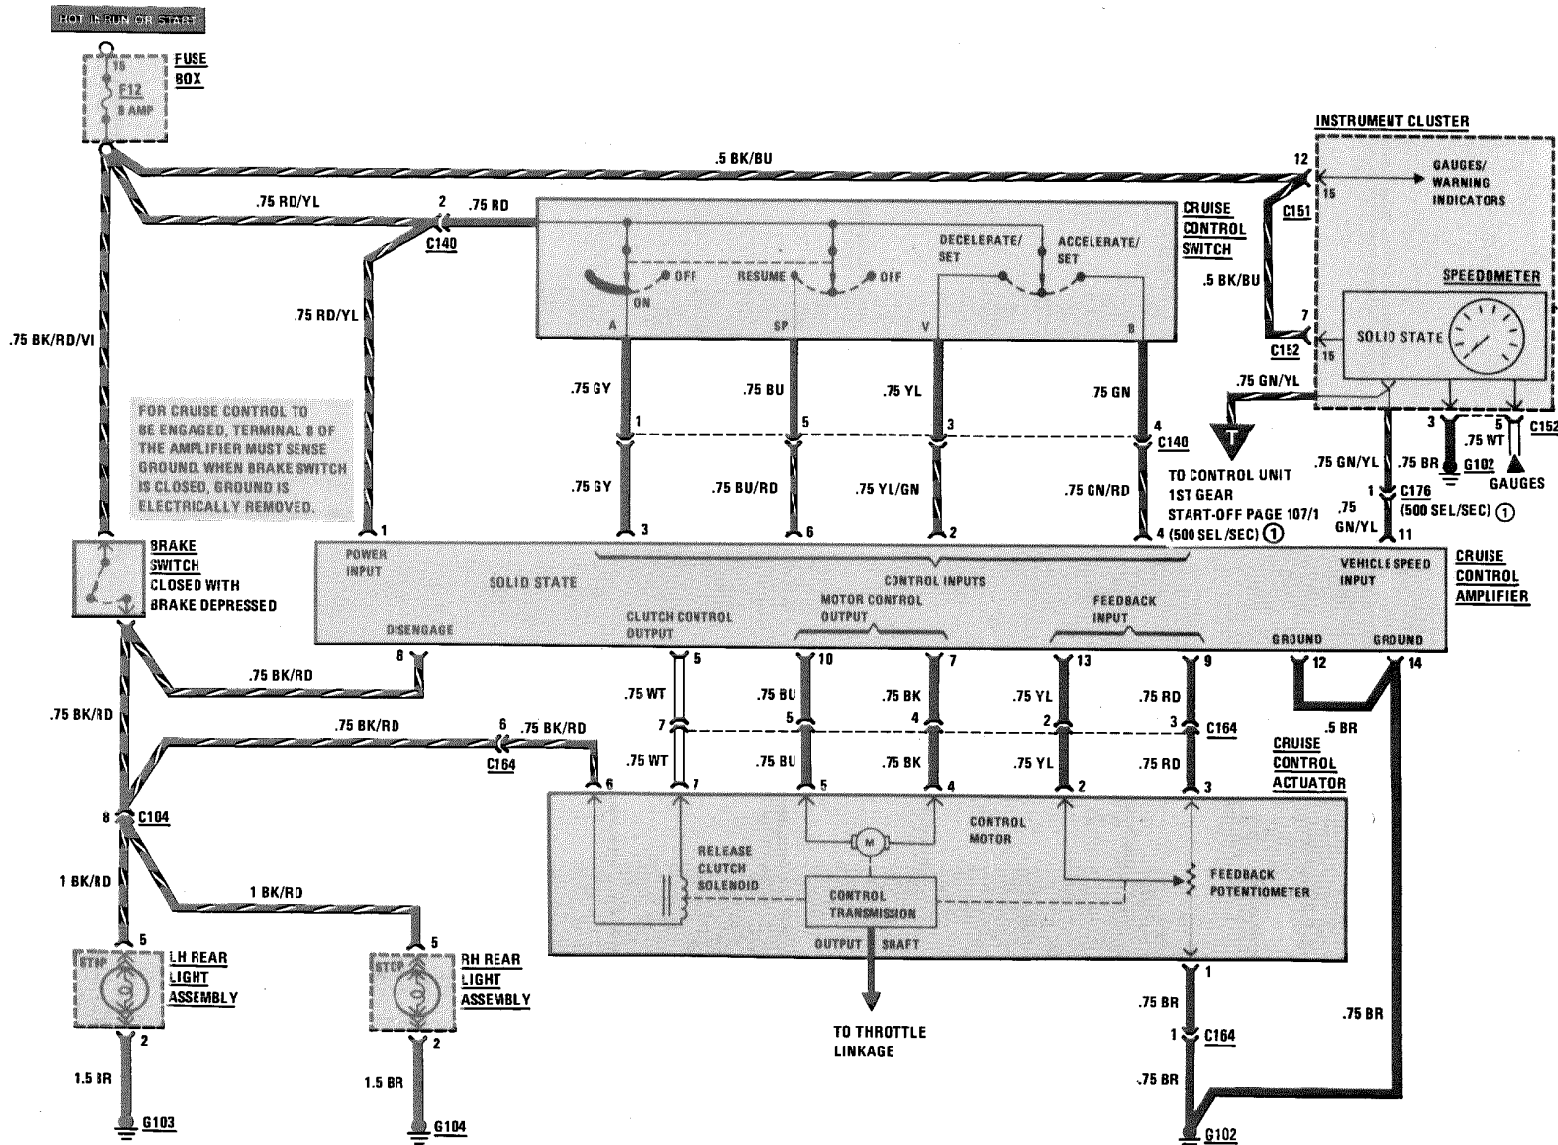


REVISIONS: ① AS OF MODEL YEAR 1984

THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

LIGHTS: PARK/TAIL (For Component Locations See Page 210)


MY 1983/MY 1984/MY 1985

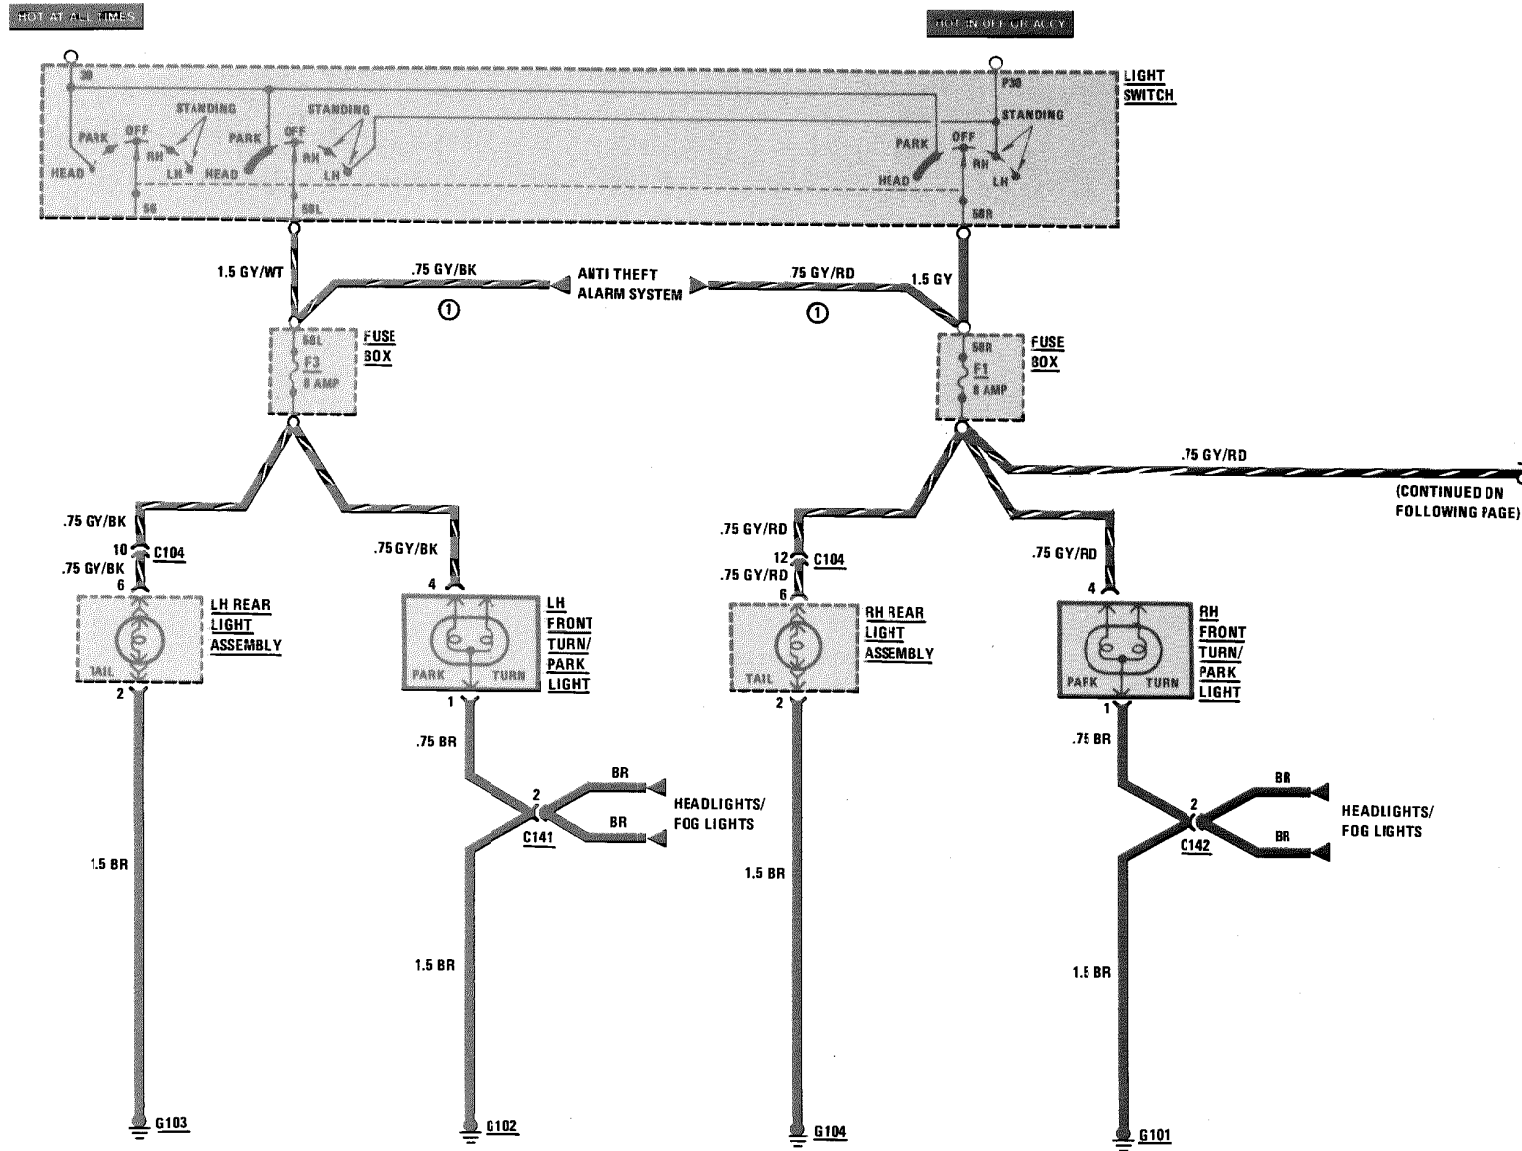

REVISIONS: ① AS OF MODEL YEAR 1985

LIGHTS: MARKER/LICENSE

(For Component Locations See Page 210)

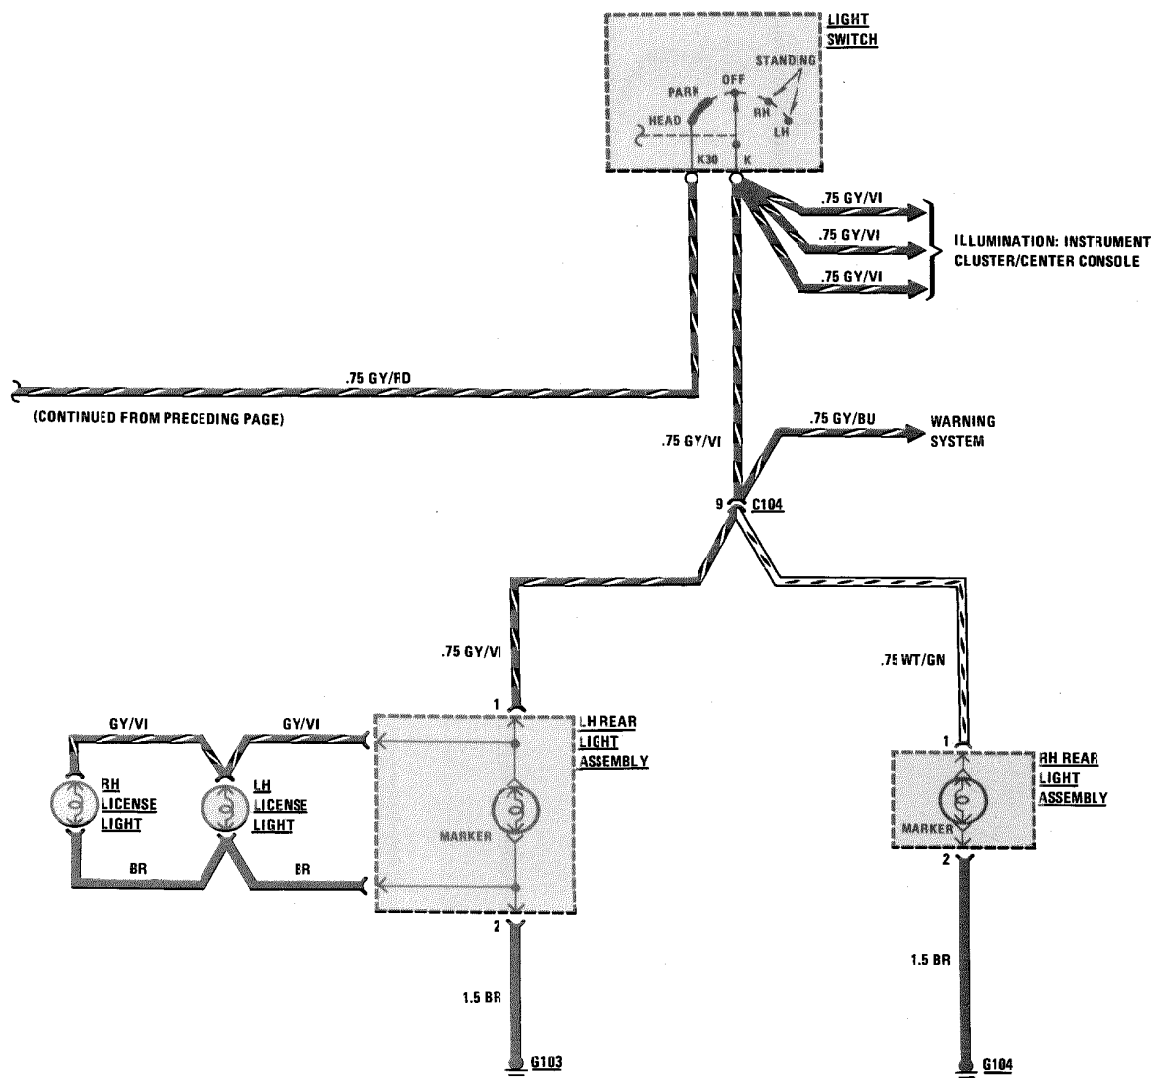MY 1983 / MY 1984 / MY 1985


REVISIONS:

126.032/.033/.037/.043/.044

WARNING INDICATORS/GAUGES/CLOCK

[For Component Locations See Page 217]

MY 1983/MY 1984/MY 1985

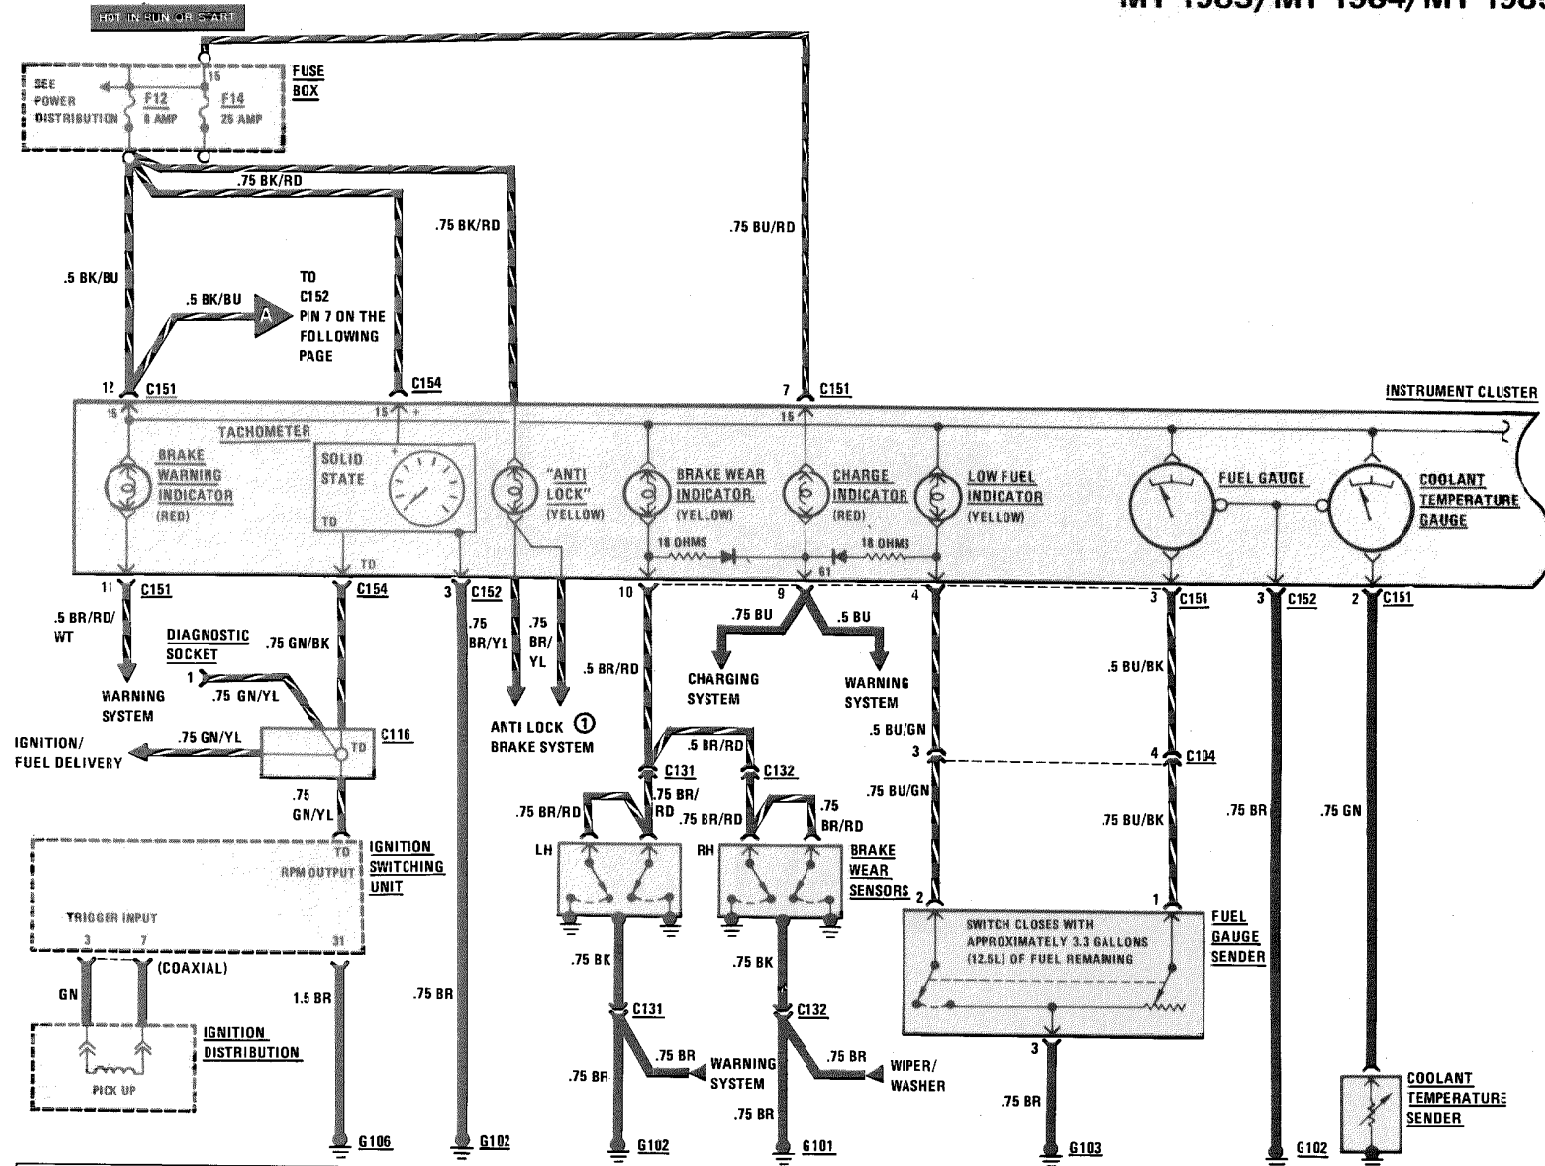

REVISIONS: ① AS OF MODEL YEAR 1985

116


126.032/.033/.037/.043/.044

4/86

WARNING INDICATORS/GAUGES

(For Component Locations See Page 217)

MY 1983/MY 1984/
MY 1985

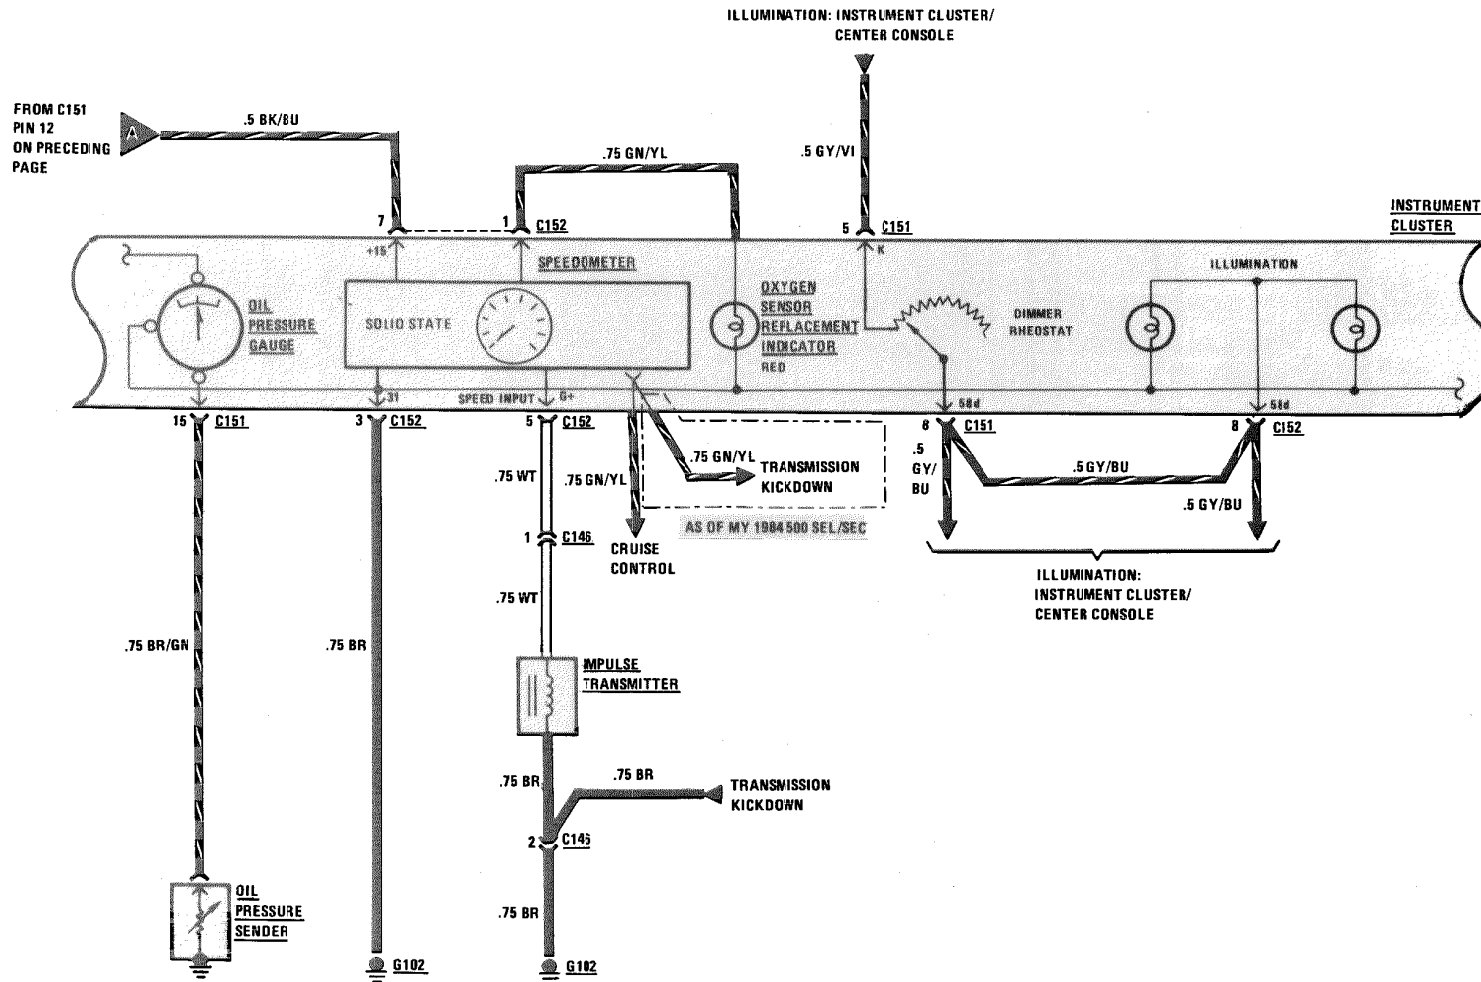



REVISIONS:

126.032/.033/.043/.037/.044

WARNING INDICATORS/GAUGES/CLOCK

(For Component Locations See Page 217)

MY 1983/MY 1984/
MY 1985

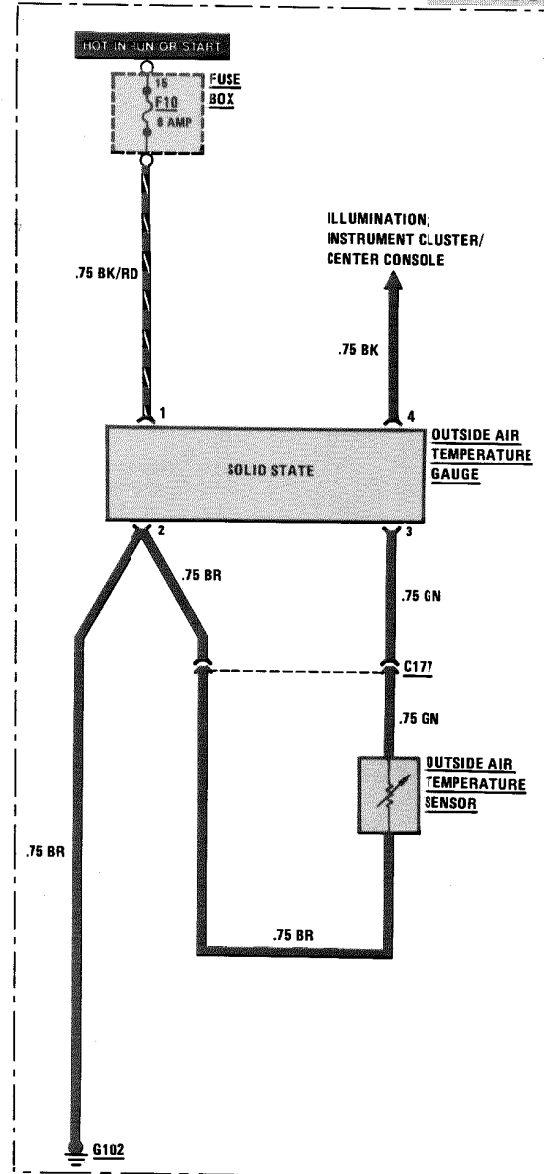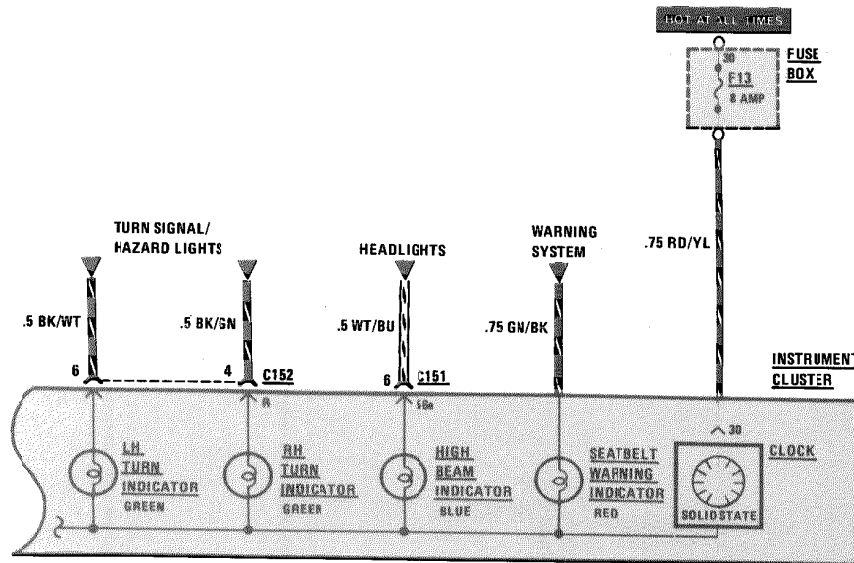

REVISIONS

118


126.032/.033/.037/.043/.044

4/86

WARNING SYSTEM

(For Component Locations See Page 218)

MY 1983 380 SEL

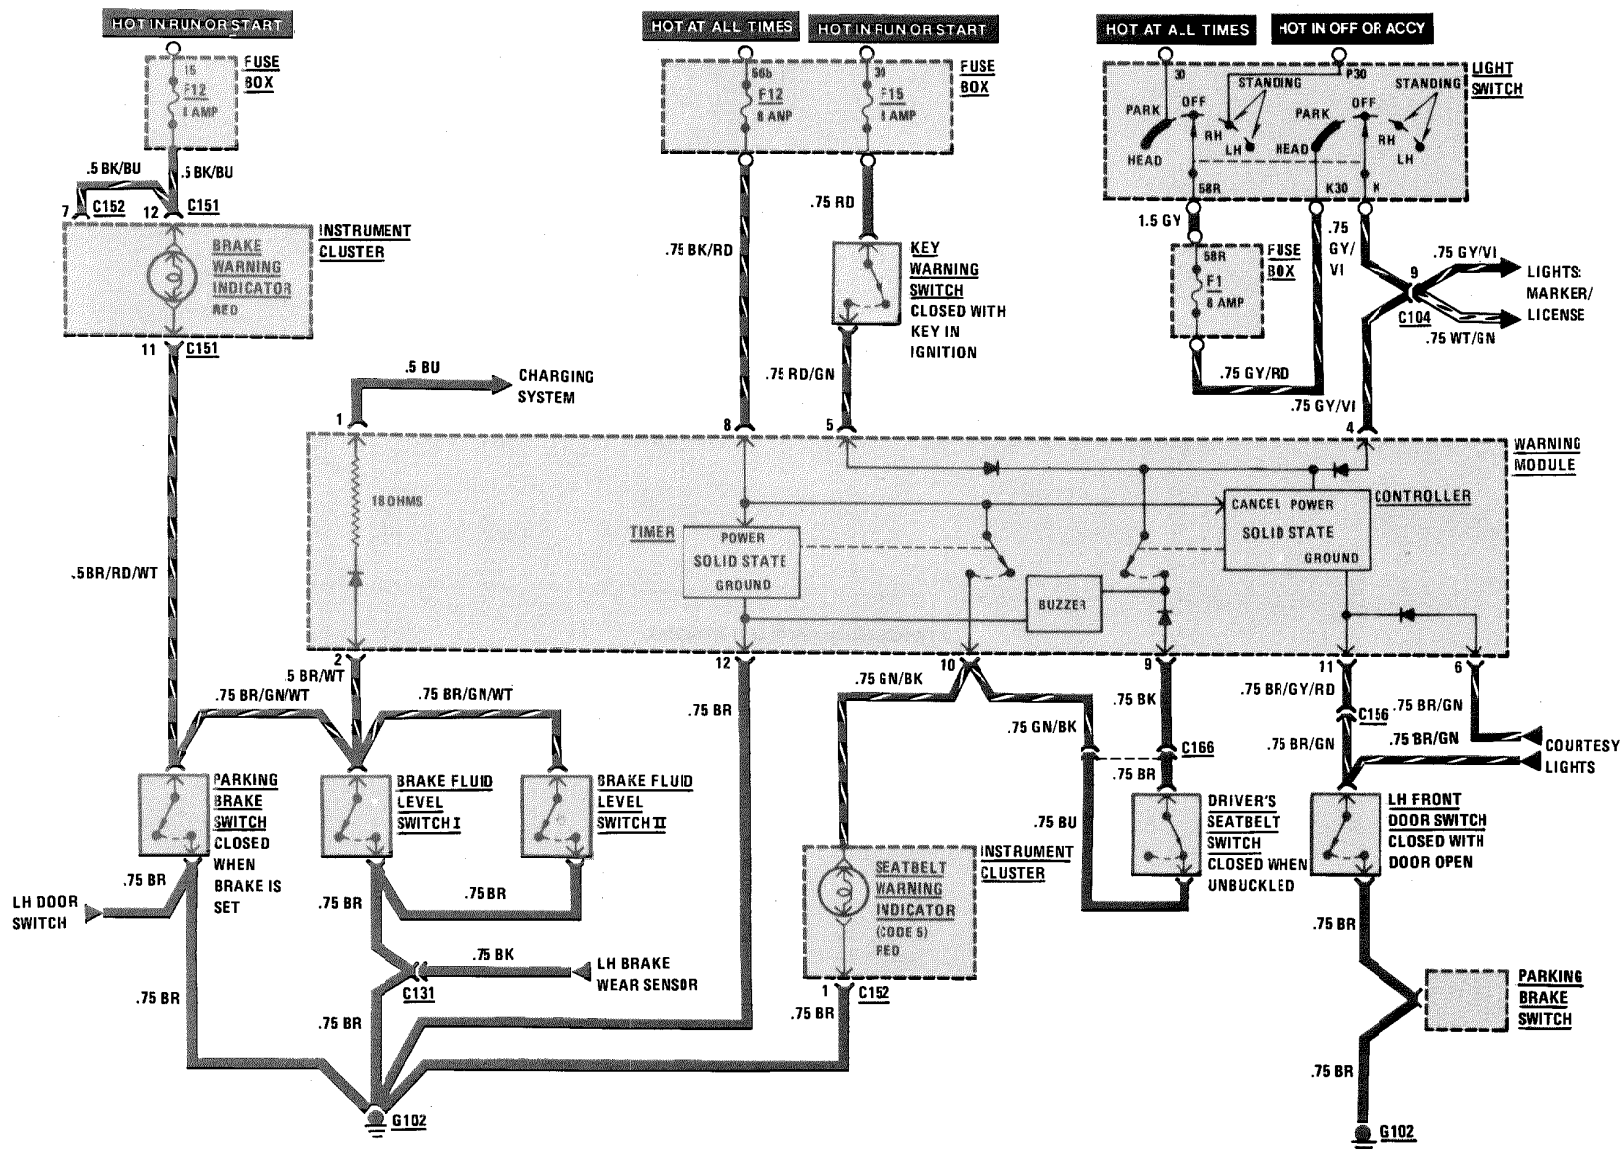

REVISIONS:

1/87

126.033


118/1

THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

**MY 1984/MY 1985
380/500 SEL**

(For Component Locations See Page 218)

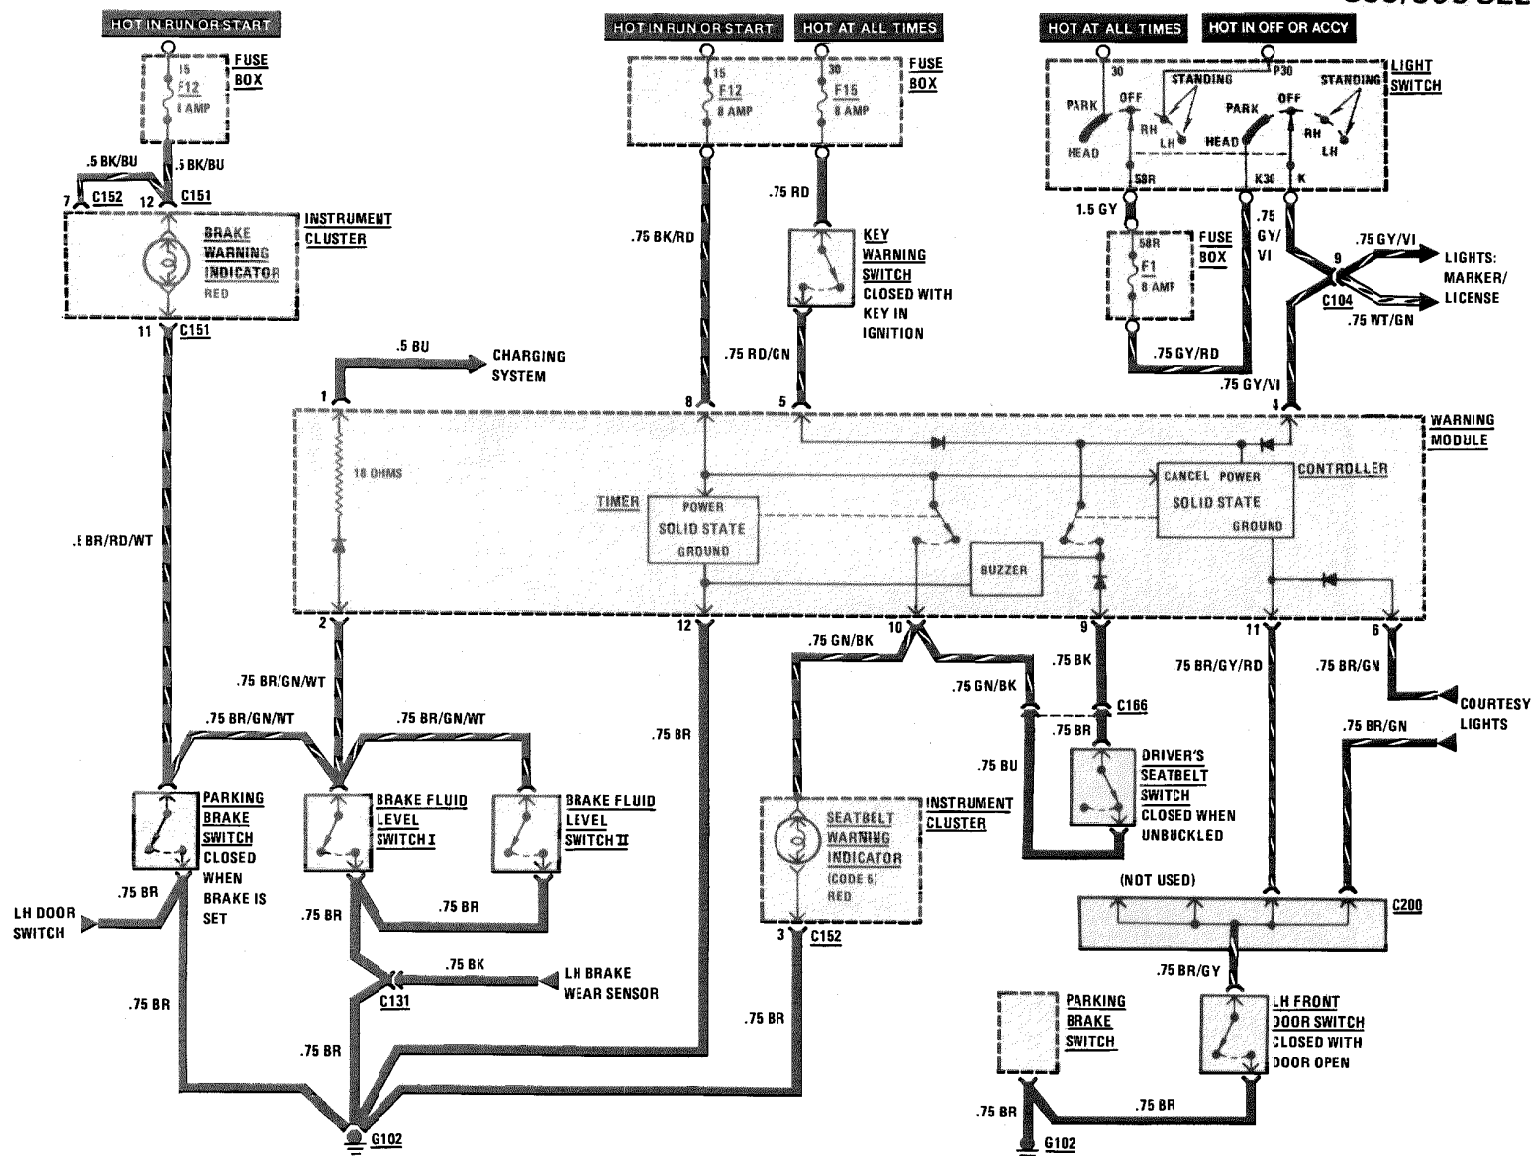


REVISIONS:

WARNING SYSTEM

(For Component Locations See Page 218)


MY 1983/MY 1984/MY 1985

380/500 SEC

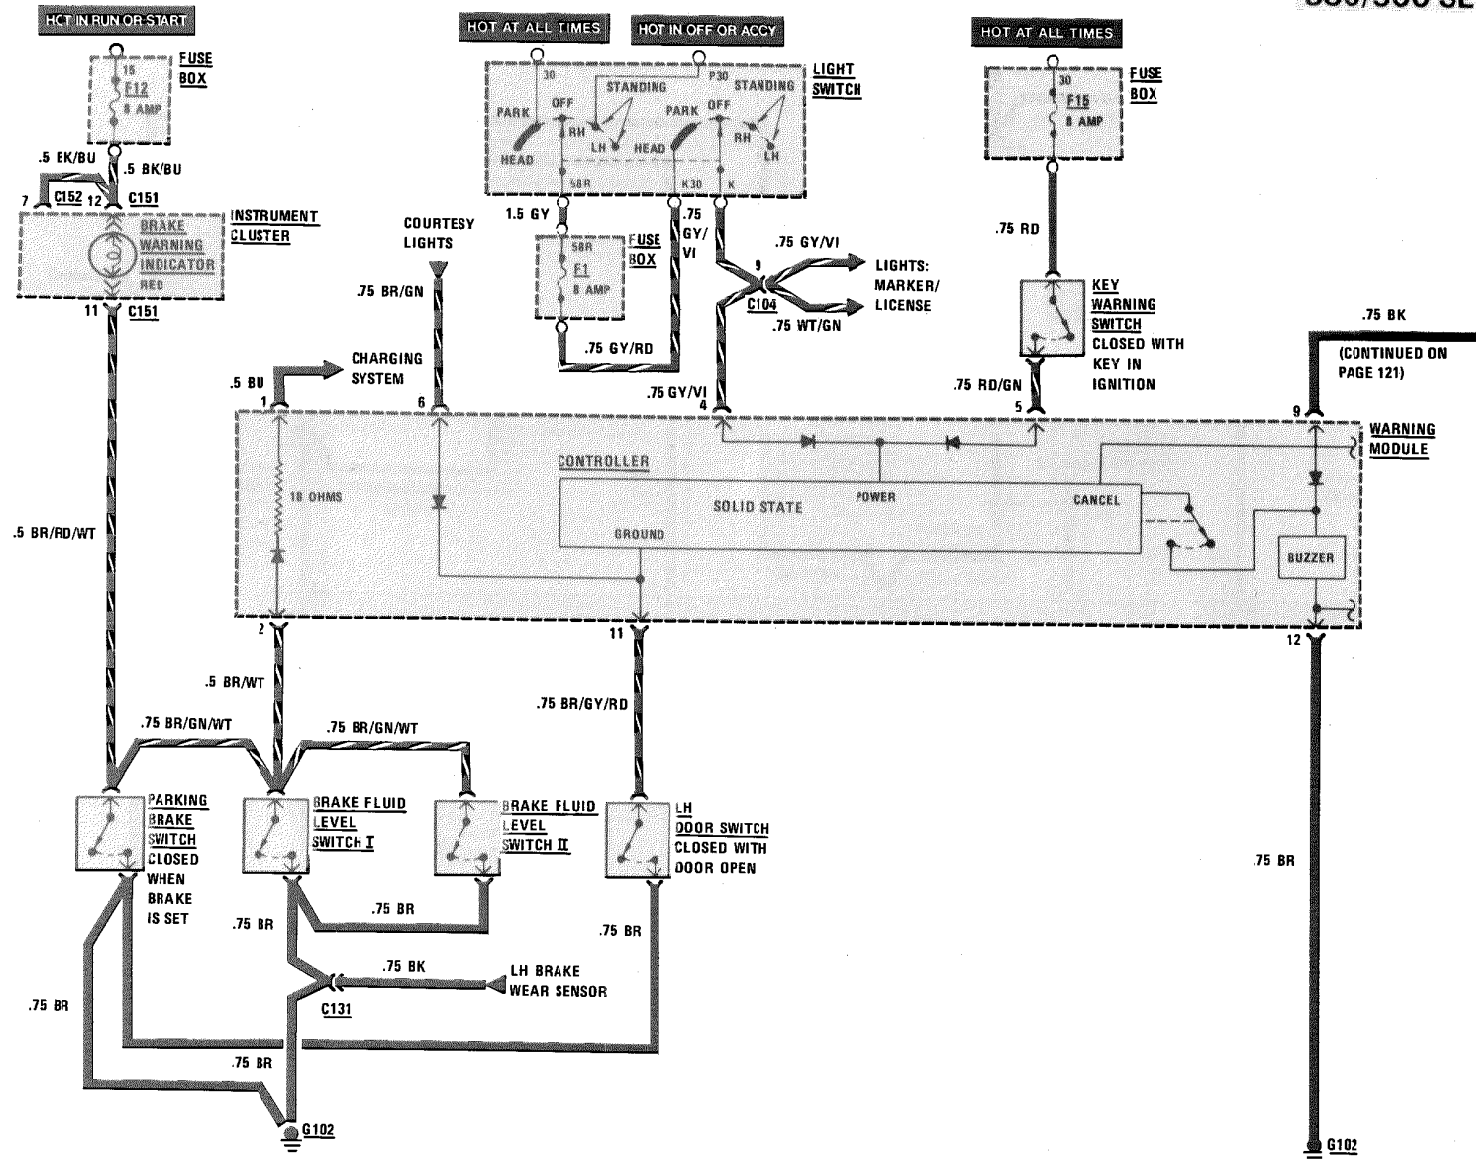

REVISIONS:


380/500 SEC

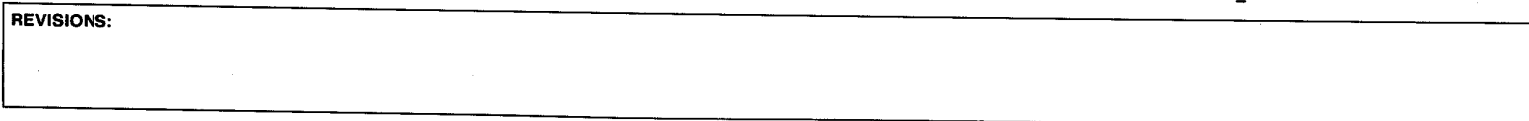

ILLUMINATION: INSTRUMENT CLUSTER/CENTER CONSOLE

(For Component Locations See Page 210)

MY 1983/
MY 1984/MY 1985

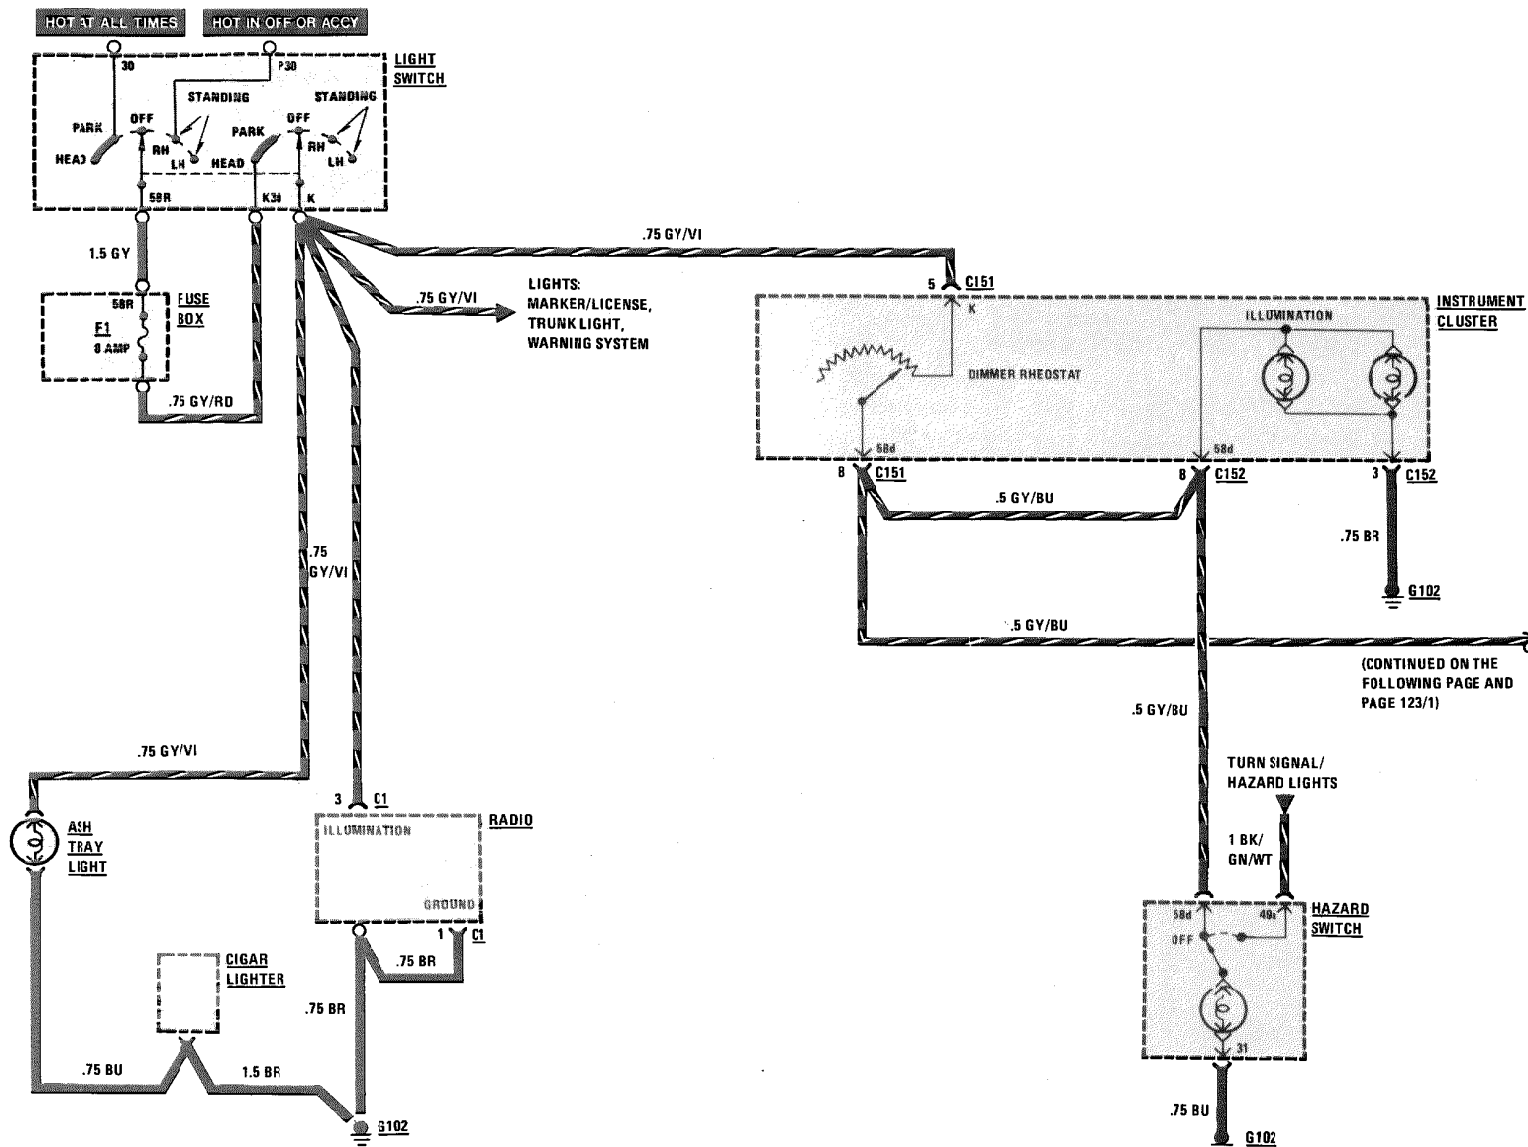

REVISIONS:


122

126.032/.033/.037/.043/.044

4/86

MY 1983

(For Component Locations See Page 210)

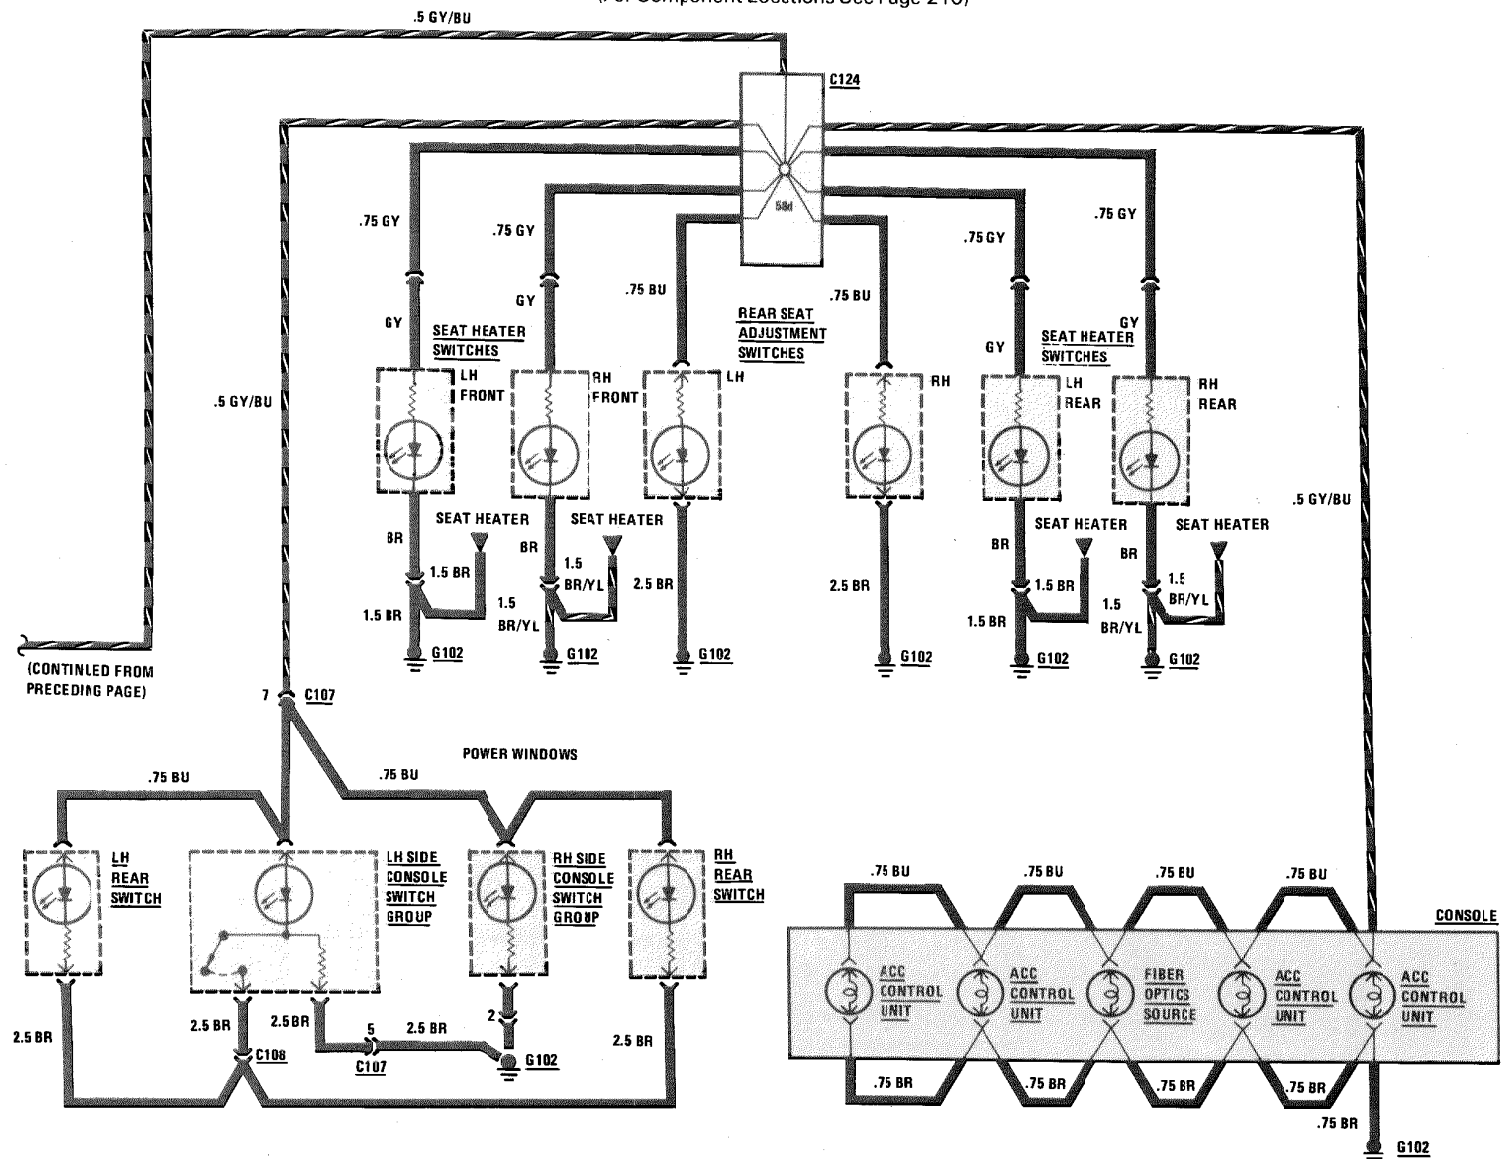


REVISIONS:

ILLUMINATION: INSTRUMENT CLUSTER/CENTER CONSOLE

MY 1984/1985

[For Component Locations See Page 210]

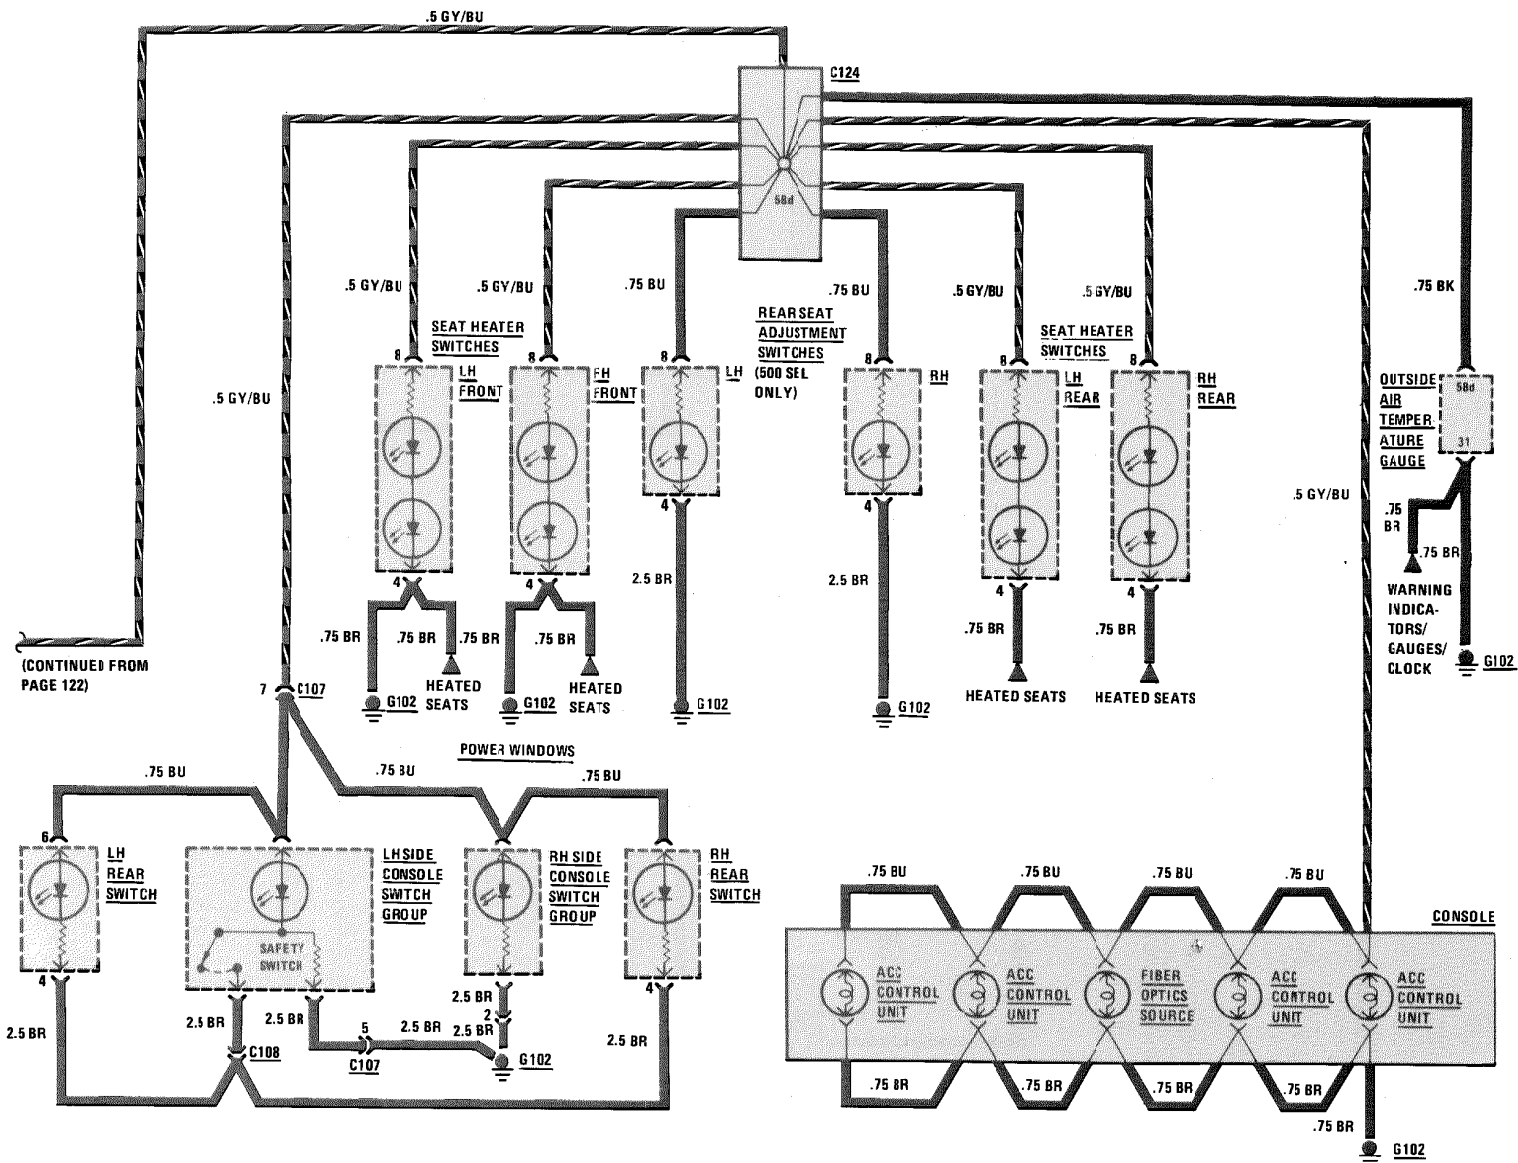

REVISIONS:

123/1

126.032/.037/.044

1/87

THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

123/2

1/87


BACKUP LIGHTS

(For Component Locations See Page 203)

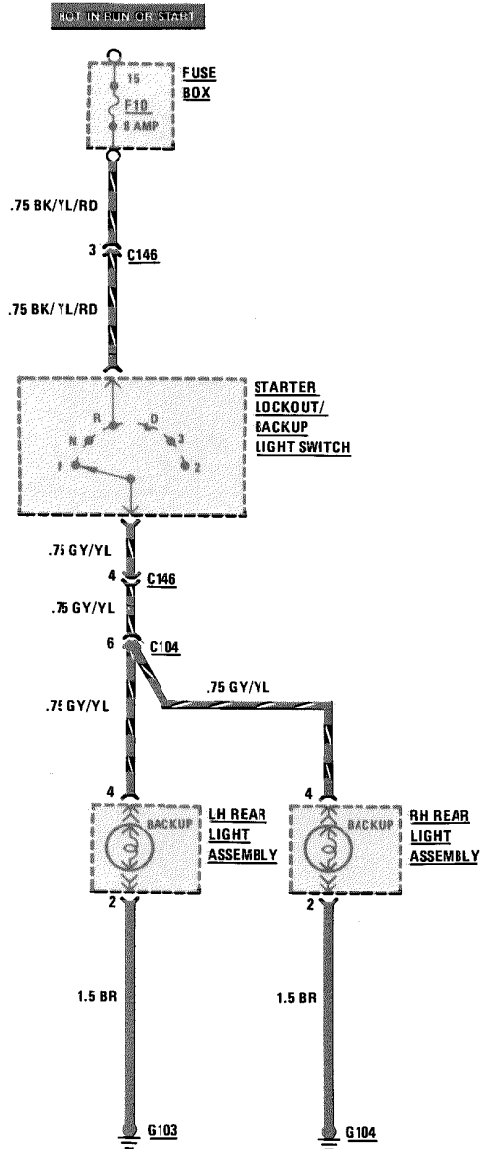

HORNS


(For Component Locations See Page 203)

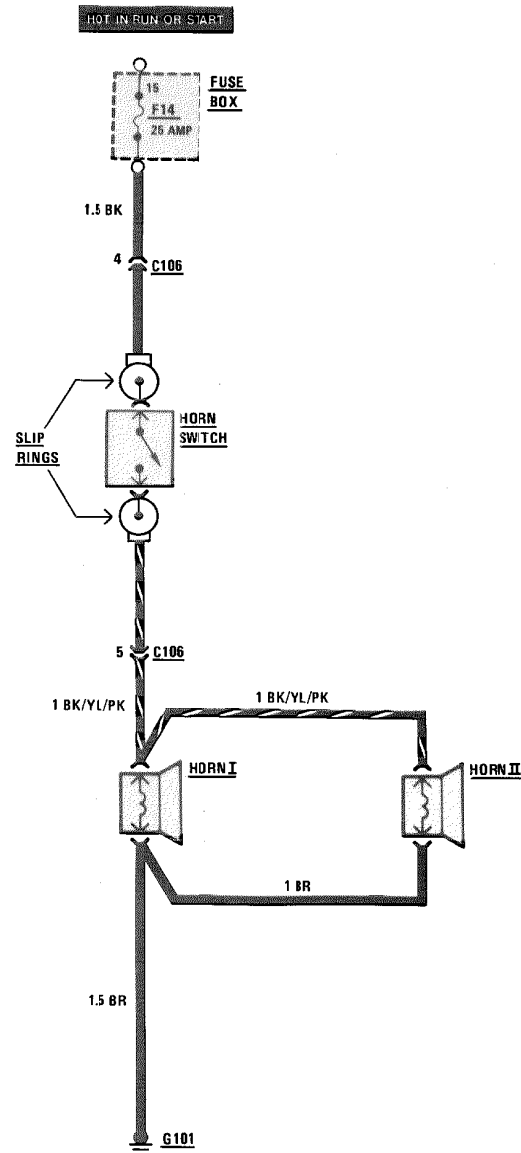

MY 1983/MY 1984/MY 1985

GLOVE BOX LIGHT


(For Component Locations See Page 203)

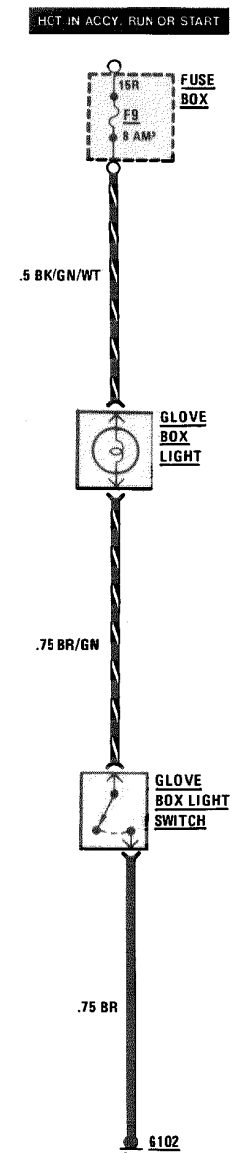

REVISIONS:

MY 1983/MY 1984/MY 1985

(For Component Locations See Page 219)

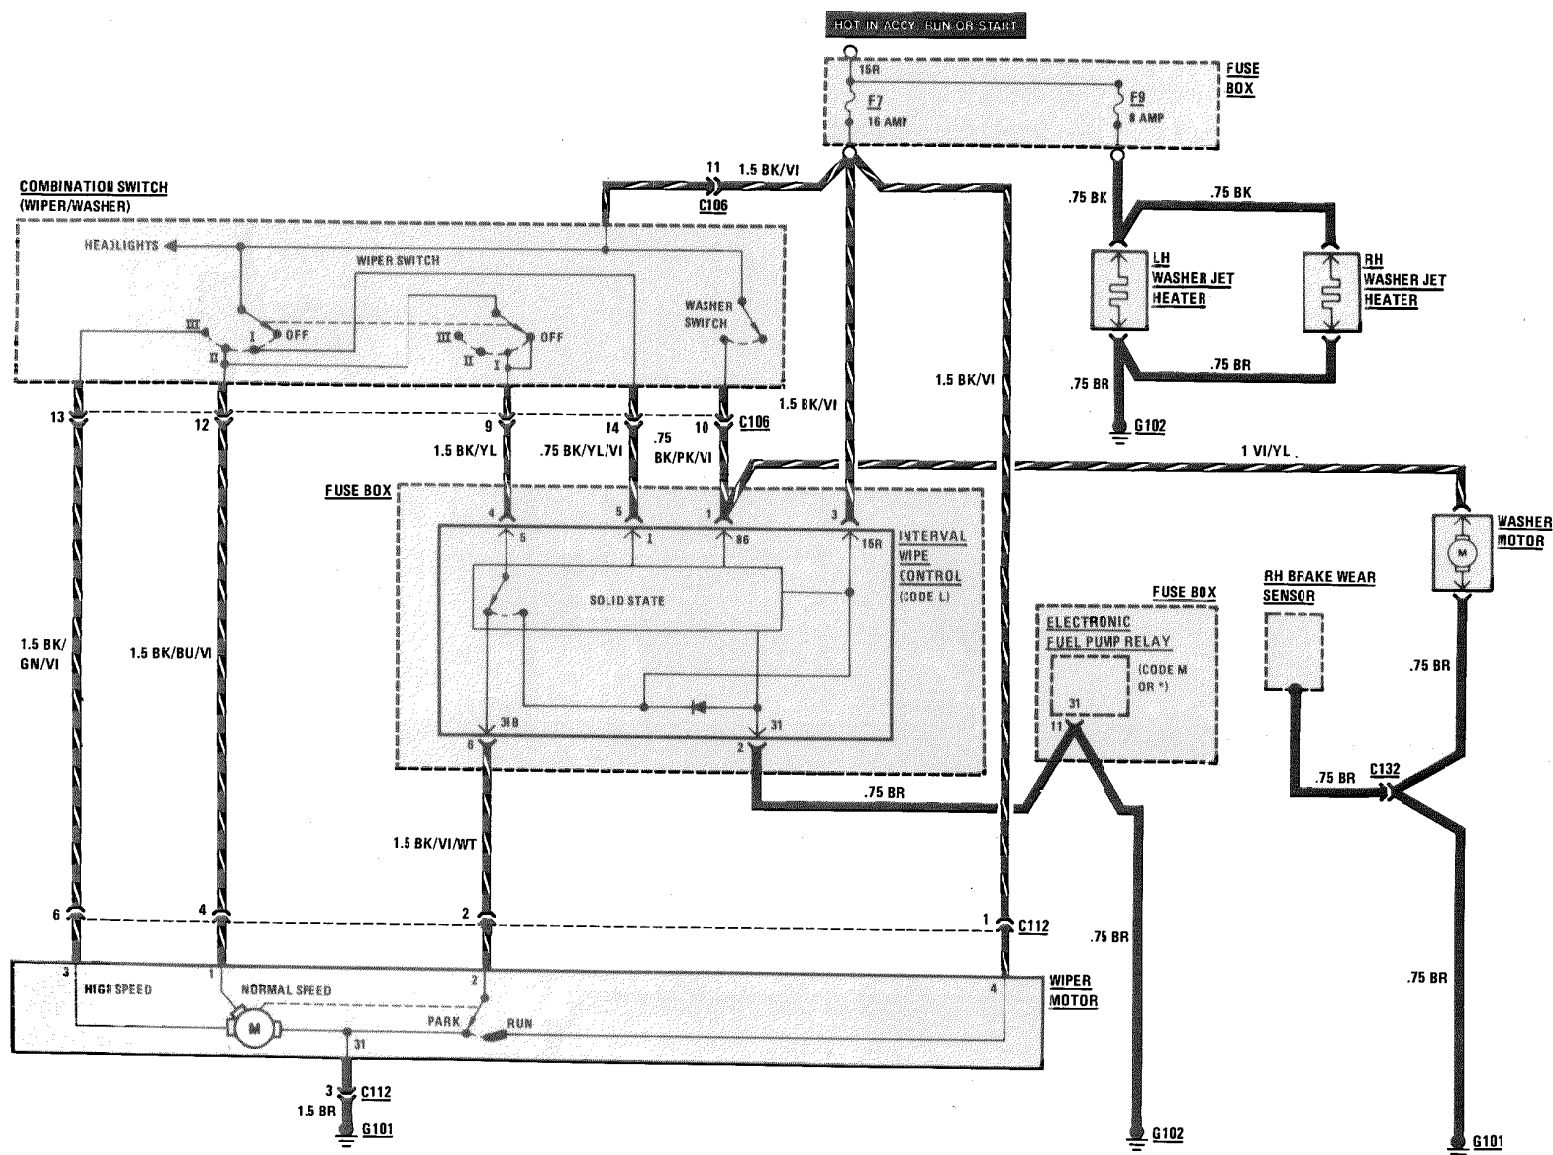


REVISIONS:

AUXILIARY FAN

(For Component Locations See Page 203)

MY 1983/MY 1984/MY 1985

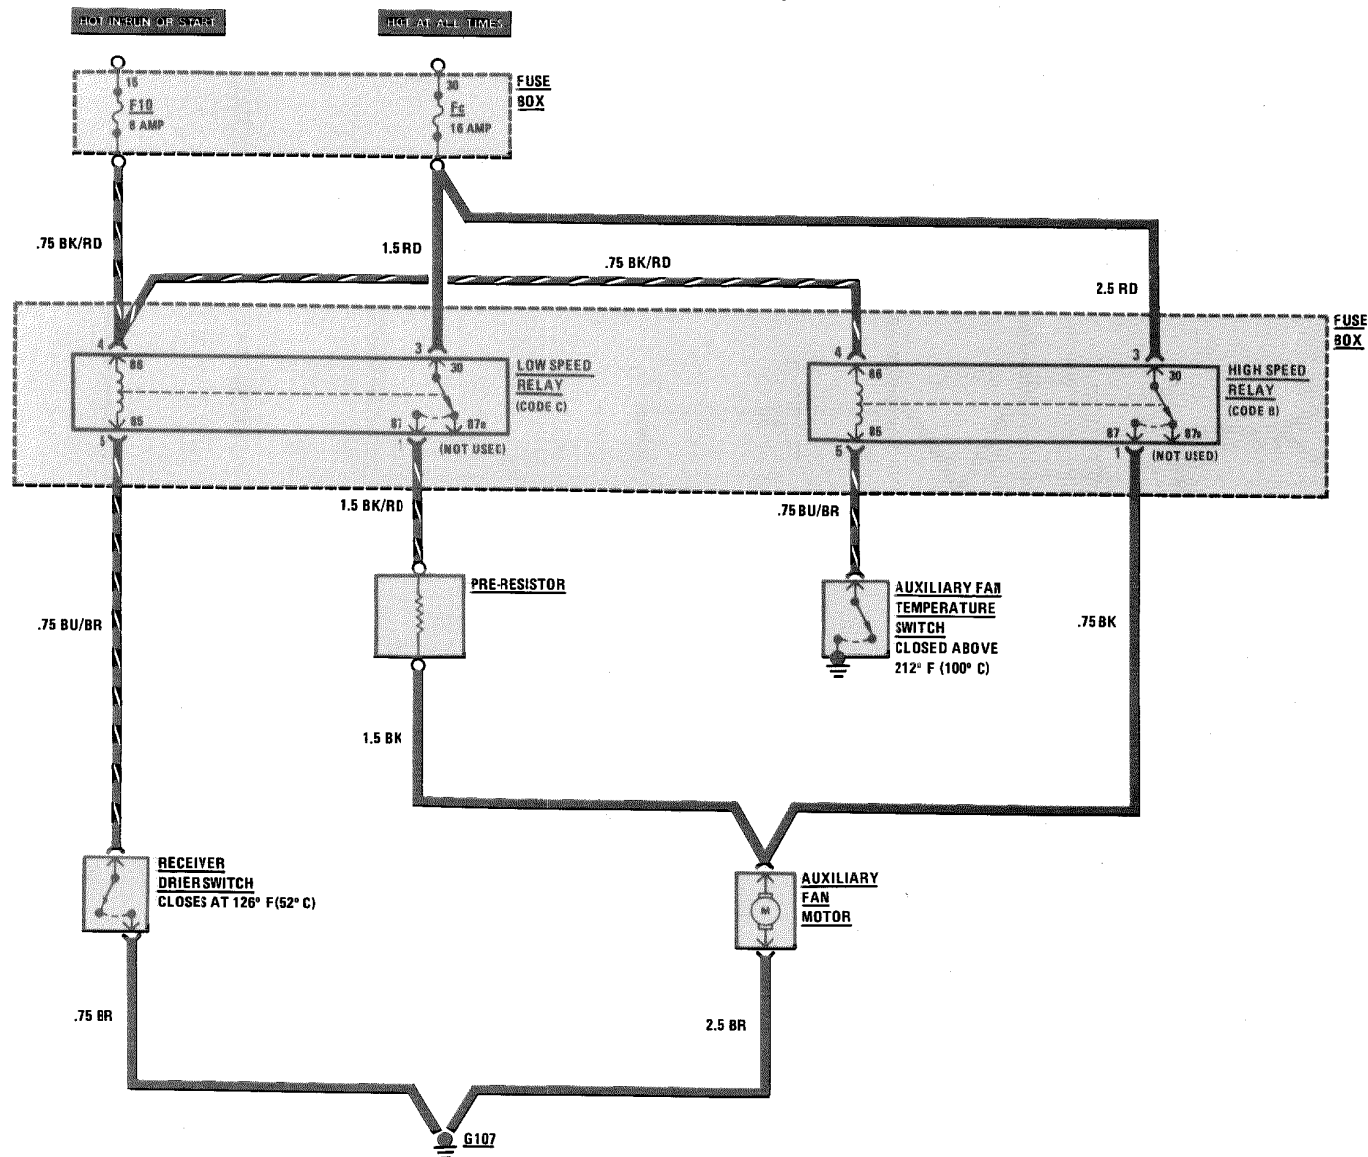


REVISIONS:

1187

126.032/.033/.037/.043/.044

 
271



SEE PAGE 301 FOR
INDEX TO SCHEMATICS
AND COMPONENT
LOCATIONS FOR ACC.

MY 1983/MY 1984/MY 1985

380 SE, 380/500 SEL

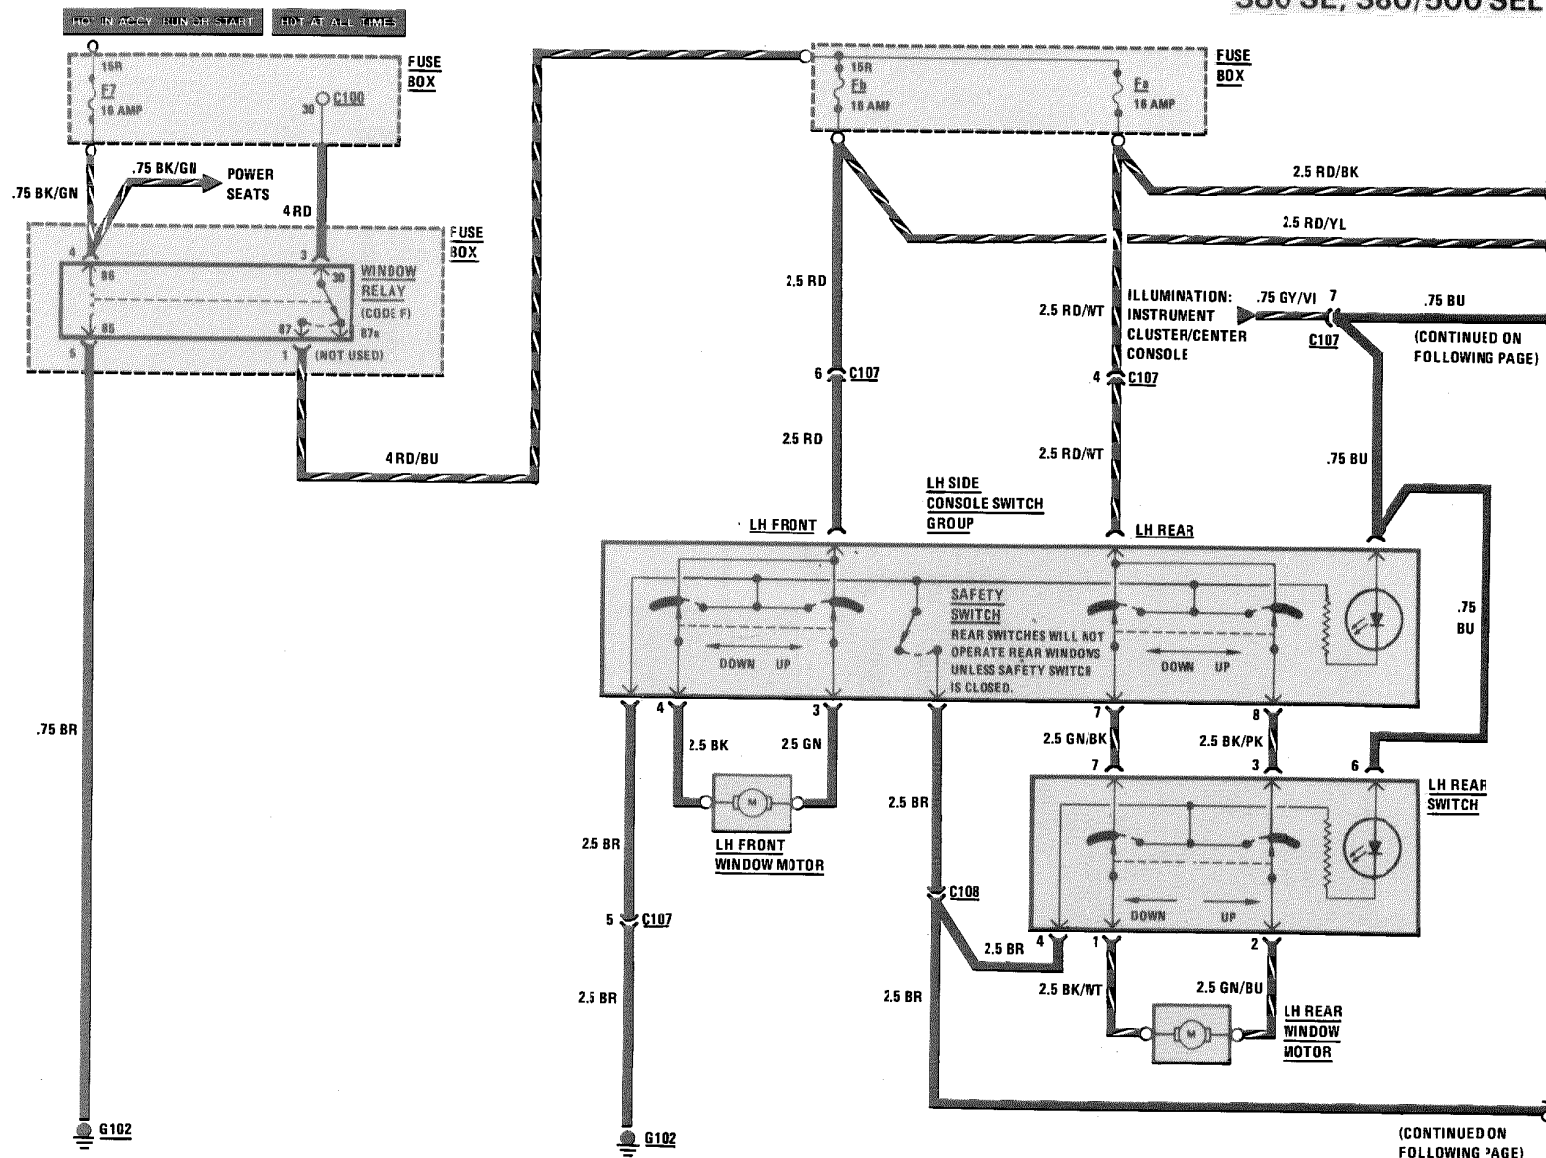

REVISIONS:

380 SE, 380/500 SEL

Wiring diagram for the right-hand side console switch group. The diagram shows the following components and connections:

- Terminal Block C107:**
 - Terminal 3: 2.5 RD/BK wire to RH REAR switch.
 - Terminal 1: 2.5 RD/YL wire to RH REAR switch.
 - Terminal 2: 2.5 BR wire to G102.
- Terminal Block G102:**
 - Terminal 2: 2.5 BR wire to RH REAR switch.
 - Terminal 1: 2.5 GN/YL wire to RH REAR window motor.
 - Terminal 3: 2.5 BK/WT wire to RH REAR switch.
- Switches:**
 - RH REAR SWITCH:** Controls RH REAR window motor (2.5 GN/YL) and RH REAR window (2.5 BK/WT).
 - RH FRONT SWITCH:** Controls RH FRONT window motor (2.5 BK/WT) and RH FRONT window (2.5 GN/RD).
- Wires:**
 - 2.5 RD/BK, 2.5 RD/YL, 2.5 BR, 2.5 GN/YL, 2.5 BK/WT, 2.5 GN/RD, 2.5 GN/WT.

REVISIONS:

380/500 SEC


HOT IN ACCY. RUN OR START HOT AT ALL TIMES



REVISIONS:

POWER WINDOWS

(For Component Locations See Page 212)

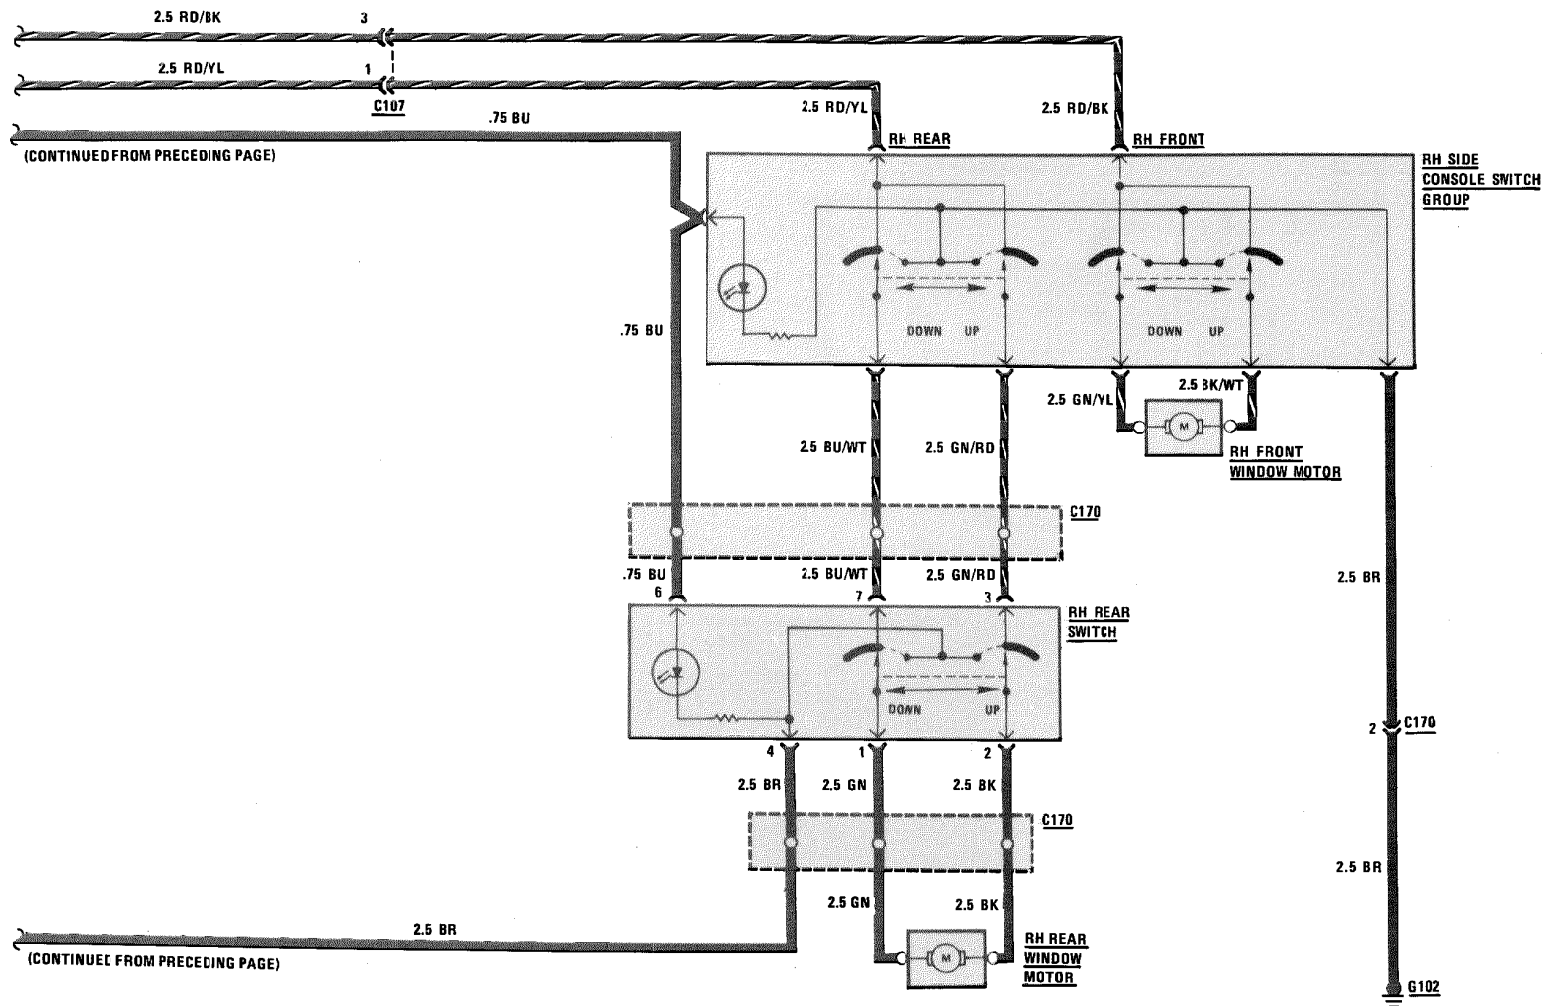MY 1983/MY 1984/MY 1985**380/500 SEC**

REVISIONS:


126.043/.044

131

POWER SEATS

(For Component Locations See Page 212)

MY 1983

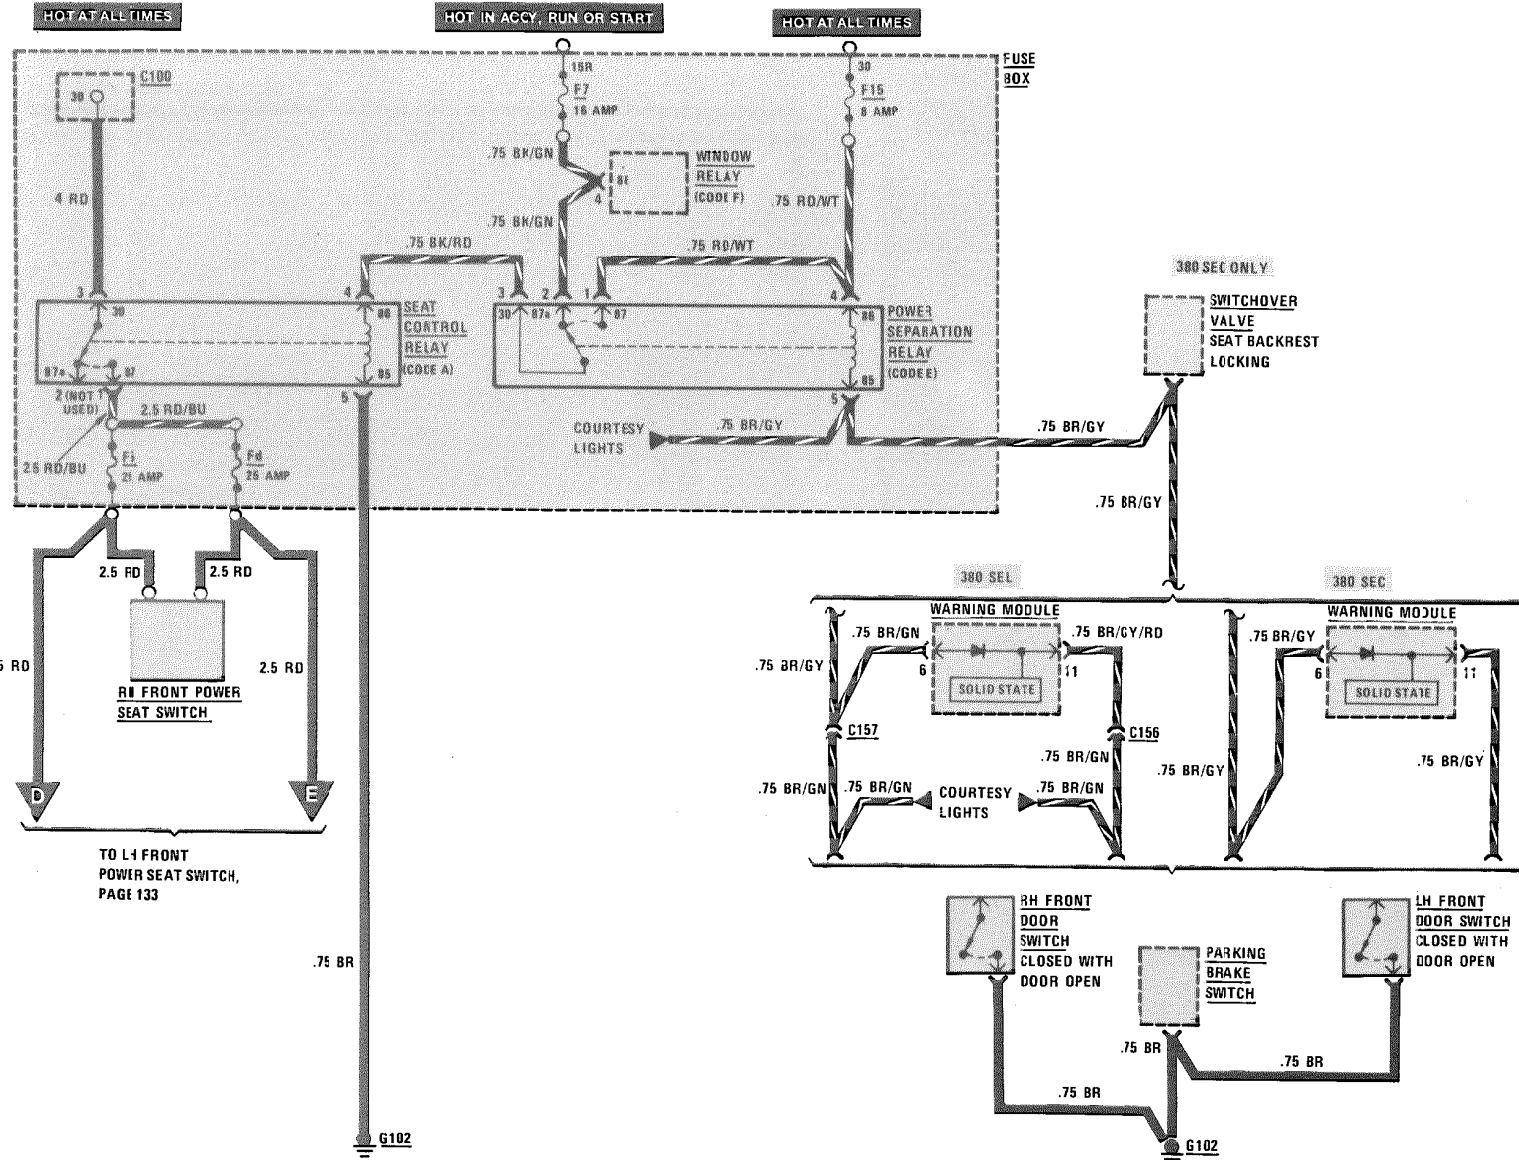


REVISIONS:

POWER SEATS

(For Component Locations See Page 212)

MY 1983

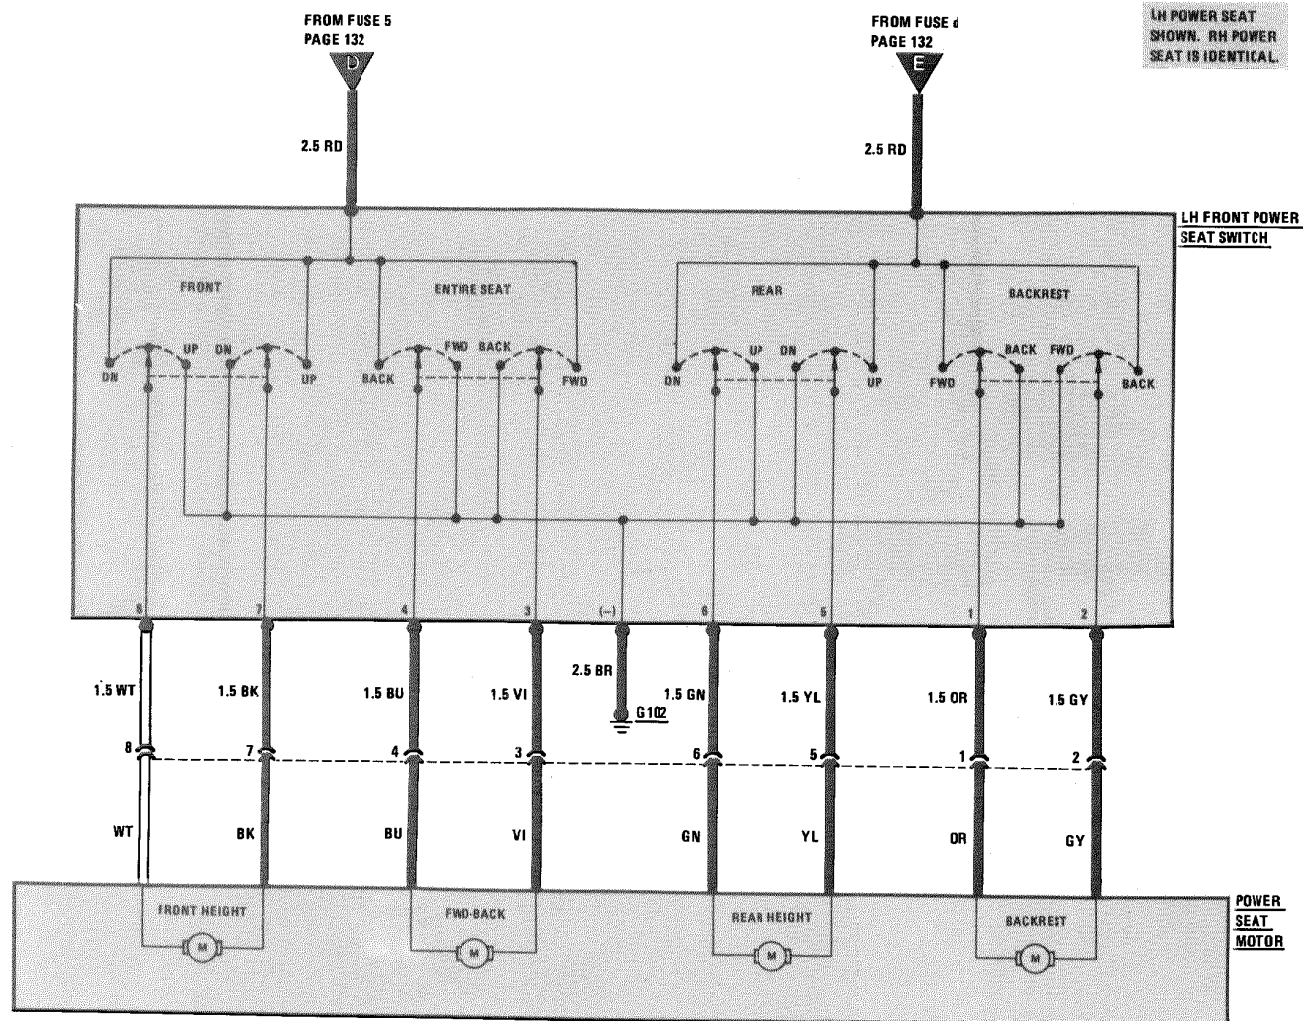

126.033/.043


133

REVISIONS:

RH POWER SEAT

(For Component Locations See Page 212)

MY 1984 / MY 1985

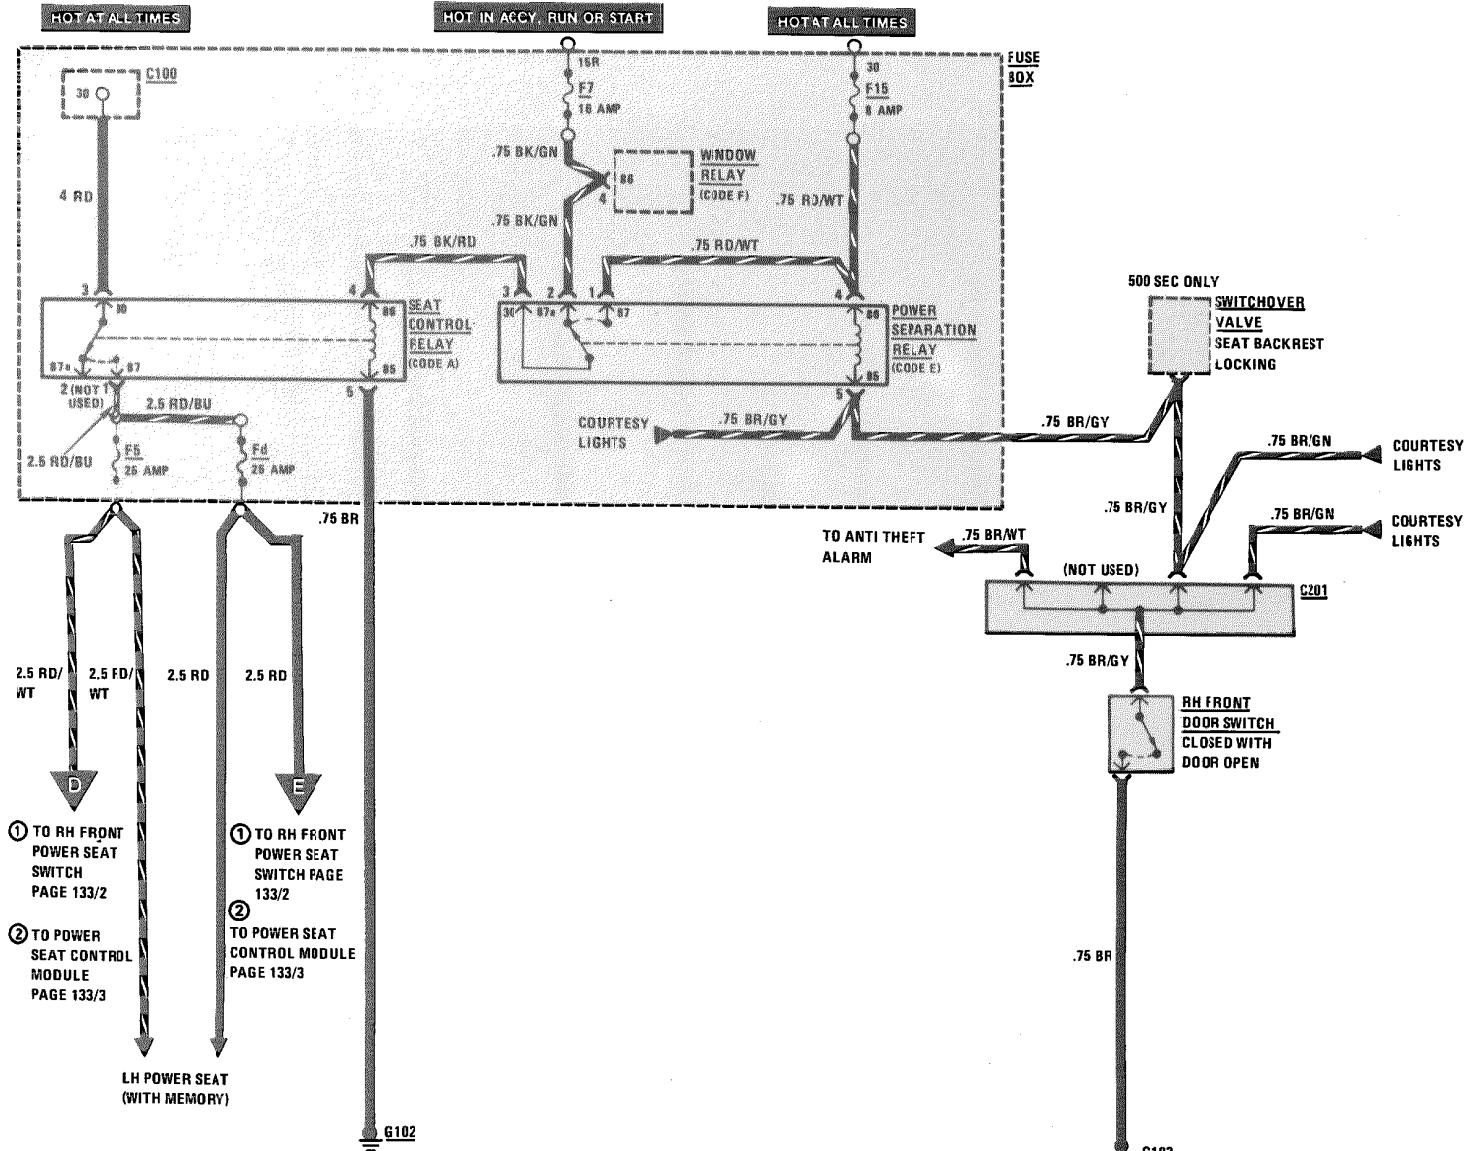

REVISIONS: ① AS OF MODEL YEAR 1984
② AS OF MODEL YEAR 1985


133/1

126.032/.037/.044

4/86

(For Component Locations See Page 212)

MY 1984/MY 1985

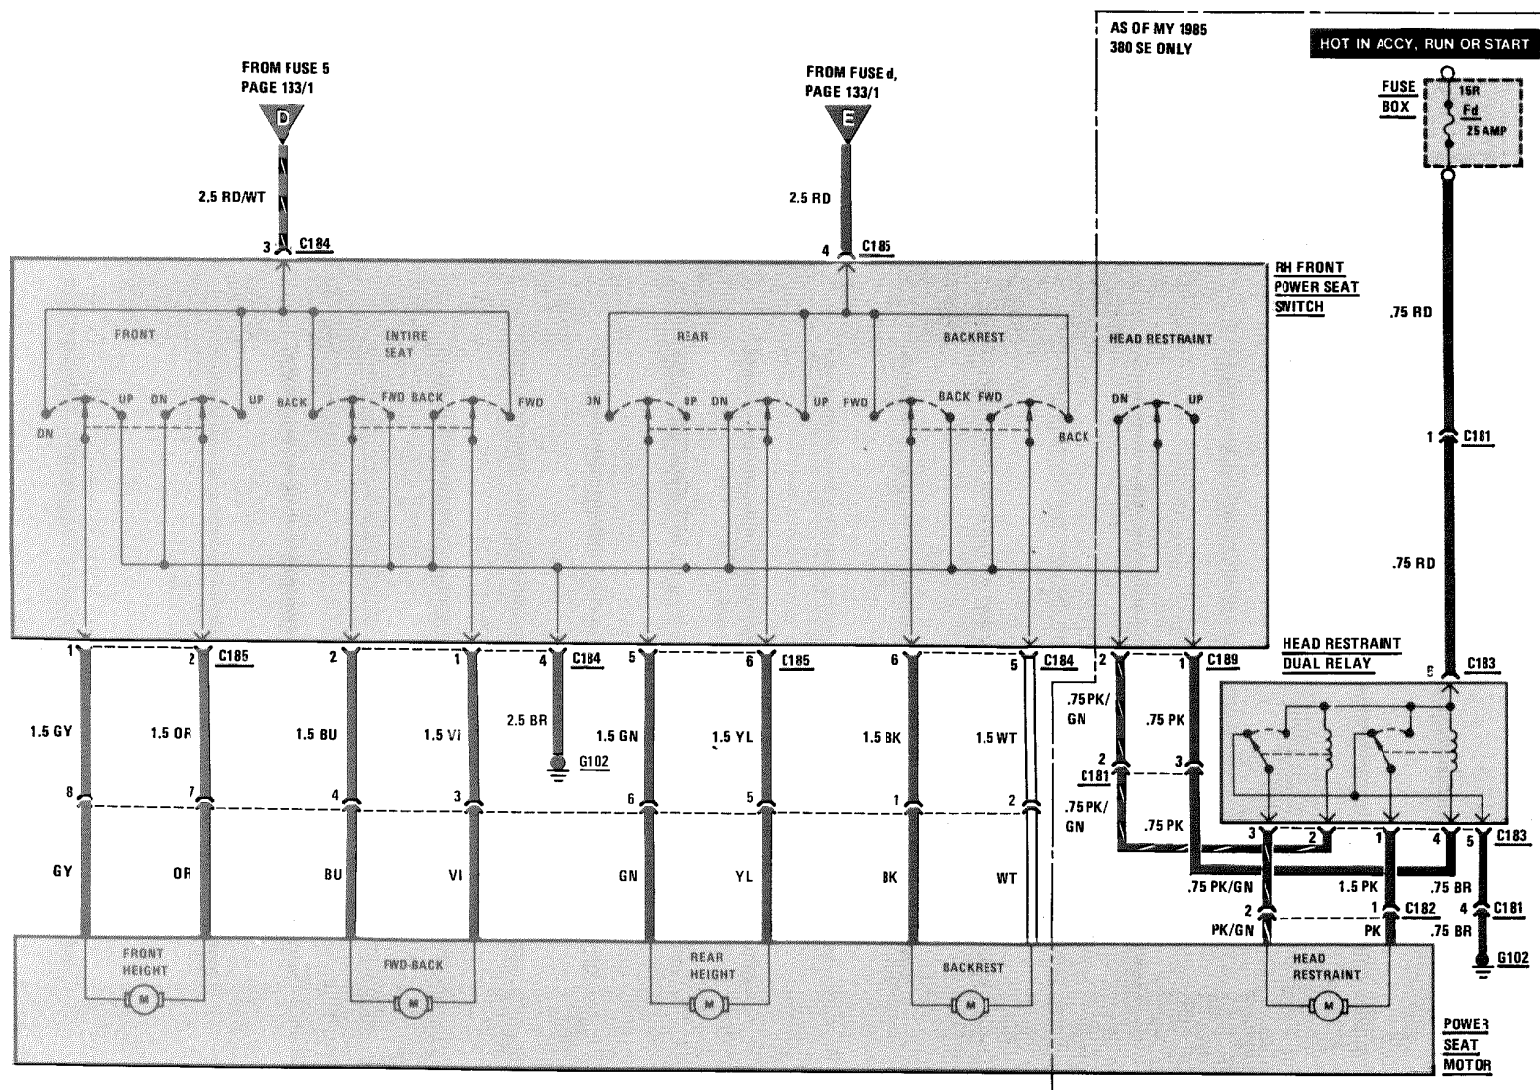


REVISIONS:

RH POWER SEAT (WITH MEMORY)

(For Component Locations See Page 212)

MY 1985

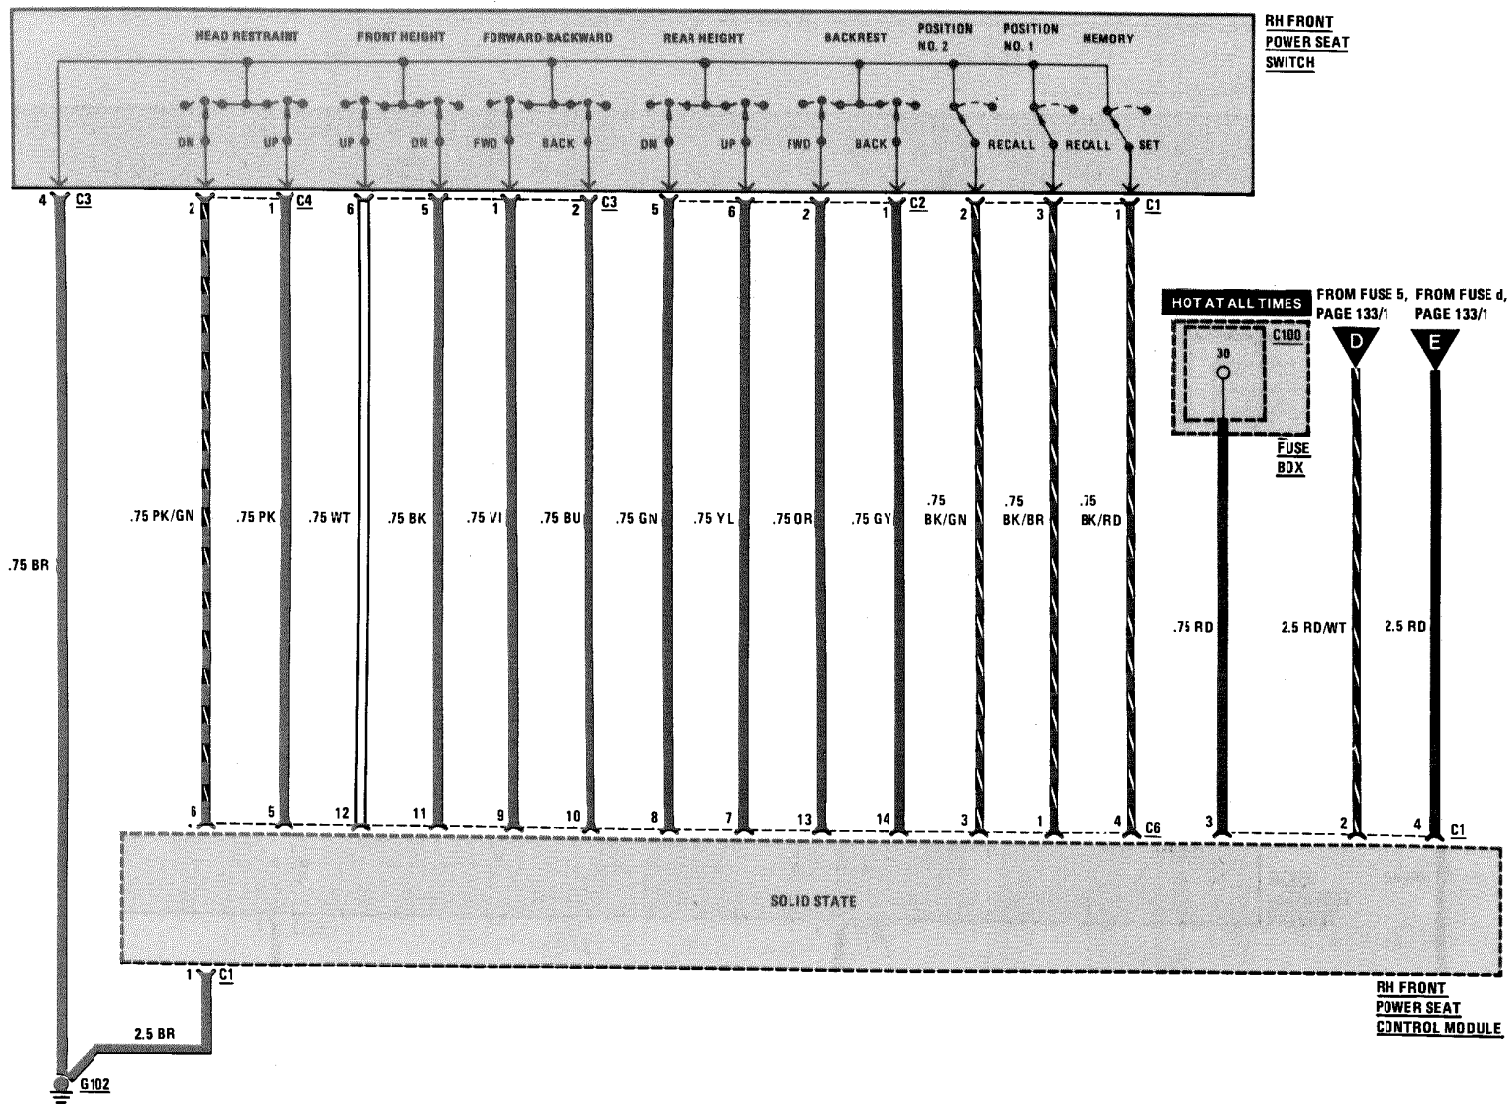

REVISIONS:

133/3


126.032/.037/.044

4/86

RH POWER SEAT (WITH MEMORY)

(For Component Locations See Page 212)

MY 1985

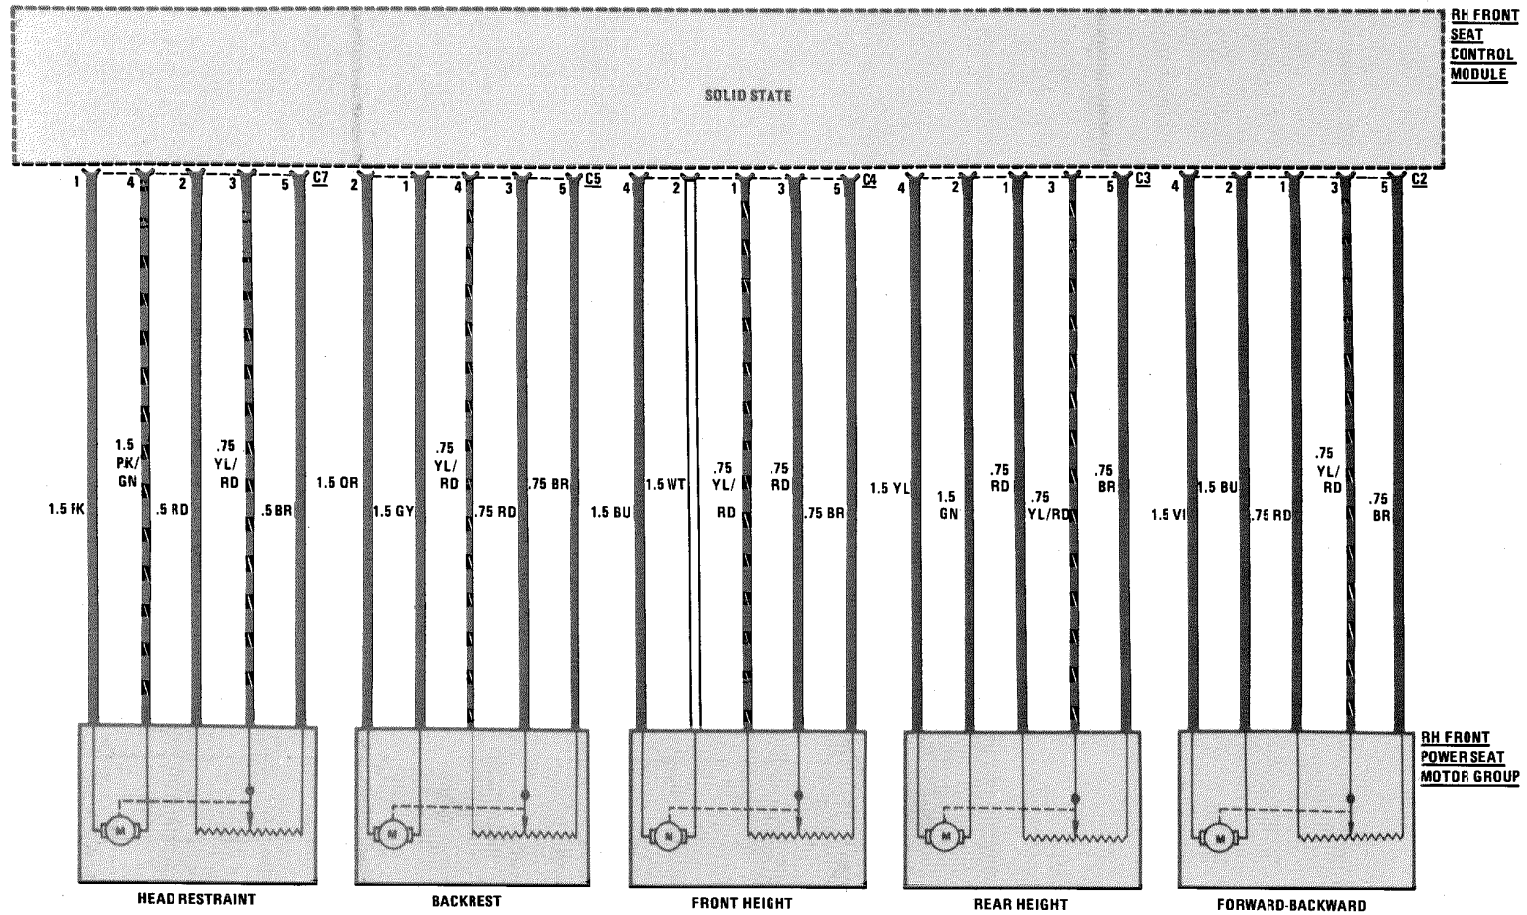

126.032/.037/.044


133/4

REVISIONS:

132/2

126.120


4/86

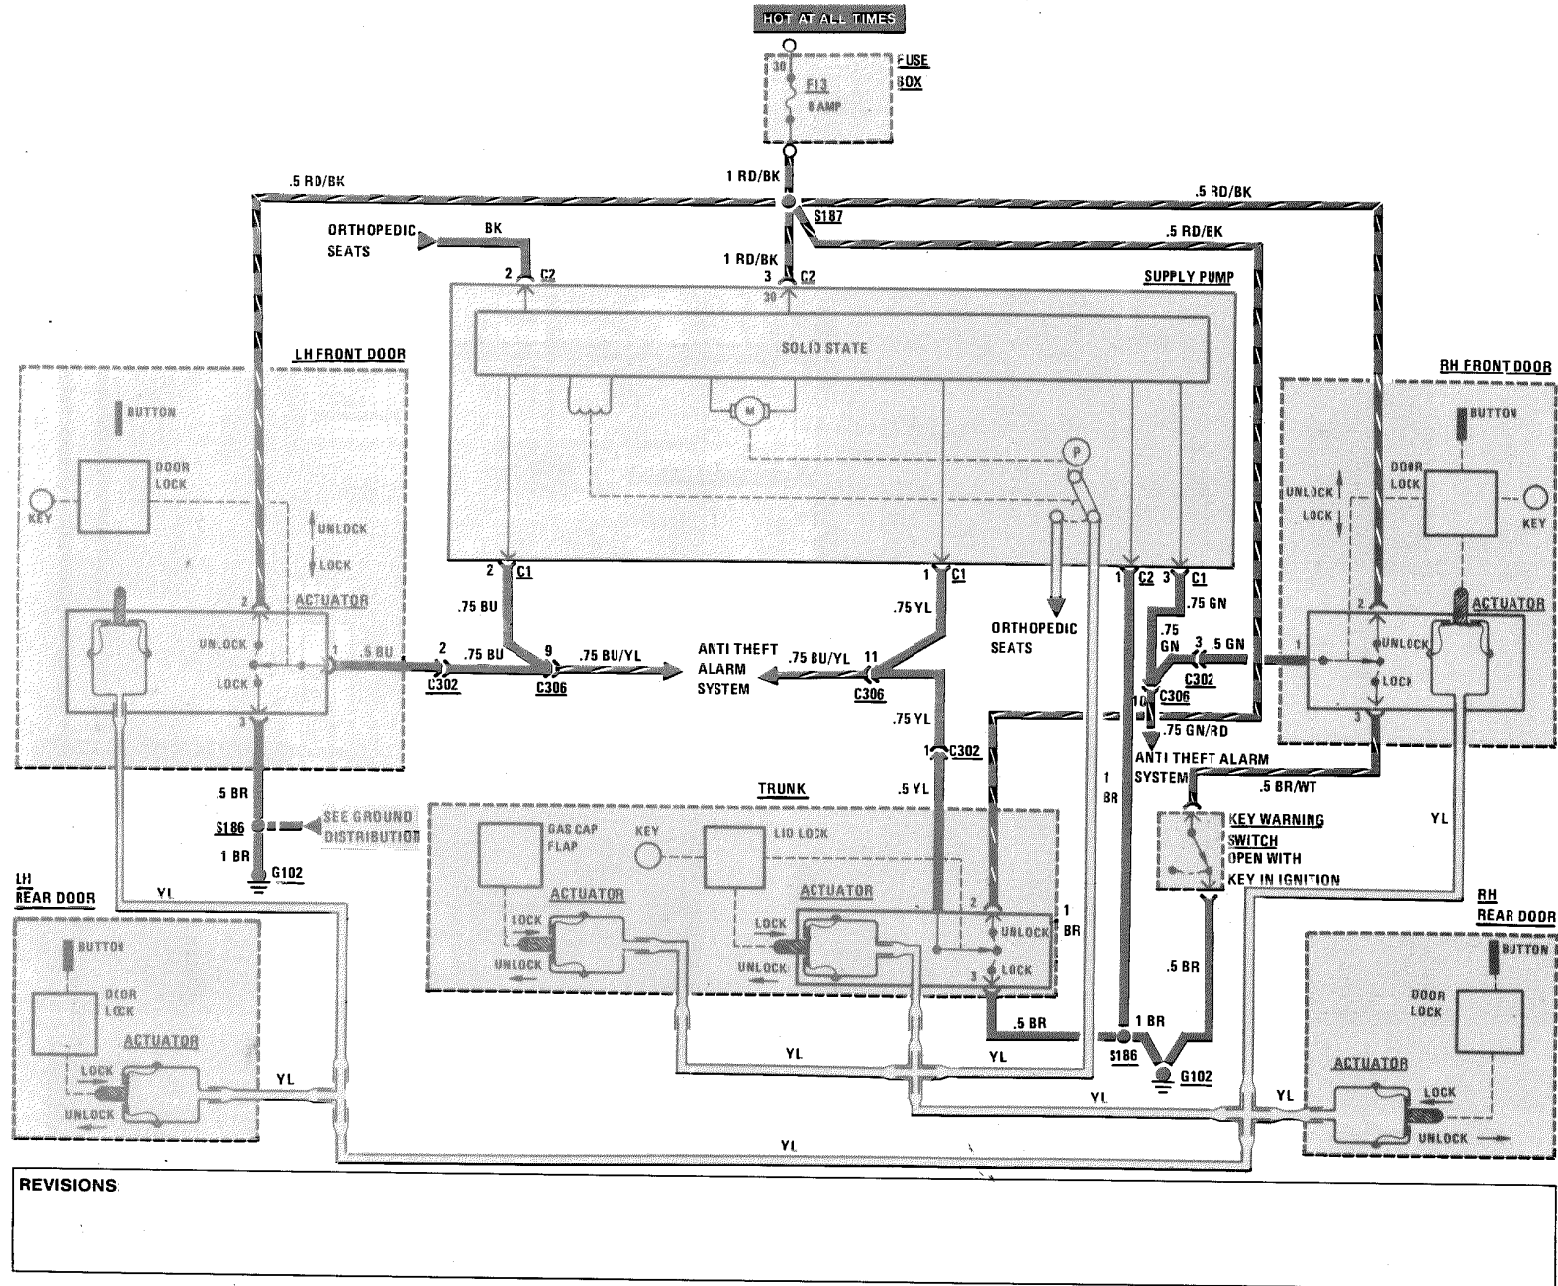

LH POWER SEAT (WITH MEMORY)

MY 1984

(For Component Locations See Page 212)

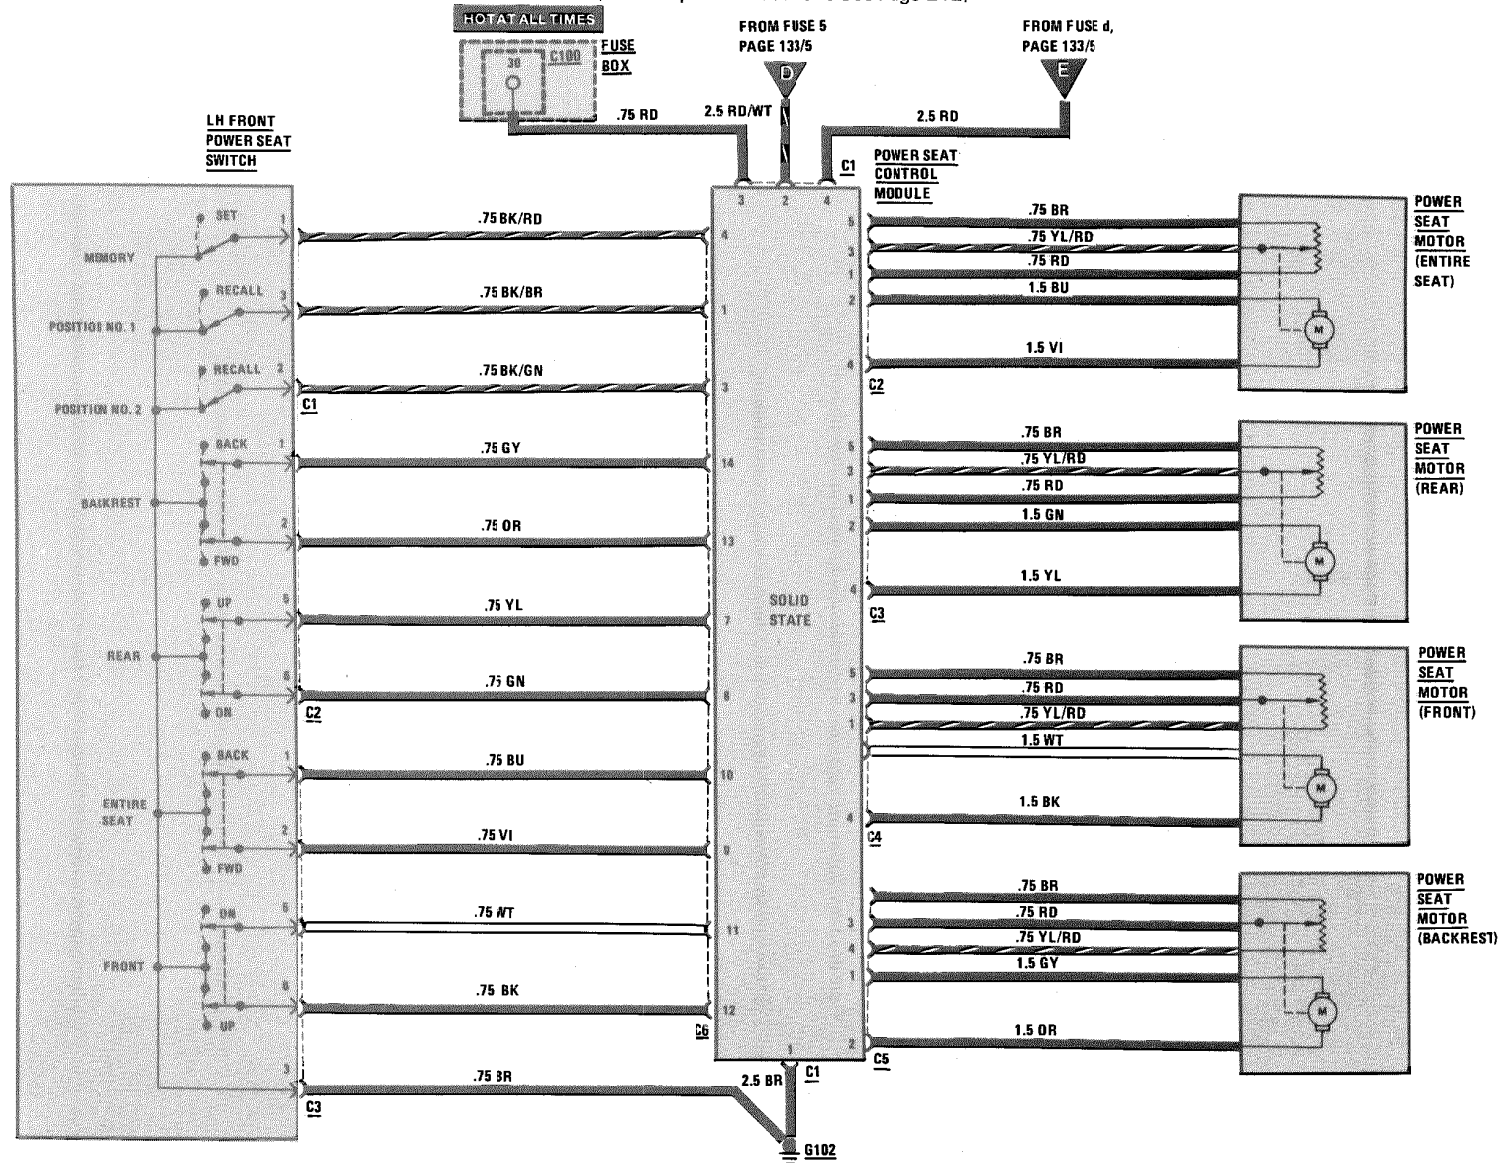


REVISIONS:

LH POWER SEAT (WITH MEMORY)

(For Component Locations See Page 212)

MY 1985

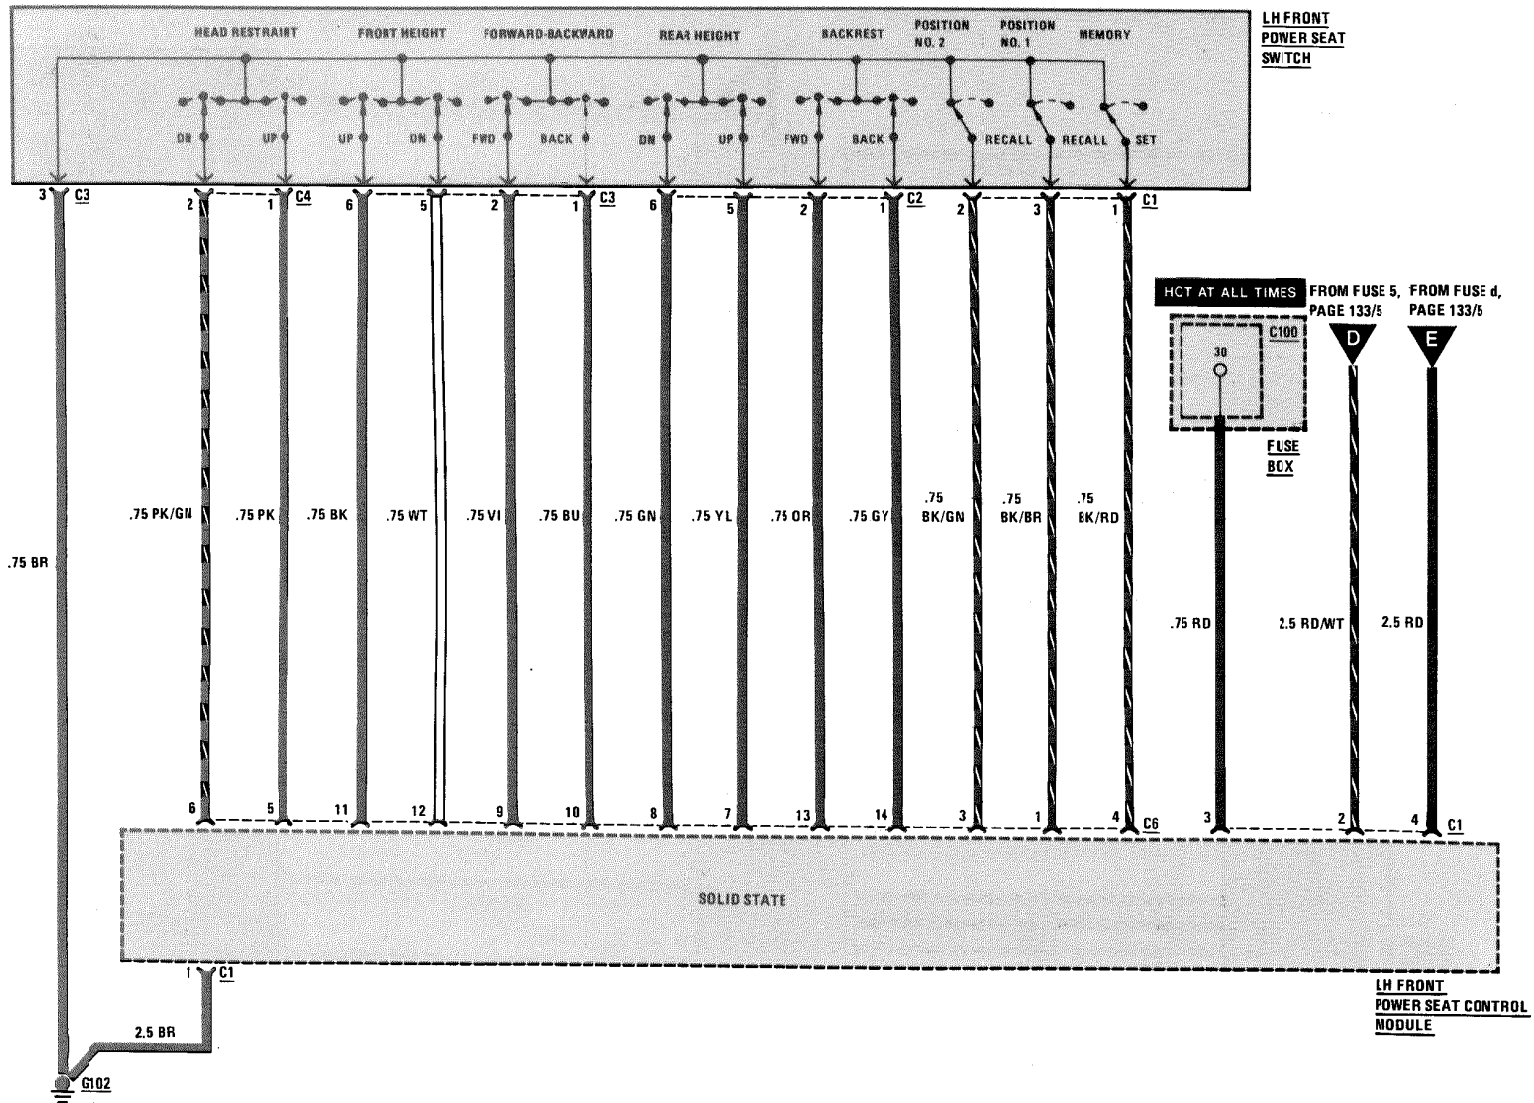

133/7


126.032/.037/.044

4/86

LH POWER SEAT (WITH MEMORY)

(For Component Locations See Page 212)

MY 1985

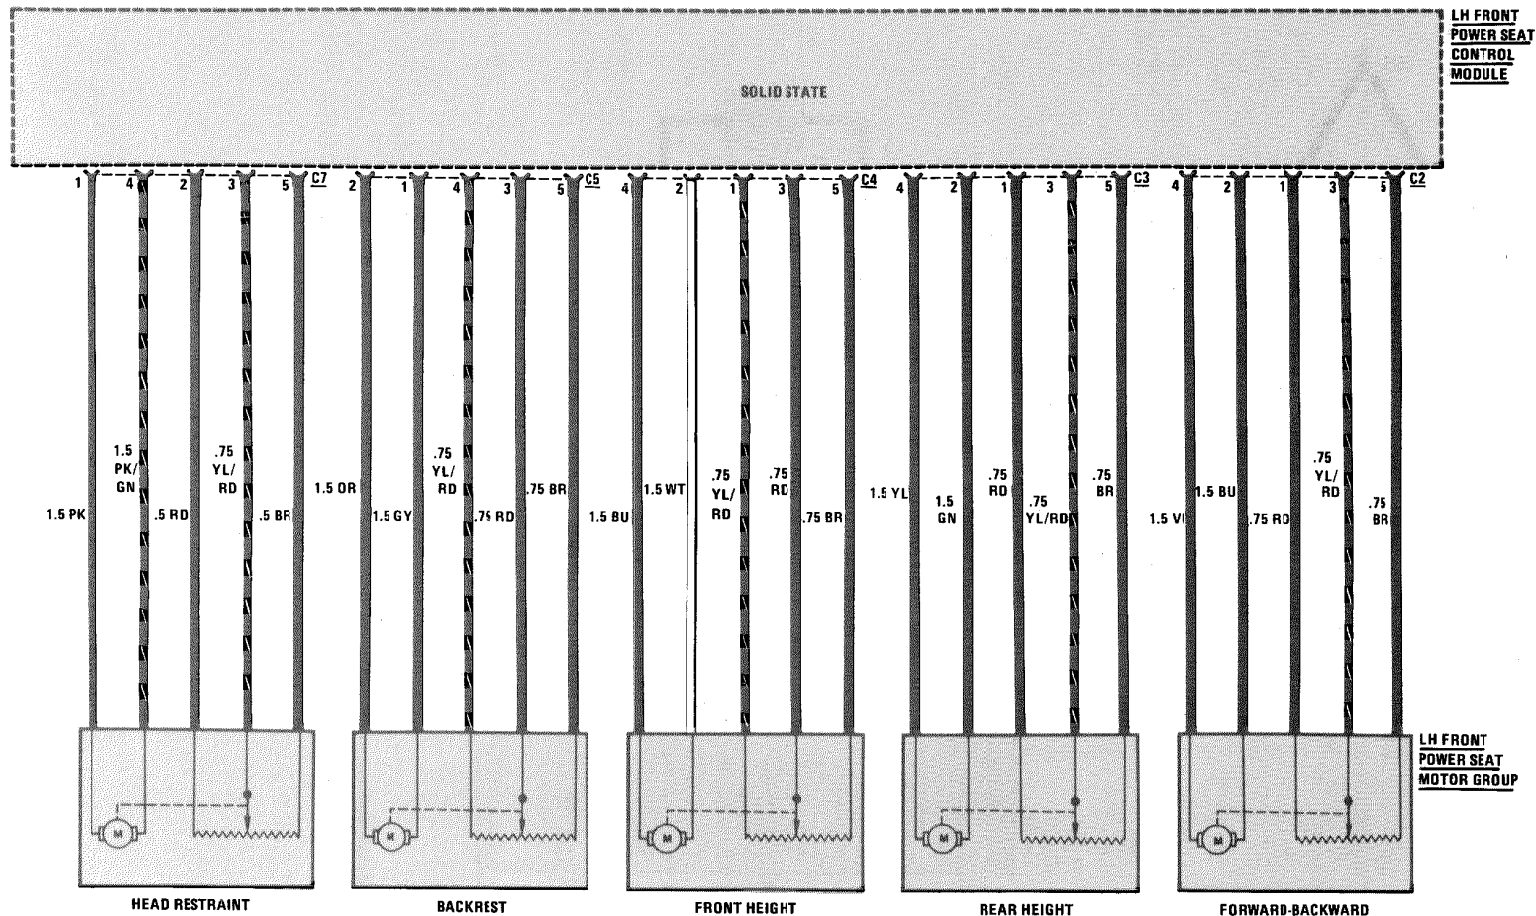

126.032/.037/.044

133/8


REVISIONS:

REAR SEAT ADJUSTMENT

(For Component Locations See Page 213)

MY 1983/MY 1984/MY 1985

380/500 SEL

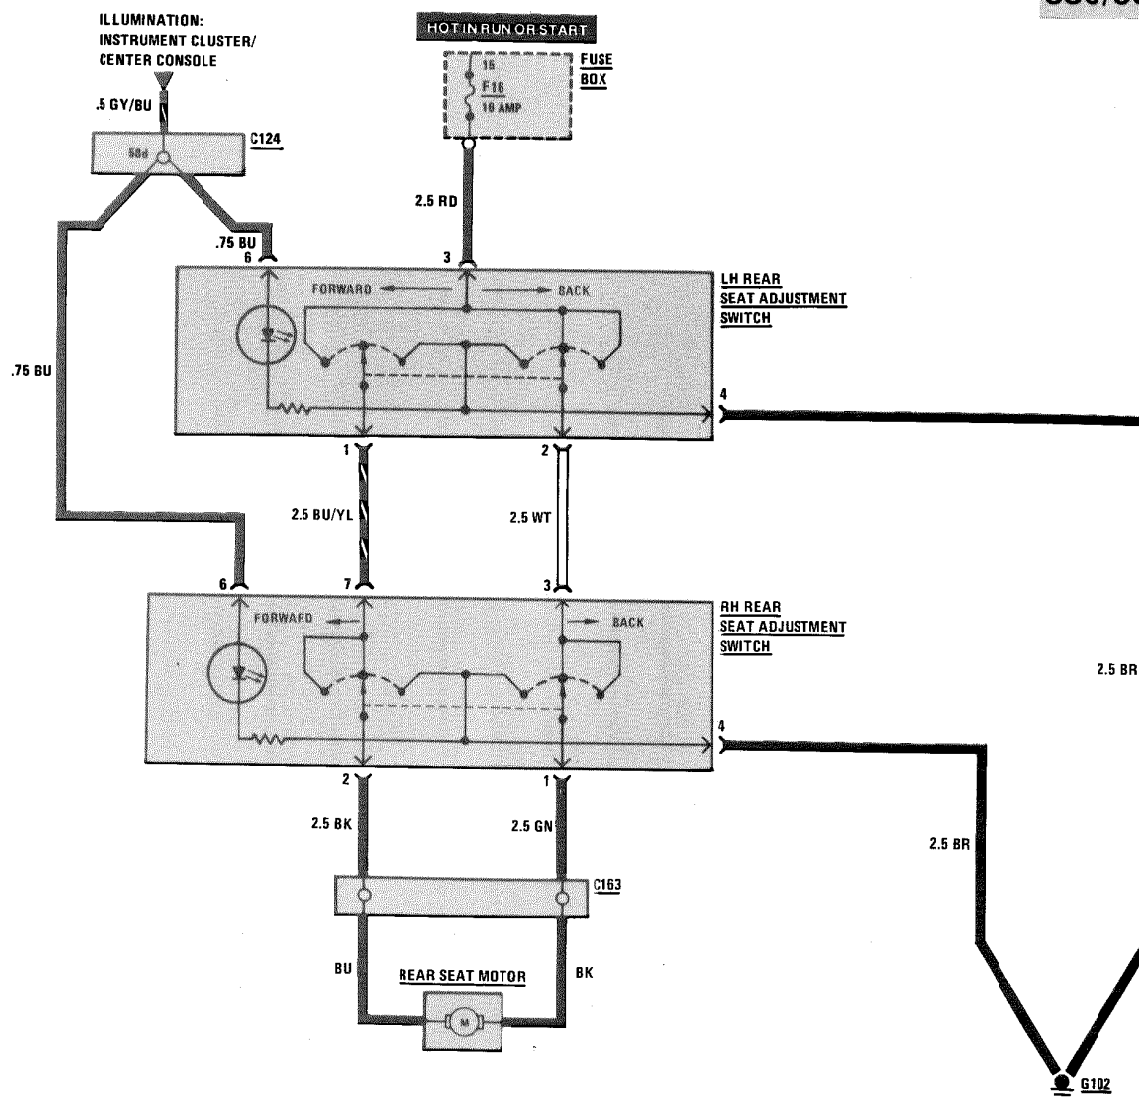


REVISIONS:

ORTHOPEDIC SEATS

(For Component Locations See Page 211)

MY 1984 / MY 1985

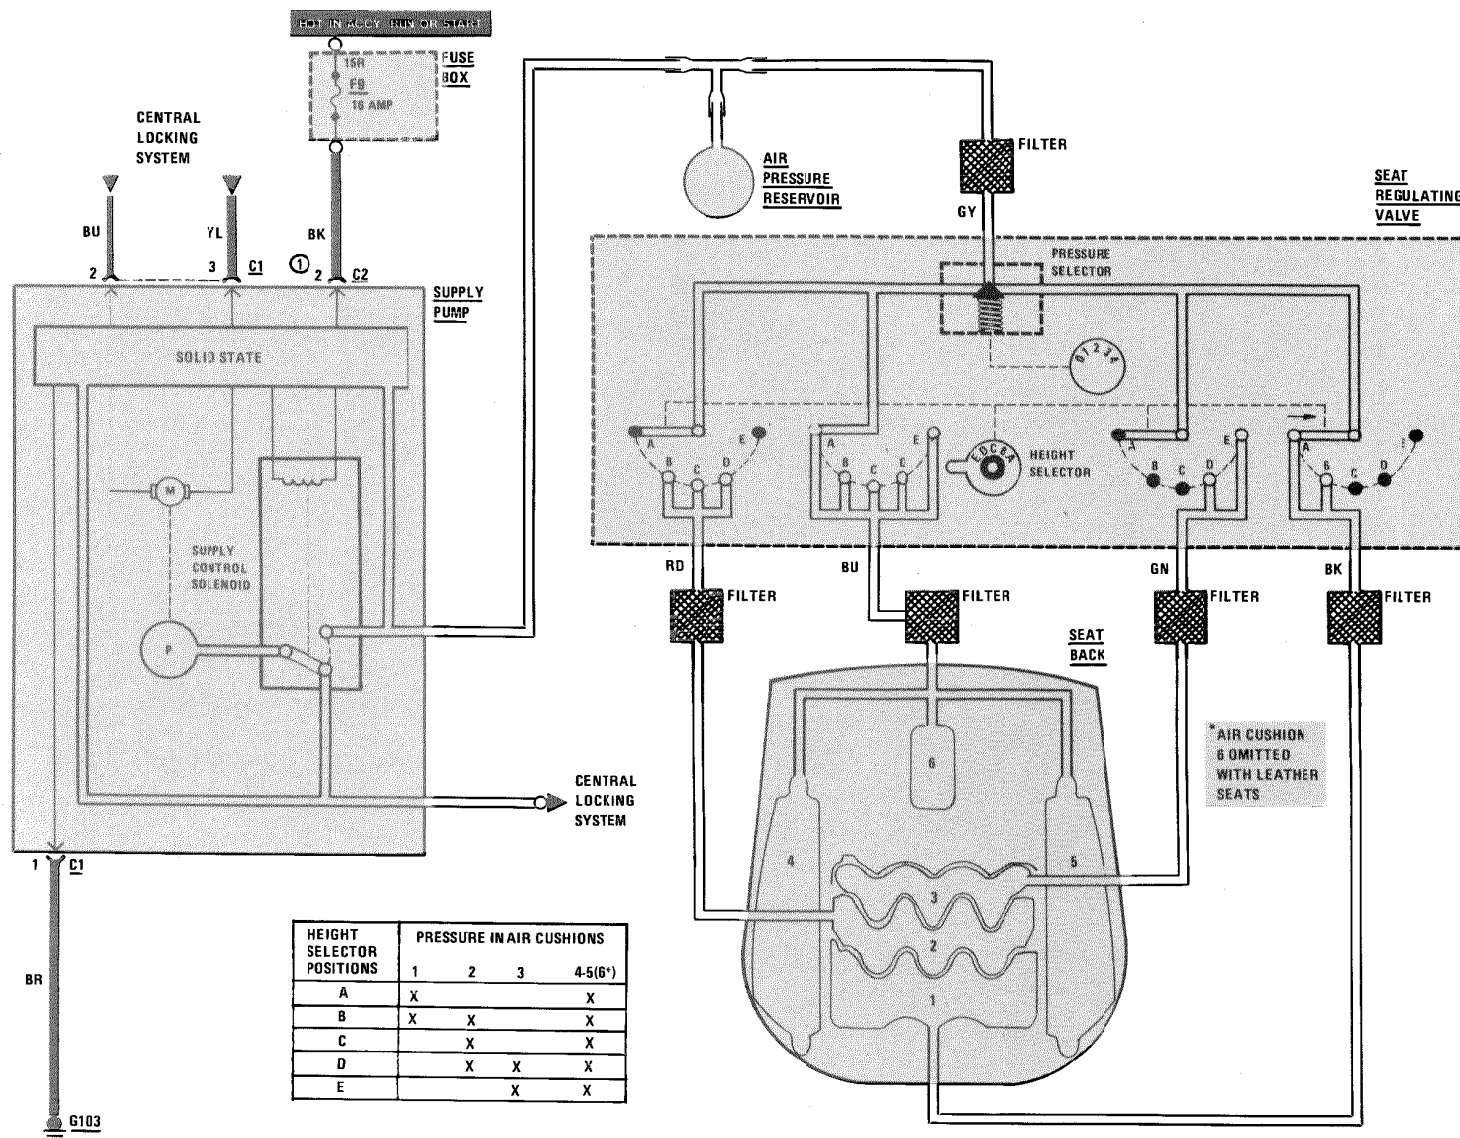

REVISIONS: ① AS OF MODEL YEAR 1985


THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

REAR DEFOGGER/SLIDING ROOF

(For Component Locations See Page 213)

MY 1983/MY 1984/MY 1985

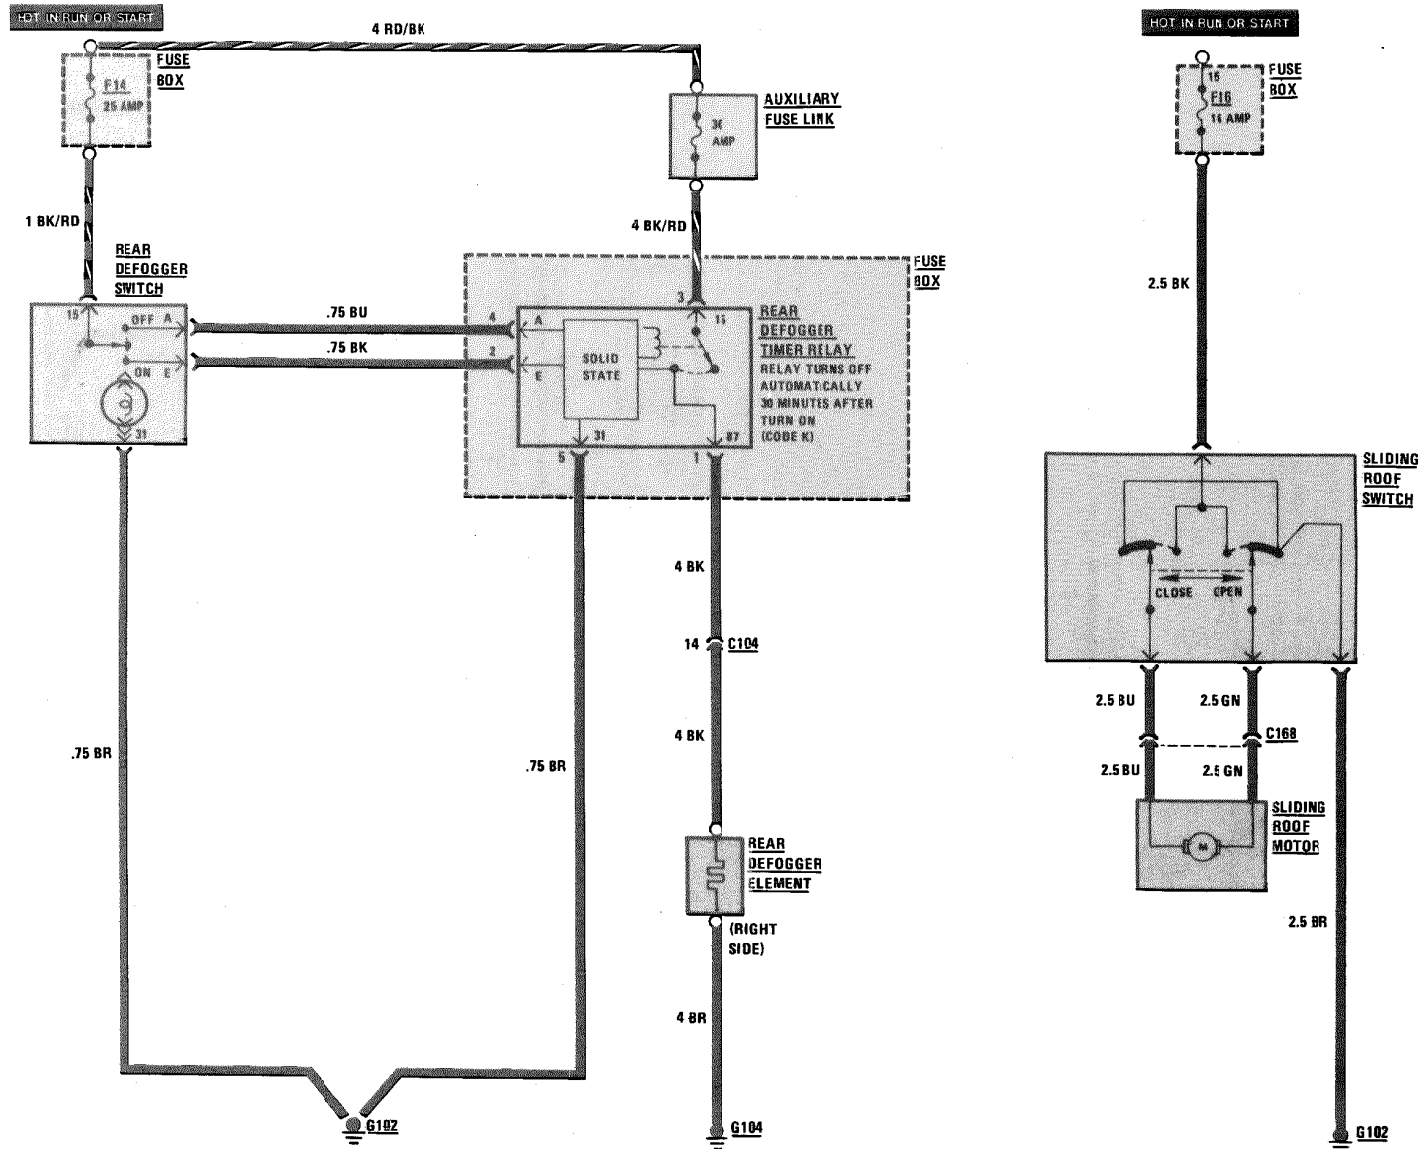

REVISIONS:


MY 1983

[illegible]

REVISIONS:

FRONT CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA MY 1984 / MY 1985

(For Component Locations See Page 207)

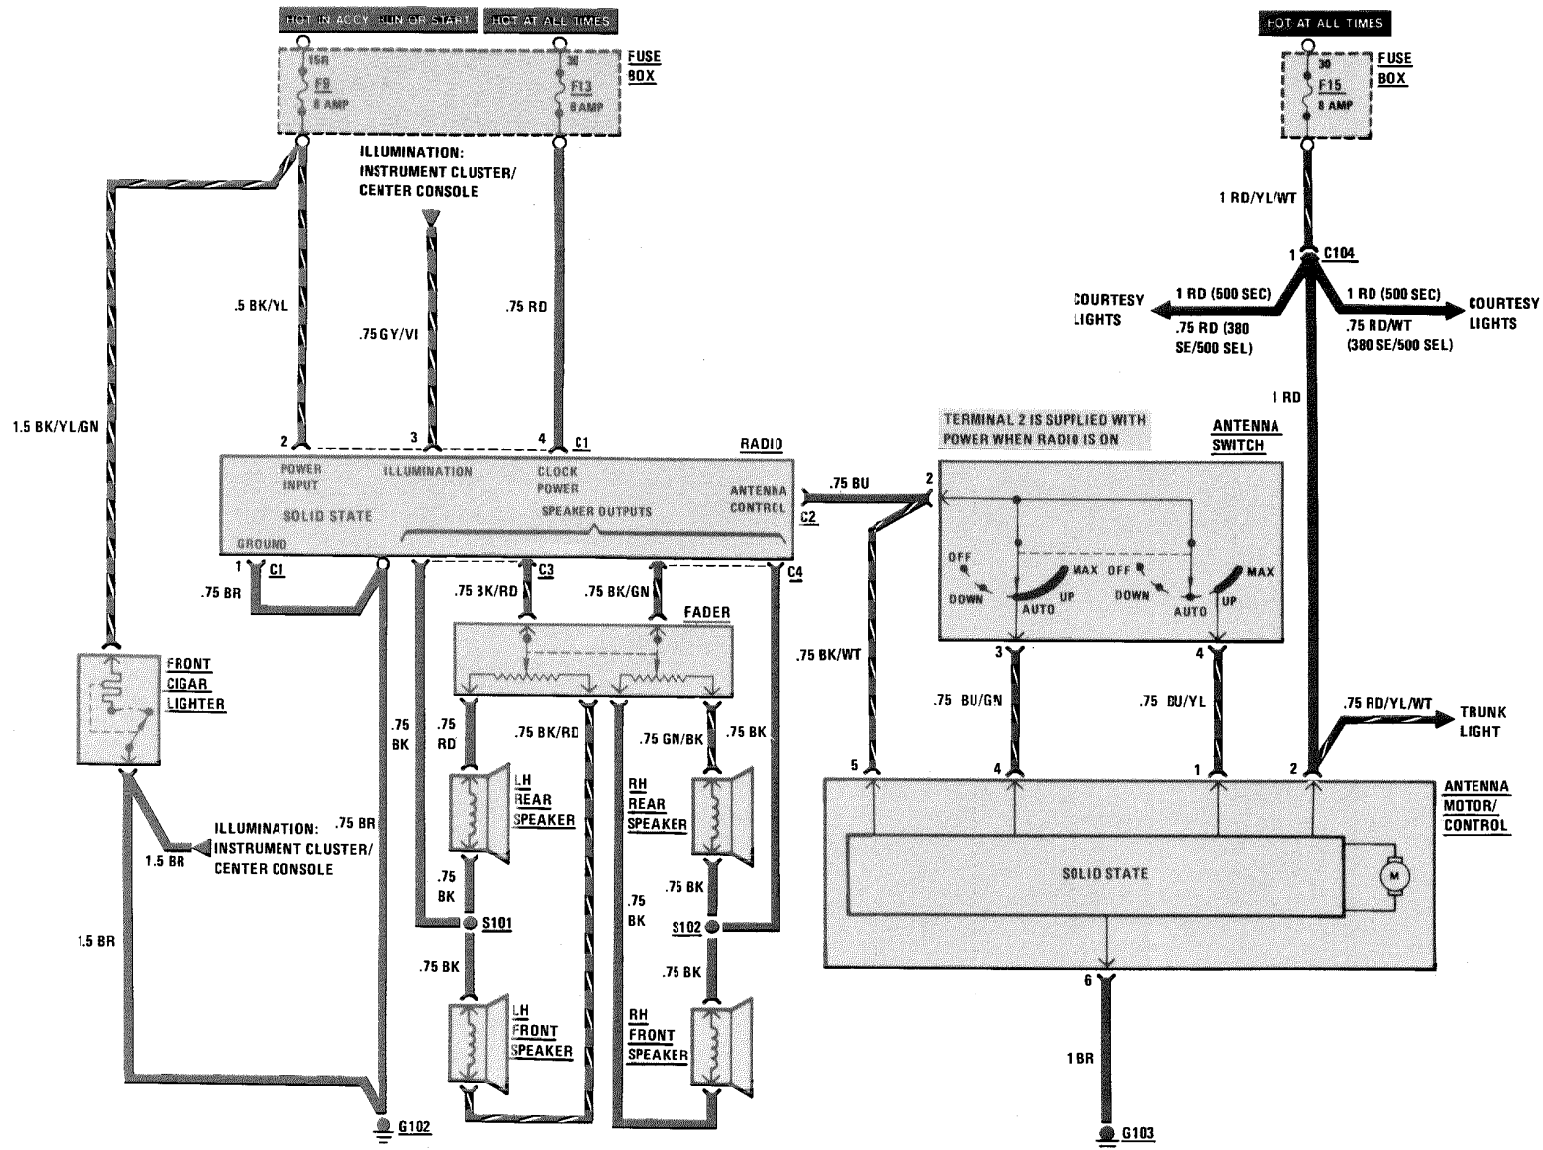

REVISIONS:


THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

CENTRAL LOCKING SYSTEM

(For Component Locations See Page 204)

MY 1983

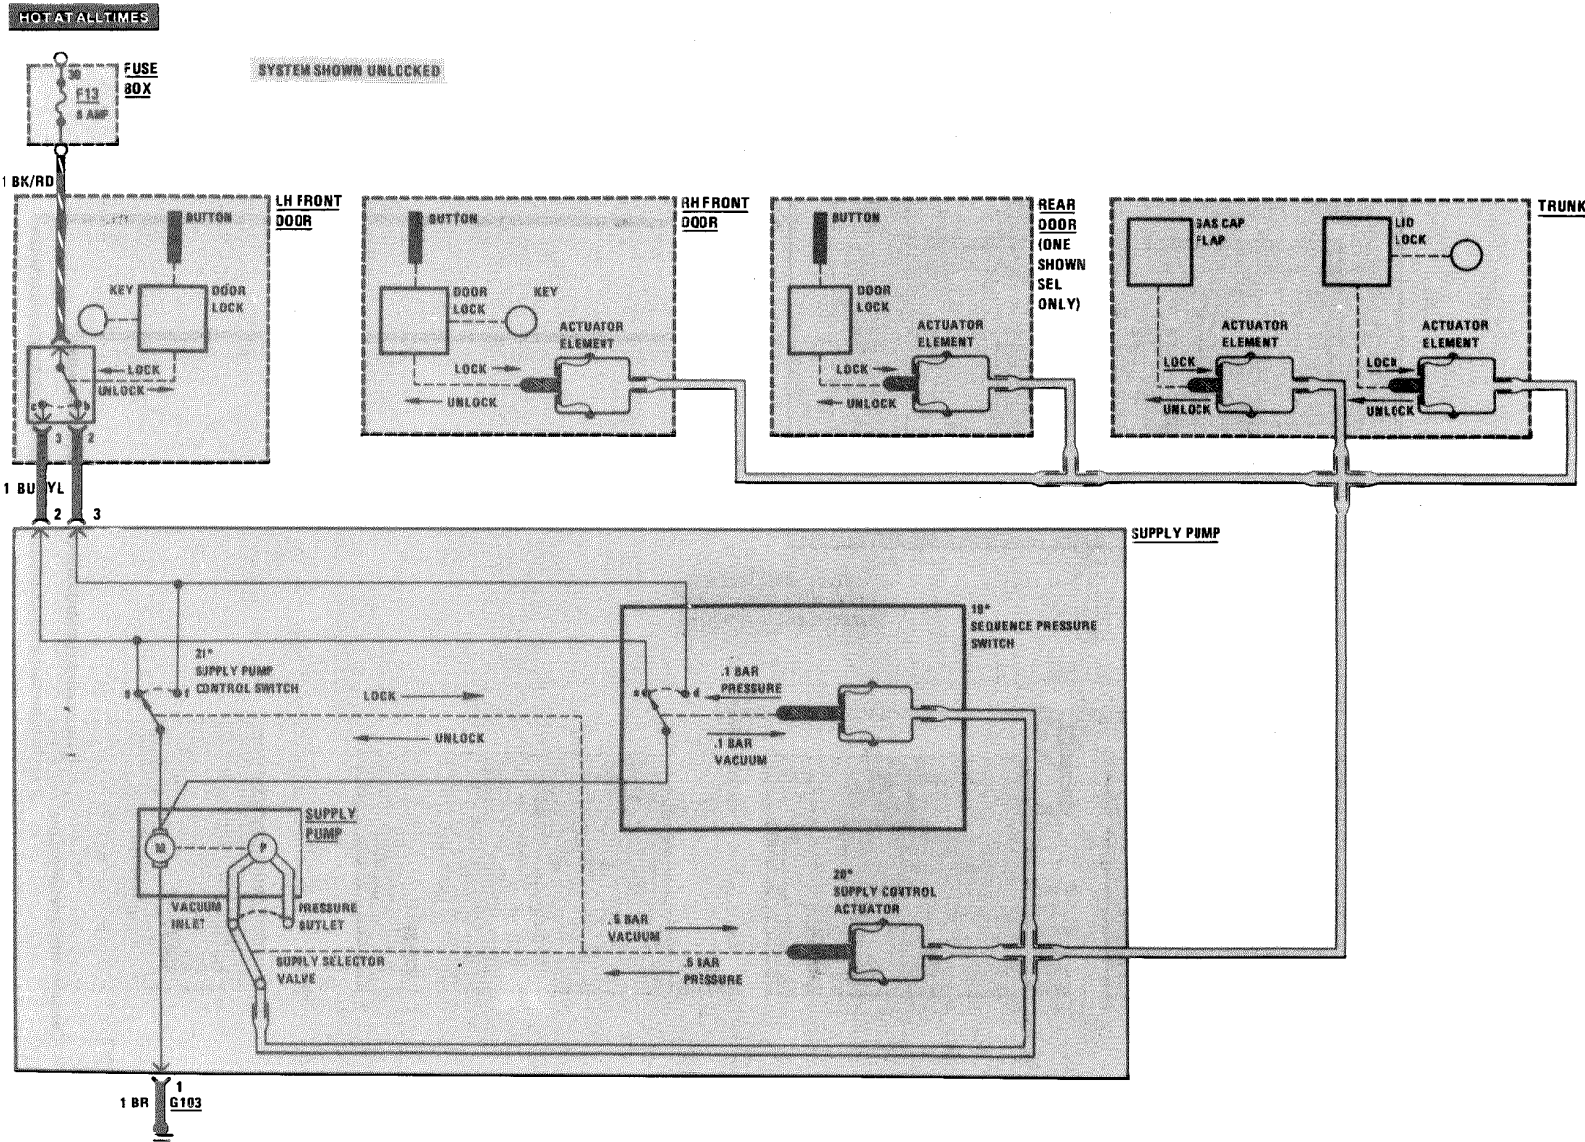


REVISIONS:

CENTRAL LOCKING SYSTEM

(For Component Locations See Page 204)

MY 1984

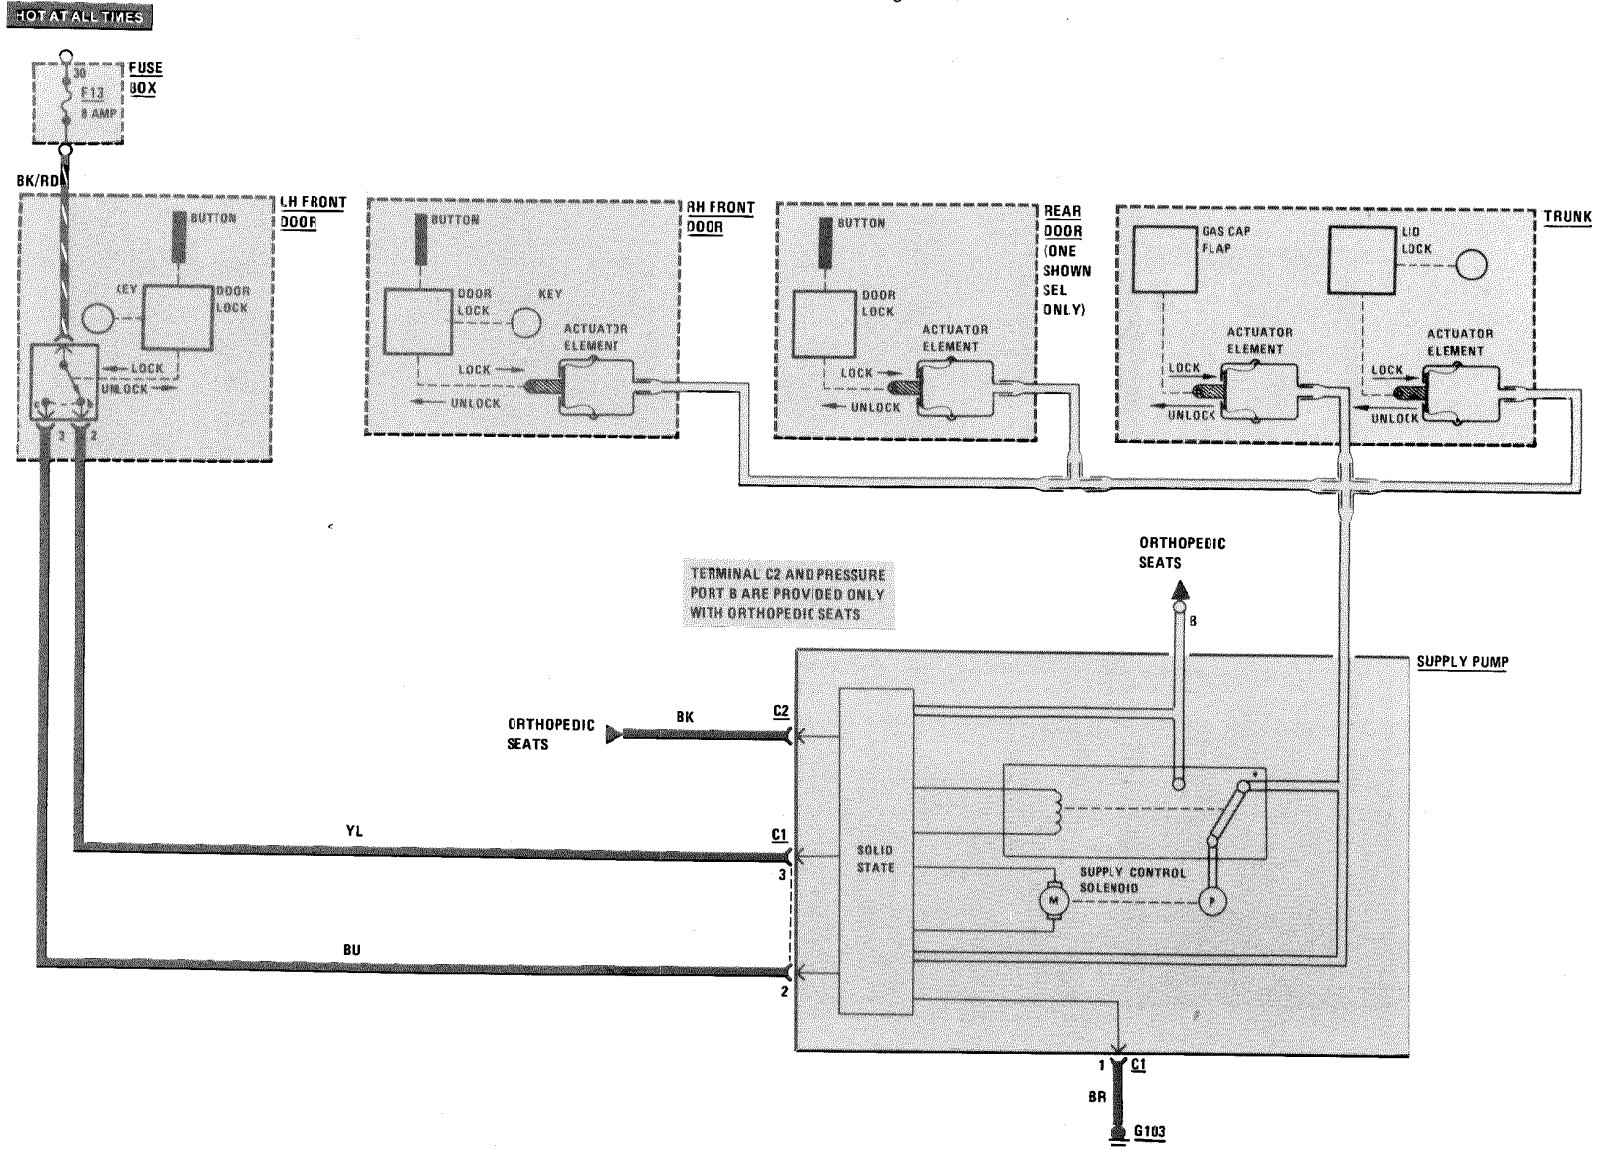

REVISIONS:

137/1


126.032/.037/.044

4/86

CENTRAL LOCKING SYSTEM

(For Component Locations See Page 204)

MY 1985

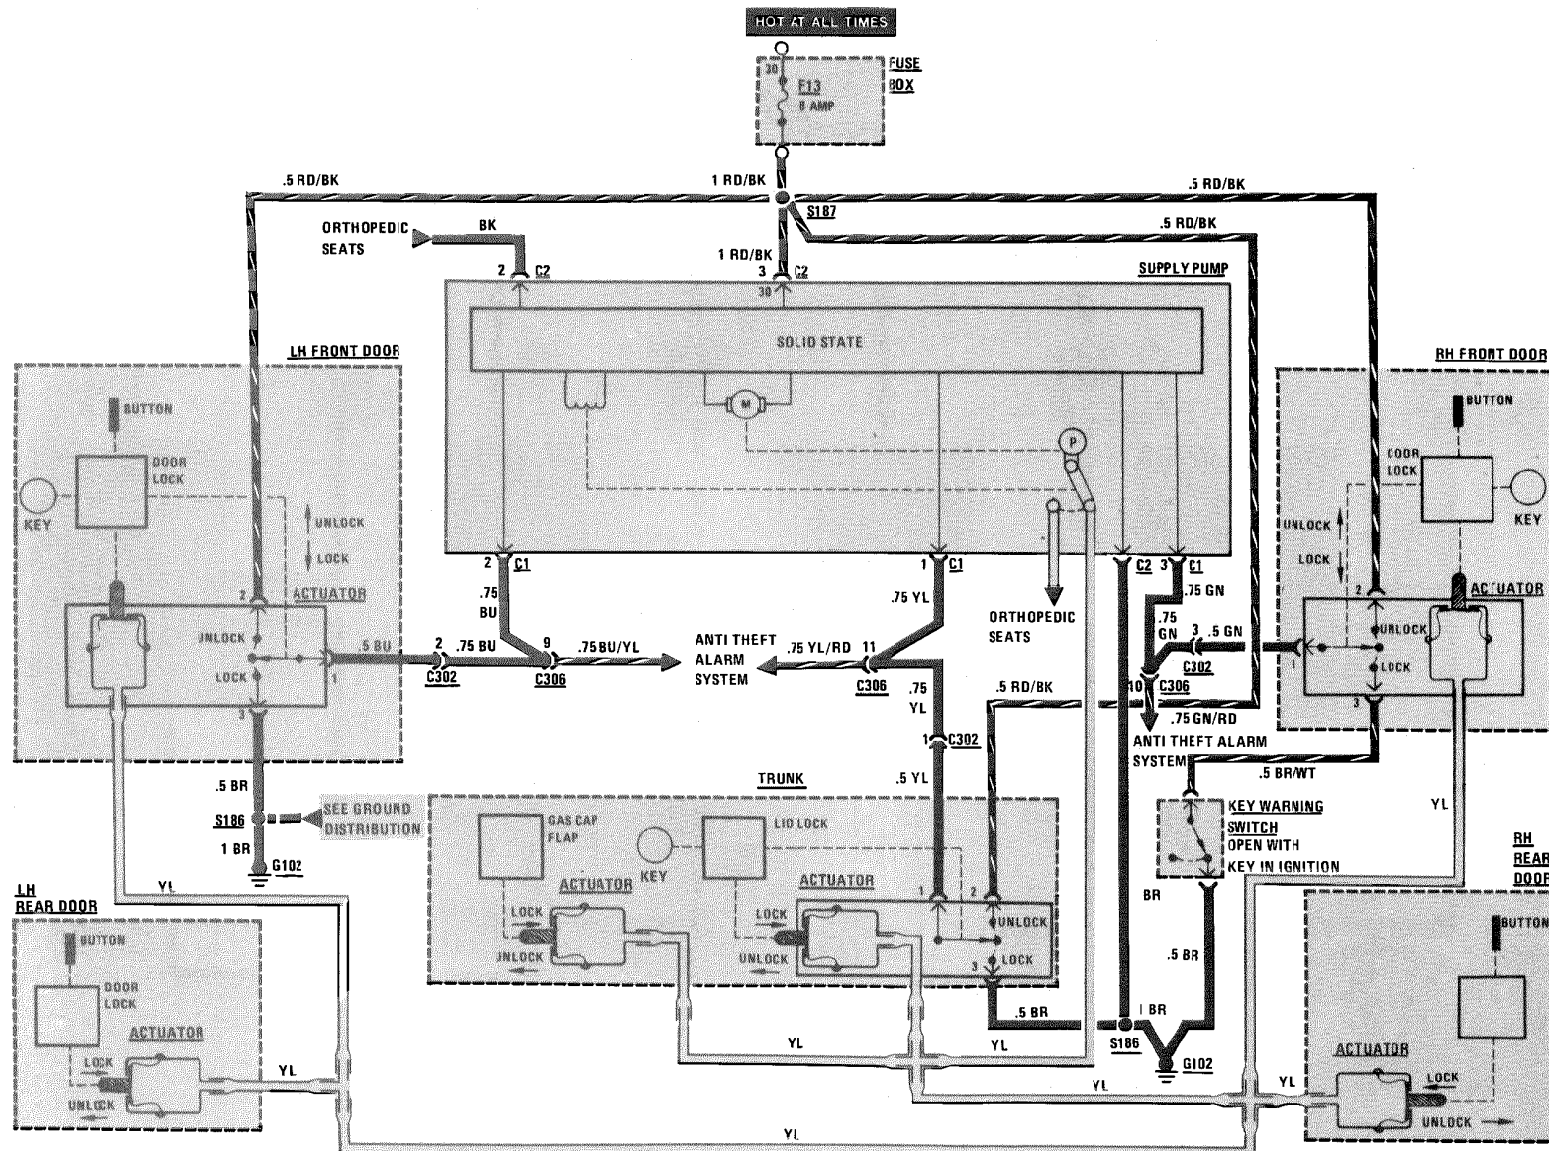

REVISIONS:

126.032/037/044

137/2

(For Component Locations See Page 208)

Wiring Diagram for 1964-65 Ford Mustang

Legend:

- 1.5 RD:** 1.5 Gauge Red Wire
- 1.5 YL:** 1.5 Gauge Yellow Wire
- 1.5 BU:** 1.5 Gauge Blue Wire
- 1.5 BK:** 1.5 Gauge Black Wire
- 1.5 BR:** 1.5 Gauge Brown Wire
- 1.5 BR/YL:** 1.5 Gauge Brown/Yellow Wire

Components and Connections:


- Instrument Cluster/Center Console Illumination:** Each section (LH FRONT, RH FRONT, LH REAR, RH REAR) has a GY (Ground Yellow) wire connected to the instrument cluster. The cluster has four positions: OFF, HIGH, LOW, and OFF/HIGH.
- Seat Heater Switch:** Each section has a SEAT HEATER SWITCH connected to the instrument cluster. The switch has four positions: OFF, HIGH, LOW, and OFF/HIGH.
- Seat Heater:** Each section has a SEAT HEATER connected to the switch. The heater is connected to the switch via a 1.5 BU wire.
- Fuse Box:** The diagram shows two fuse boxes. The left one is labeled "HOT IN ACCY. RUN OR START" and contains a 15 AMP fuse. The right one is labeled "HOT IN RUN OR START" and contains a 25 AMP fuse.
- Grounding:** The diagram shows a common ground connection labeled G102 at the bottom.

REVISIONS:

HEATED SEATS

(For Component Locations See Page 208)

MY 1984/MY 1985

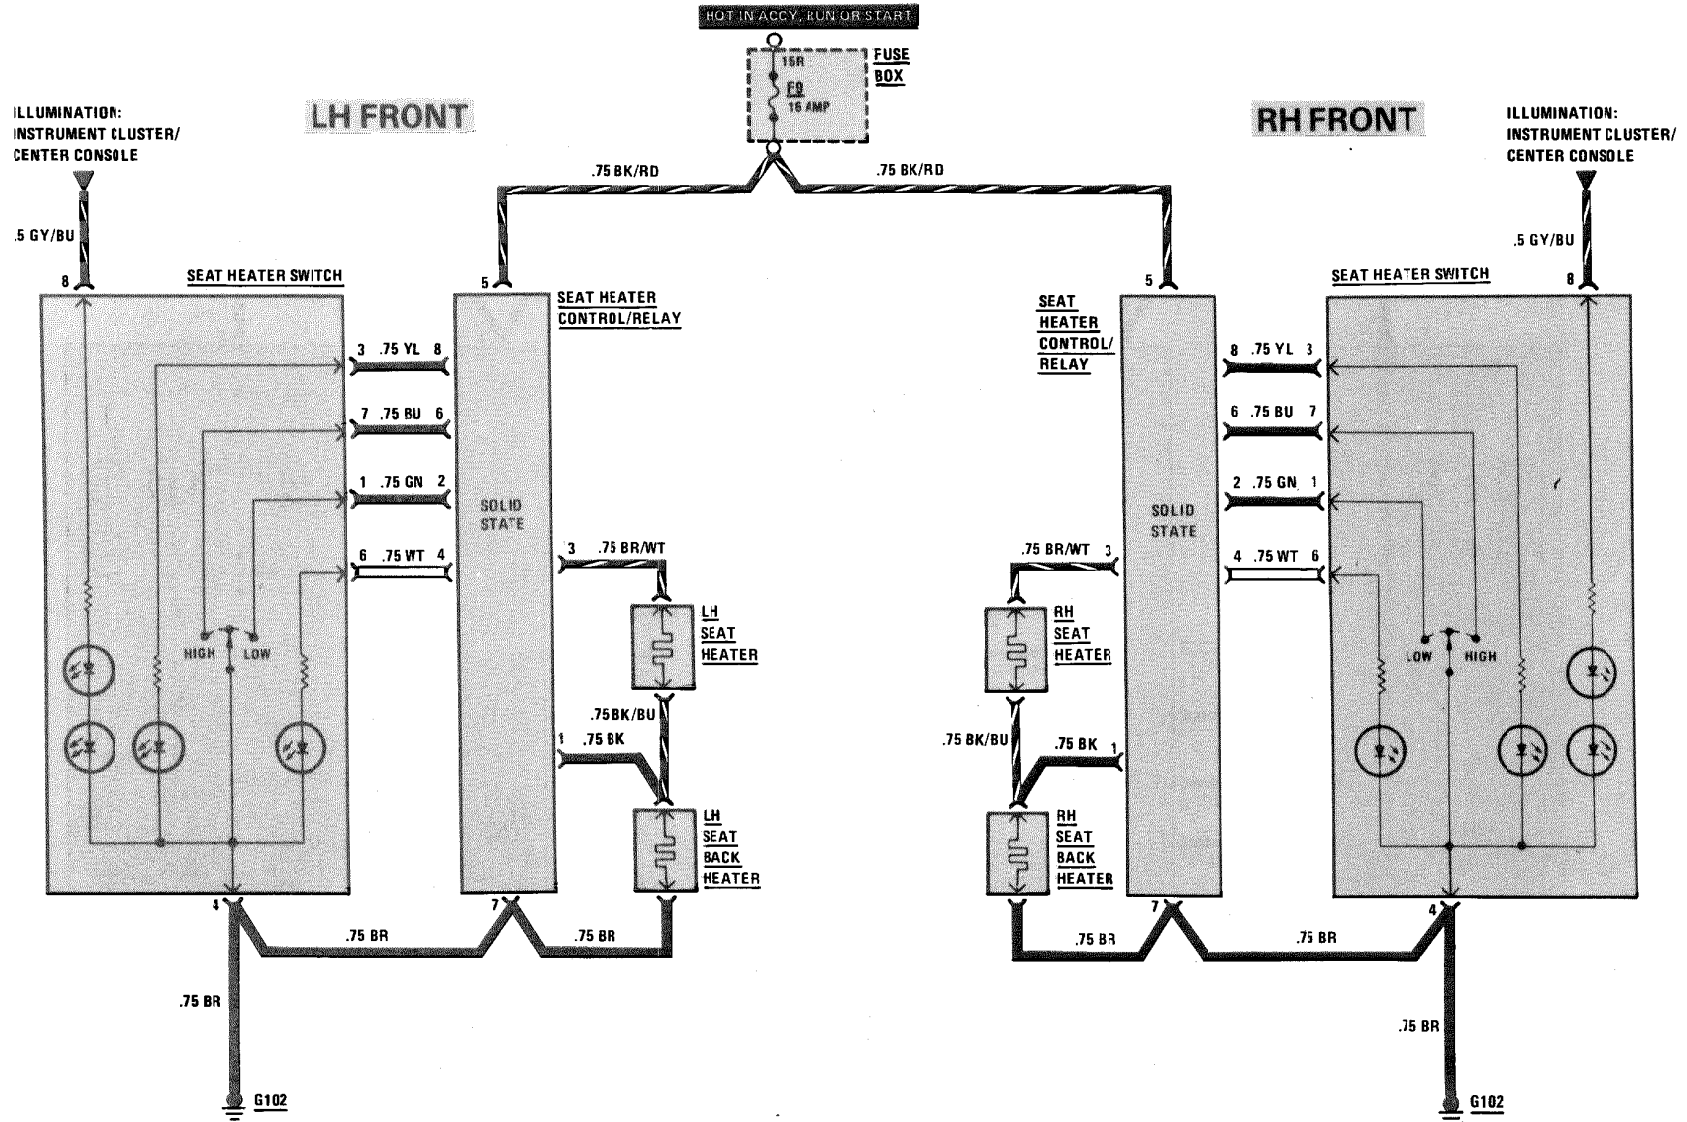


REVISIONS:

HEATED SEATS

(For Component Locations See Page 208)

MY 1984/MY 1985

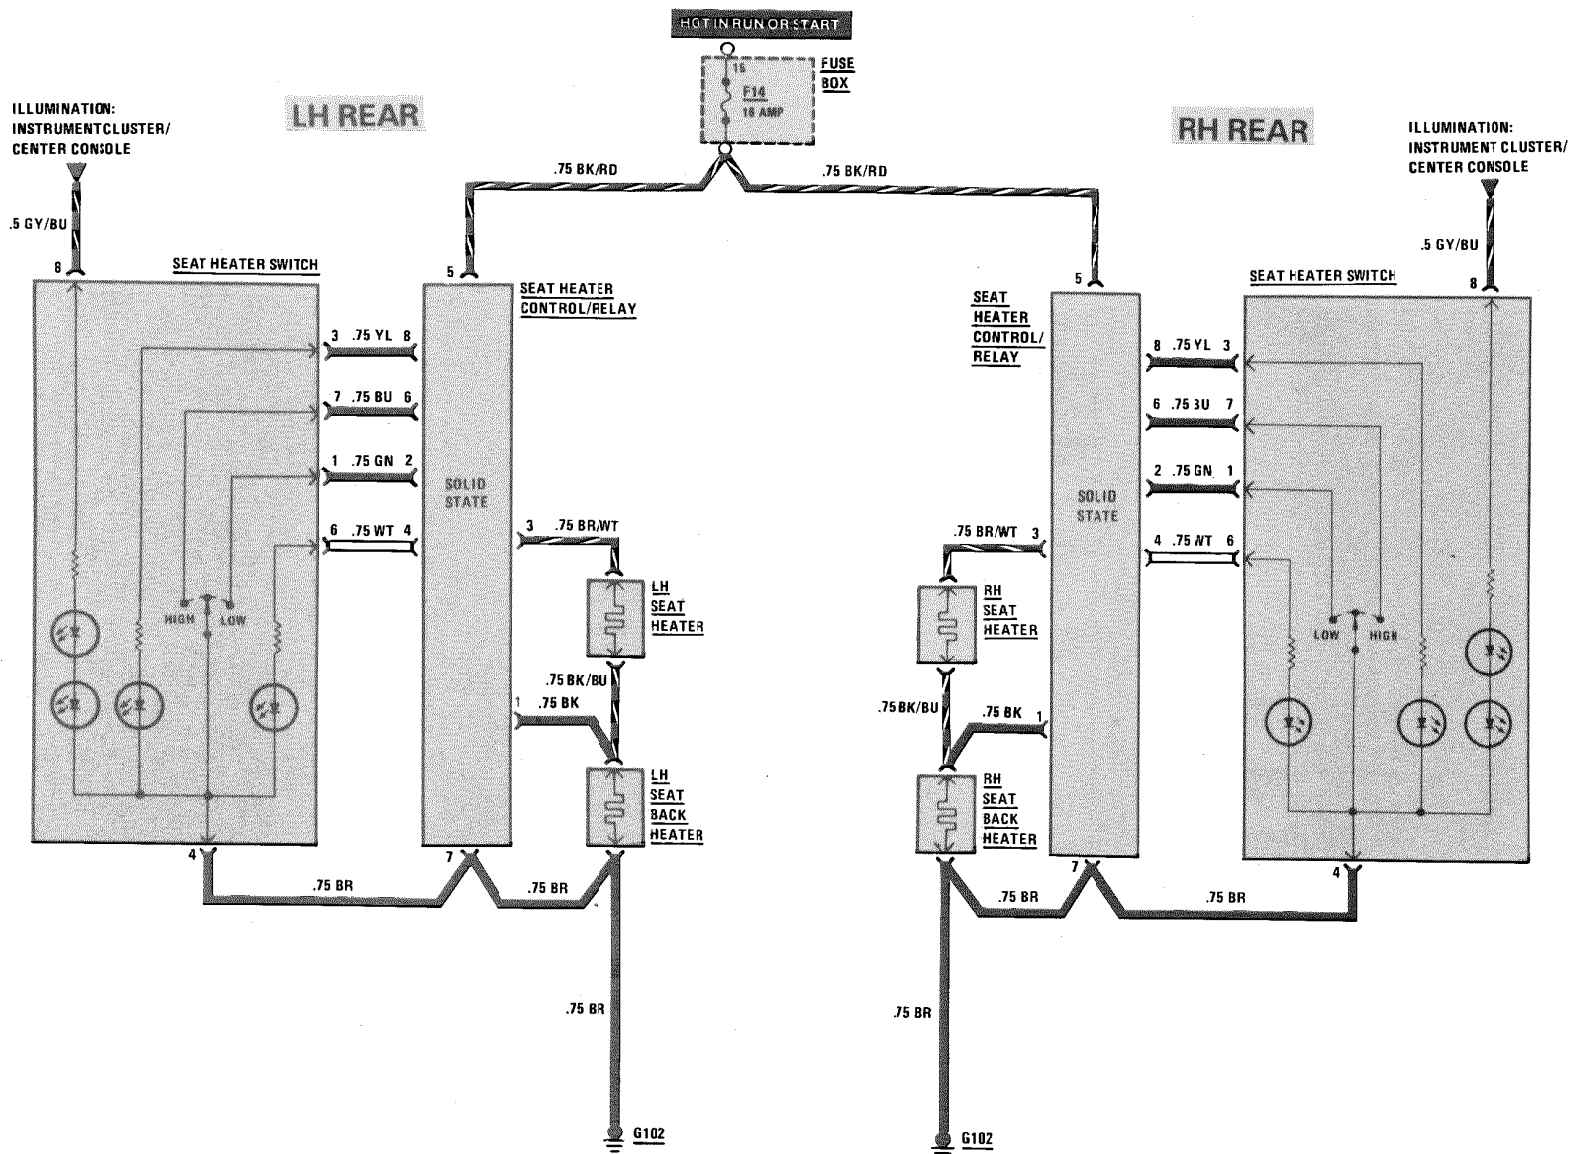


REVISIONS:

RH OUTSIDE MIRROR

(For Component Locations See Page 213)

MY 1985/MY 1984

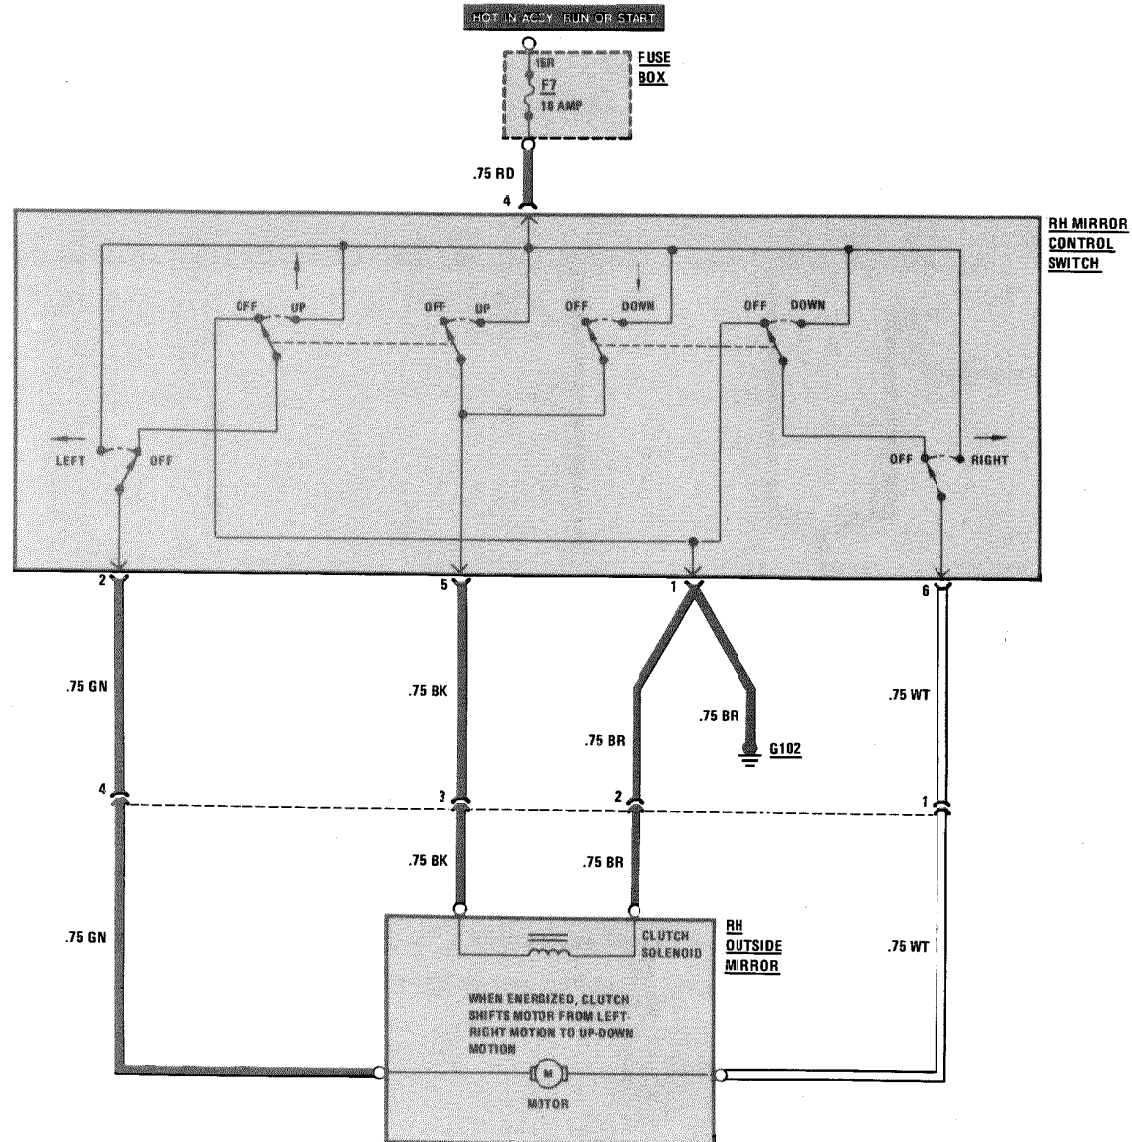


REVISIONS:

OUTSIDE HEATED MIRRORS

(For Component Locations See Page 211)

MY 1985

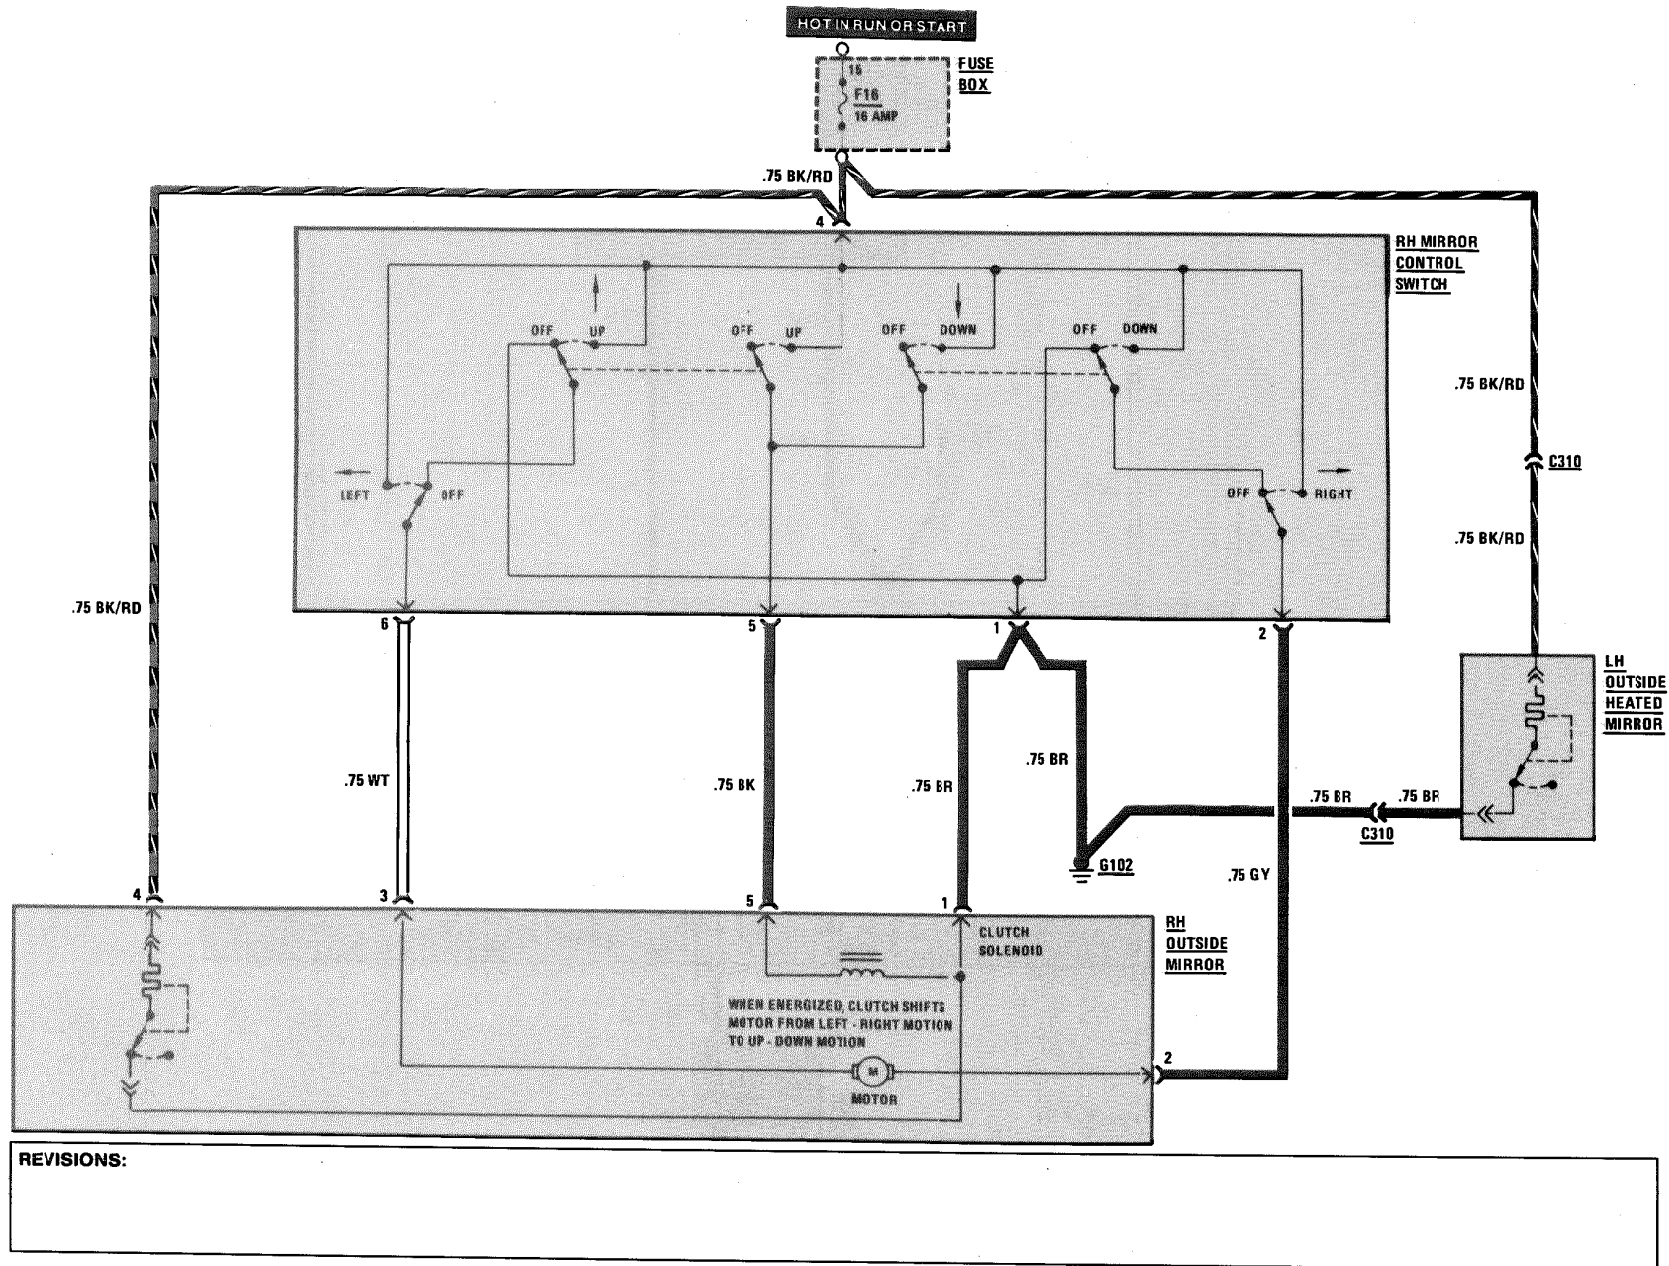

139/1

126.032/.037/.044

4/86


THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

COURTESY LIGHTS

(For Component Locations See Page 205)

MY 1983 380 SEL

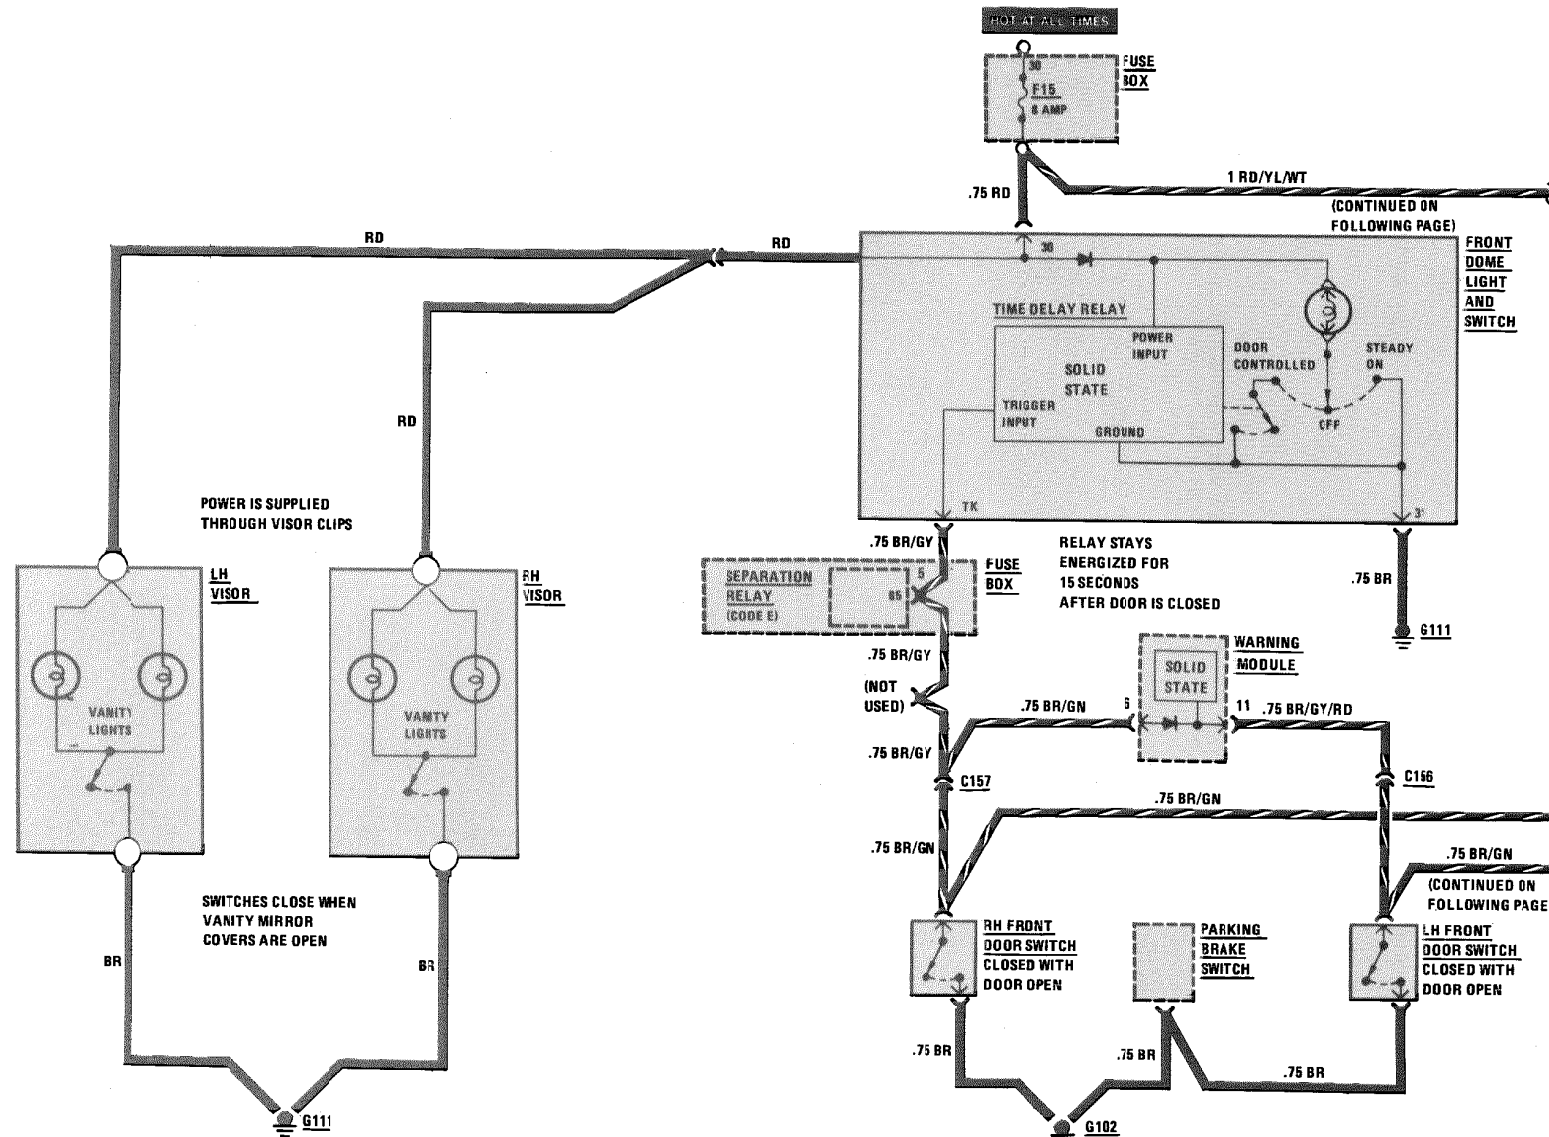


COURTESY LIGHTS

(For Component Locations See Page 205)

MY 1983


380 SEL

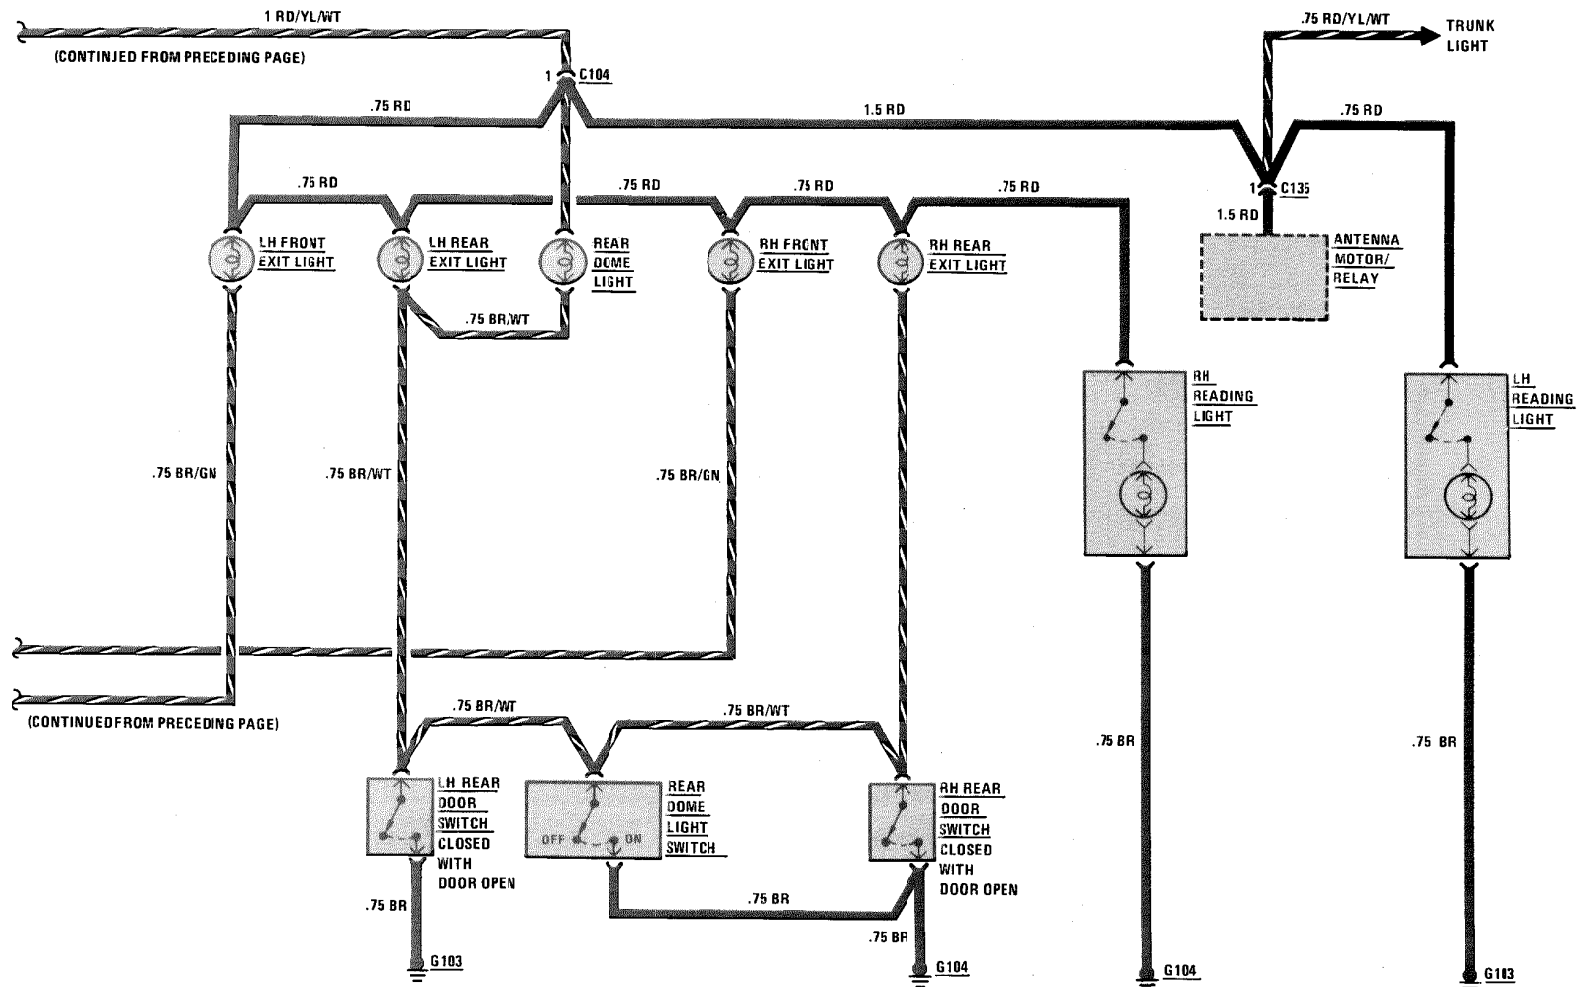

REVISIONS:

(For Component Locations See Page 205)

 
380 SE/500 SEL



COURTESY LIGHTS

(For Component Locations See Page 205)

MY 1984

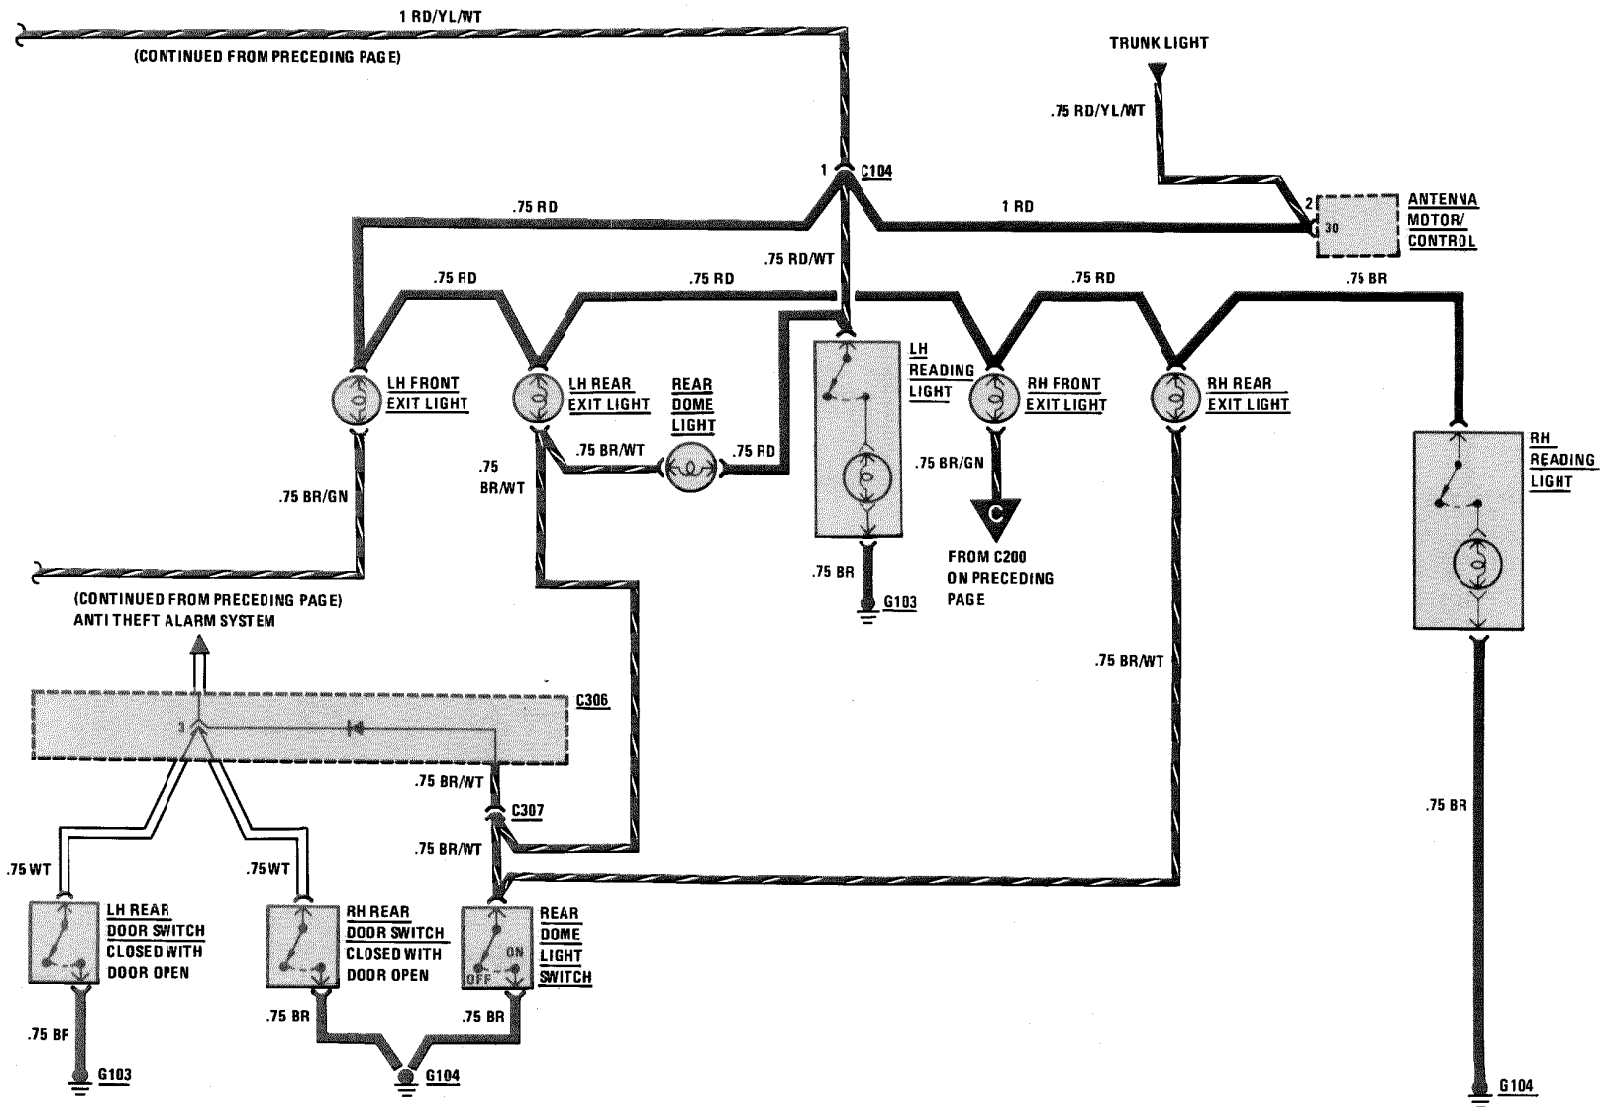


126.032/.037

140/3

COURTESY LIGHTS

(For Component Locations See Page 205)

MY 1985

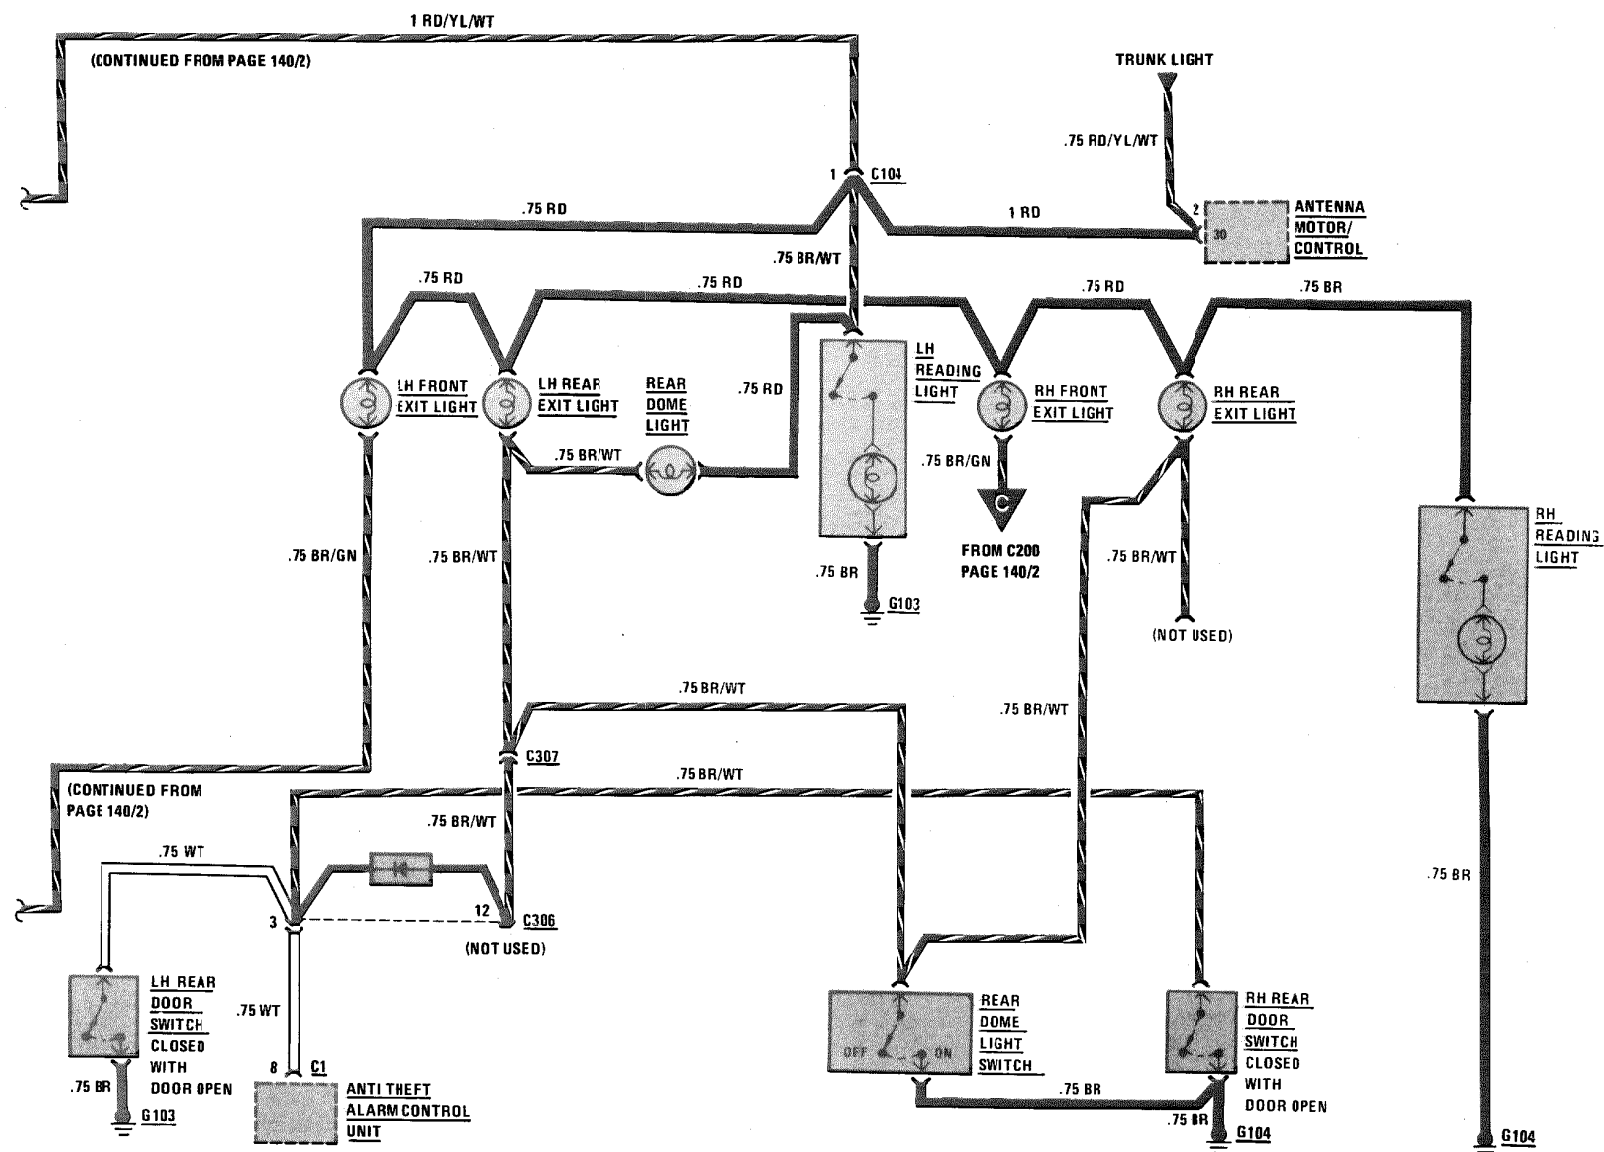

REVISIONS:

THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

COURTESY LIGHTS

(For Component Locations See Page 205)

MY 1983/MY 1984/MY 1985

380/500 SEC

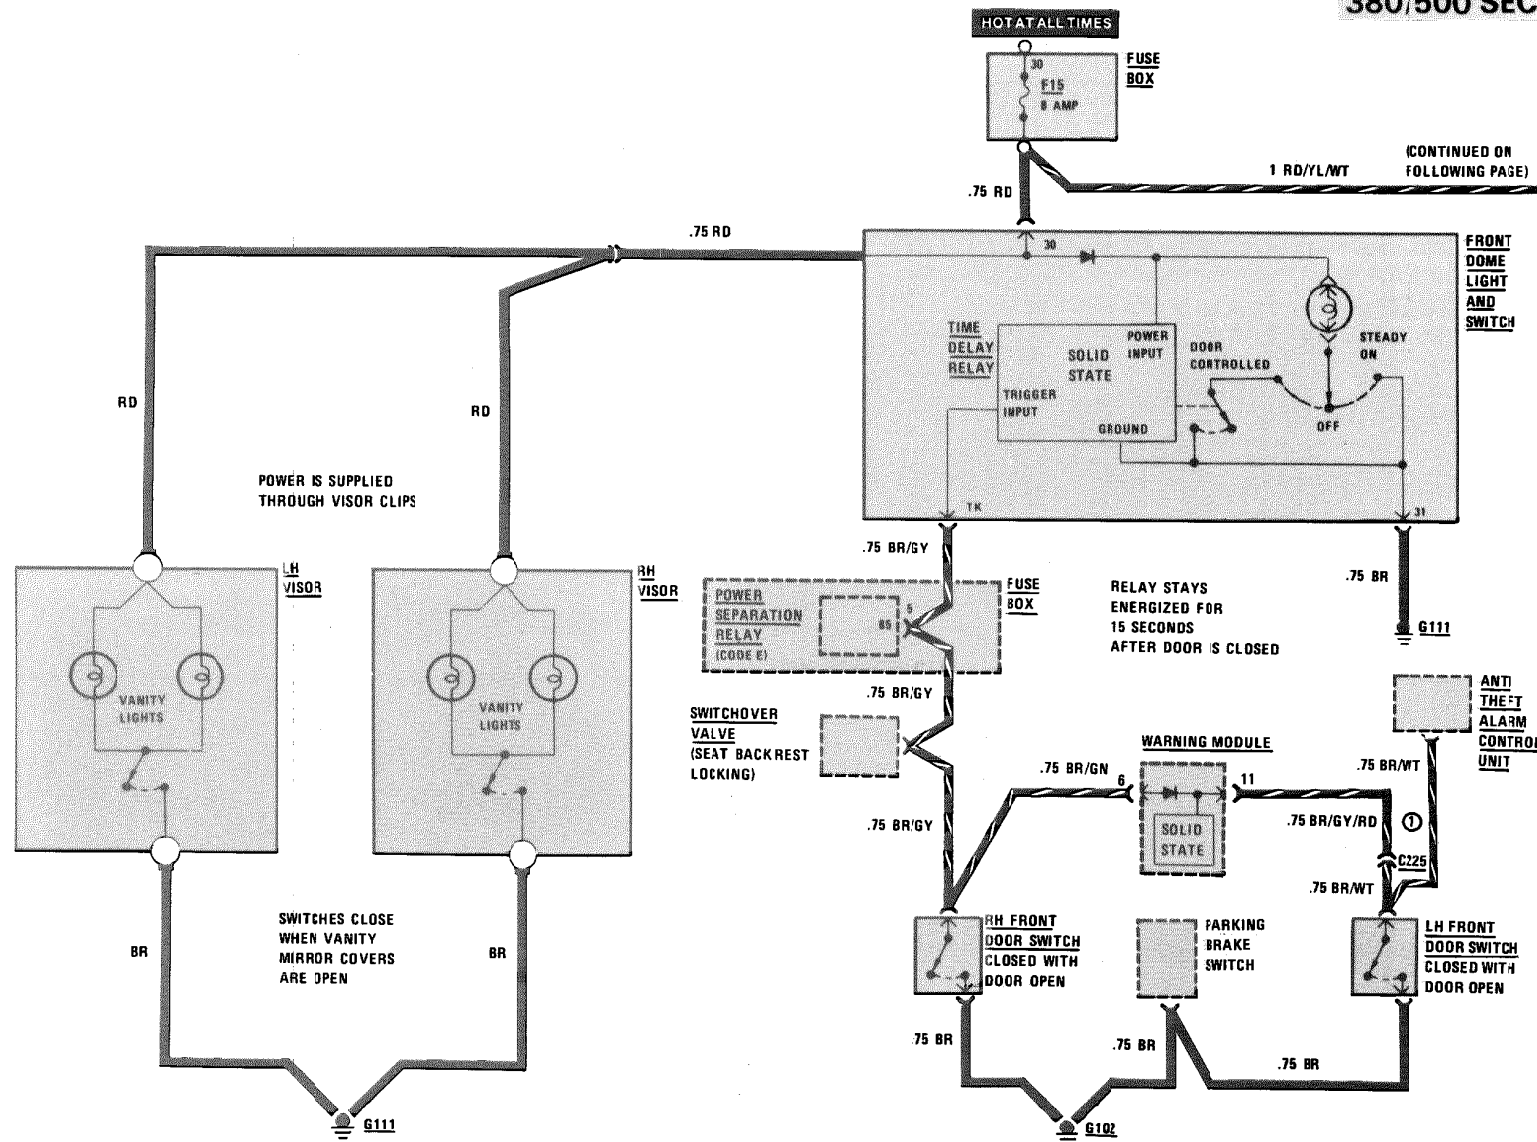


REVISIONS: ① AS OF MODEL YEAR 1984

COURTESY LIGHTS

(For Component Locations See Page 205)

MY 1983/MY 1984/MY 1985

380/500 SEC

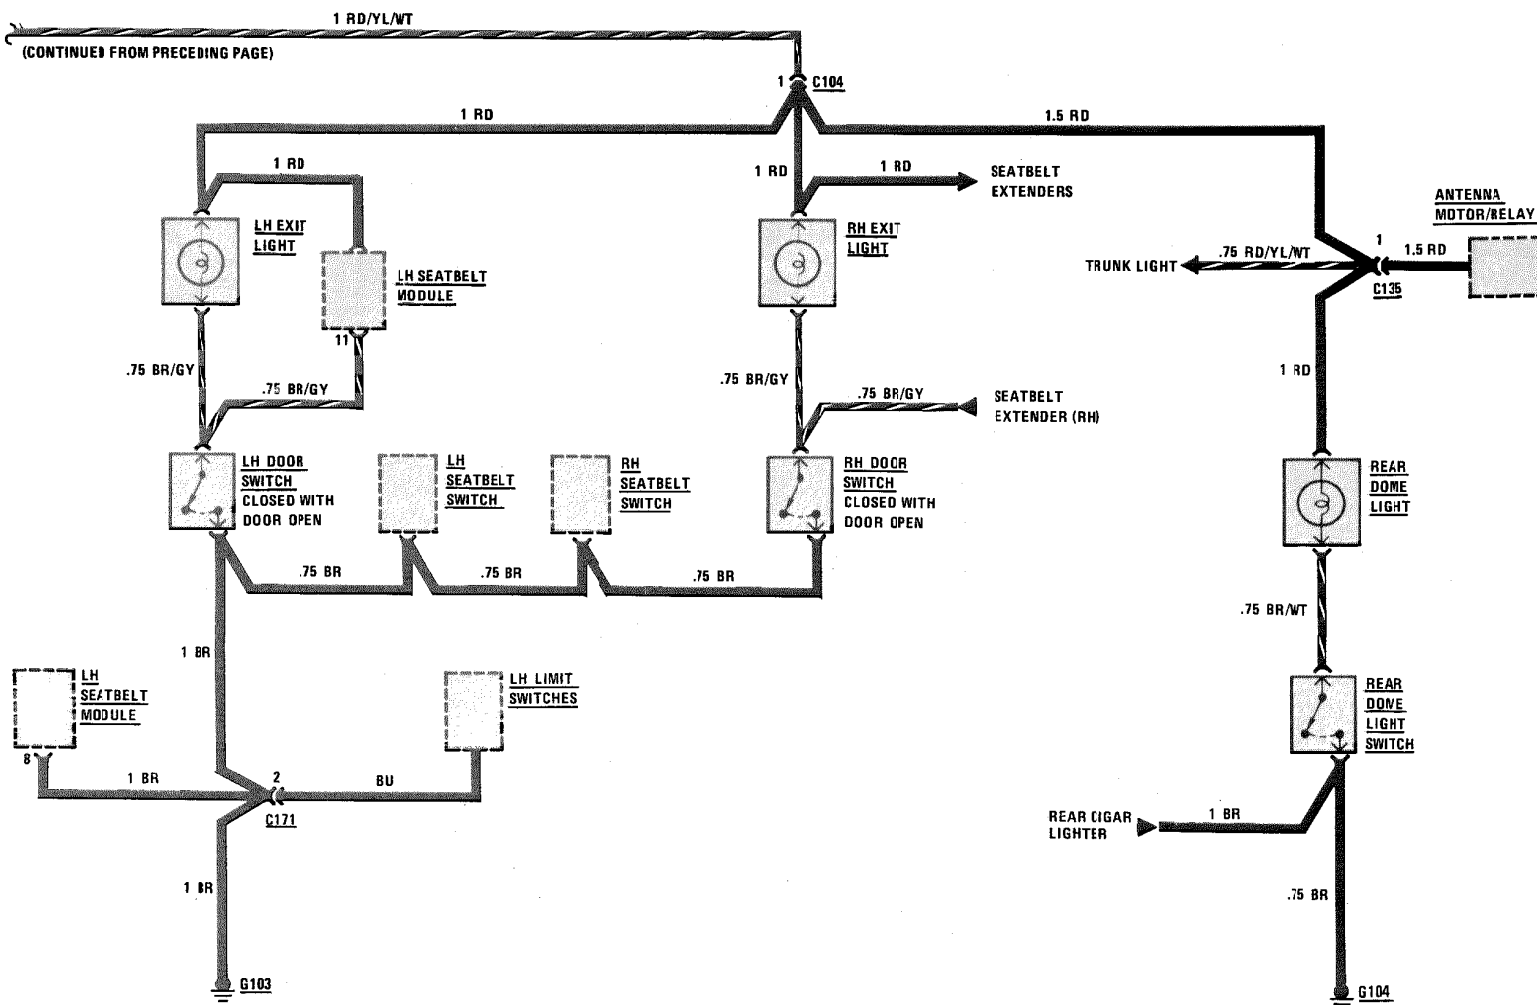


REVISIONS:

126.043

143

(For Component Locations See Page 214)

 380/500 SEC



1. THE CONTROLLER-TIMER EXTENDS SEATBELTS FOR 30 SECONDS MAXIMUM OR UNTIL SEATBELT IS BUCKLED.
2. IF MOTOR JAMS, FORCE SWITCH WILL CLOSE TO DISABLE THE SYSTEM. TO RESTORE OPERATION, SYSTEM MUST BE RESET. TO RESET, REMOVE FUSE 16 AND THEN RE-INSTALL.

1187

126.043/.044

145


REVISIONS: ① AS OF MODEL YEAR 1934

SEAT BACKREST LOCKING SYSTEM

(For Component Locations See Page 214)

MY 1983/MY 1984/MY 1985


380/500 SEC

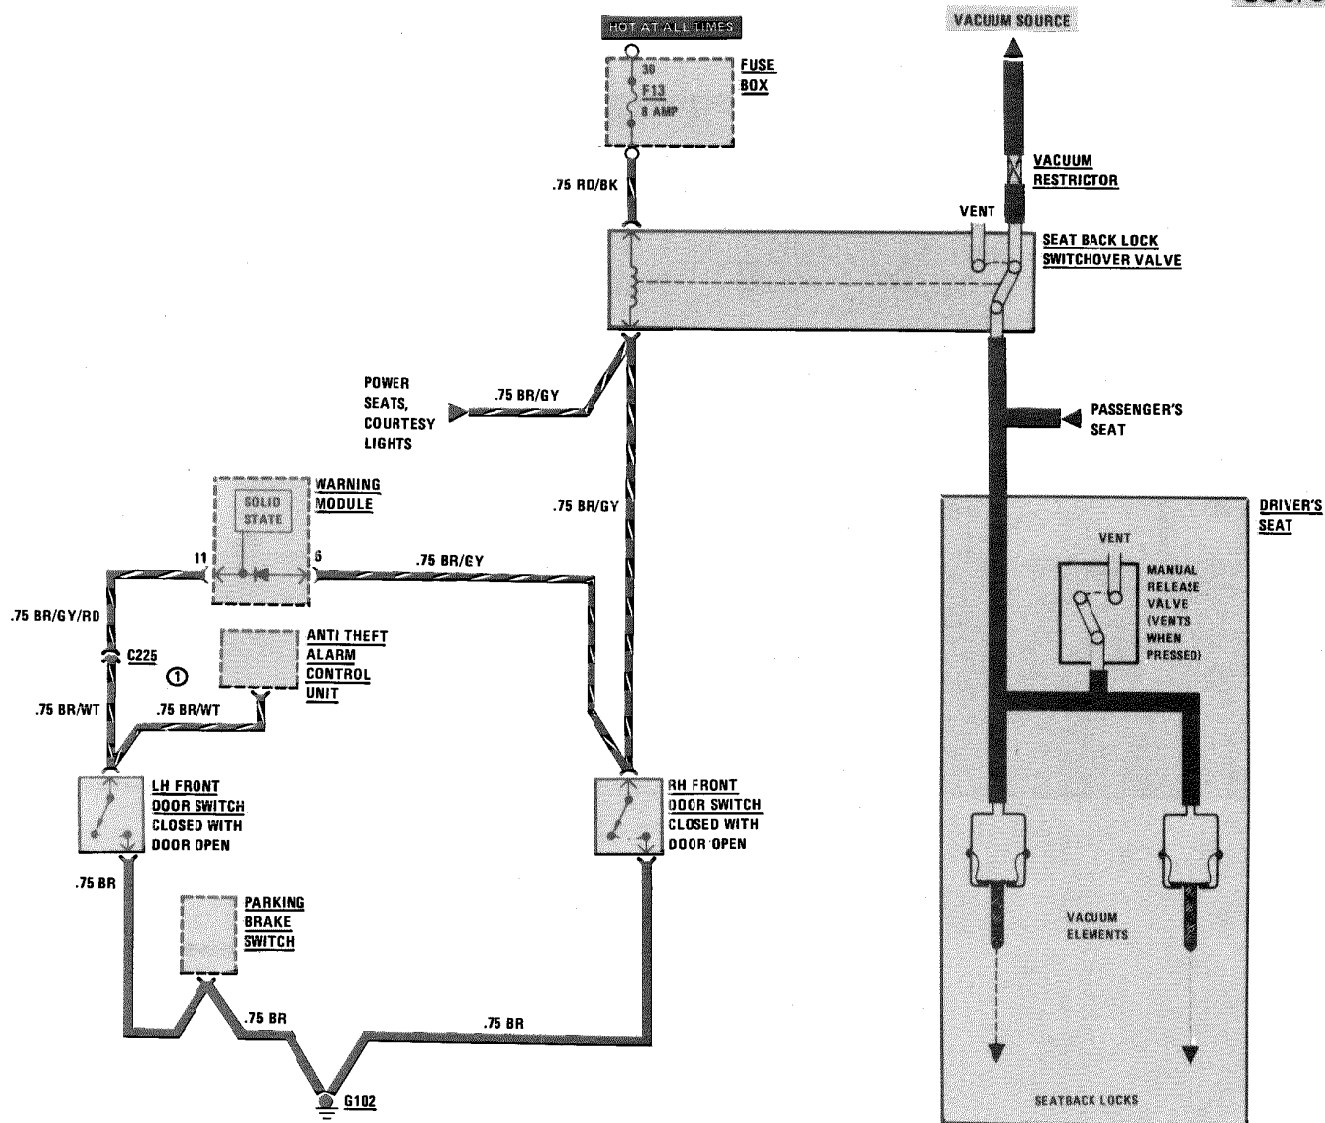

REVISIONS: ① AS OF MODEL YEAR 1984

MY 1984

WARNING:
GAS GENERATORS ARE TI PYROTECHNIC DEVICES, WHICH CAN CAUSE SEVERE INJURY IF ACCIDENTLY DETONATED. BEFORE TESTING, REPAIRING OR HANDLING ANY PART OF THIS SYSTEM, DISCONNECT THE VEHICLE BATTERY AND SEPARATE THE RED 10 PIN CONNECTOR (C178). THE CONNECTOR IS LOCATED UNDER THE RH FRONT FOOTREST. GROUP 91 OF THE SERVICE MICROFICHE SYSTEM AND GROUP 91 OF THE 1985 "INTRODUCTION MANUAL" CONTAIN PROCEDURES FOR TESTING, REMOVING, REPLACING, STORING AND DISPOSING OF SYSTEM COMPONENTS. OBSERVE ALL CAUTIONS FOUND IN THIS INFORMATION.

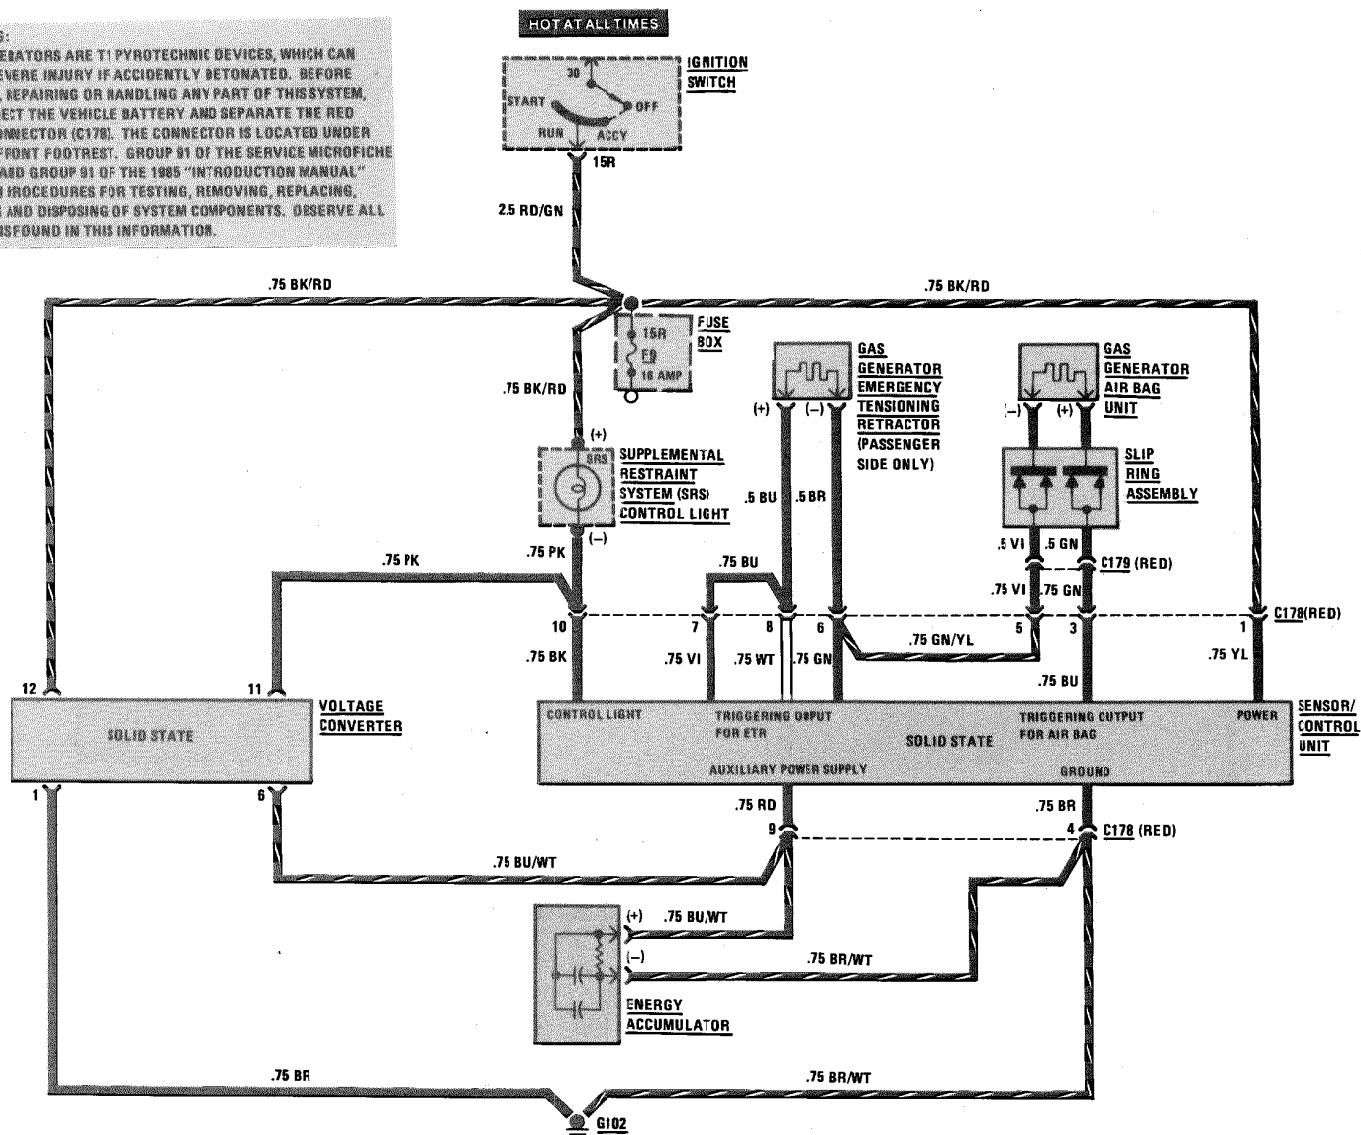

REVISIONS:

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) WITHOUT AIR BAG


(For Component Locations See Page 216)

MY 1985

WARNING:


GAS GENERATORS ARE PYROTECHNIC DEVICES, WHICH CAN CAUSE SEVERE INJURY IF ACCIDENTALLY DETONATED. BEFORE TESTING, REPAIRING OR HANDLING ANY PART OF THIS SYSTEM, DISCONNECT THE VEHICLE BATTERY AND SEPARATE THE RED 10-PIN CONNECTOR (C178). THE CONNECTOR IS LOCATED UNDER THE RH FRONT FOOTREST. GROUP B1 OF THE SERVICE MICROFICHE SYSTEM AND GROUP B1 OF THE 1985 "INTRODUCTION MANUAL" CONTAIN PROCEDURES FOR TESTING, REMOVING, REPLACING, STORING AND DISPOSING OF SYSTEM COMPONENTS. OBSERVE ALL CAUTIONS FOUND IN THIS INFORMATION.

-10T AT ALL TIMES

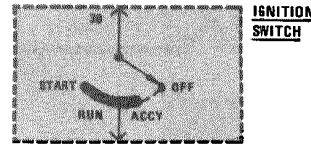


2.5 RD/GN

 IGNITION SWITCH



.75 BK/RD

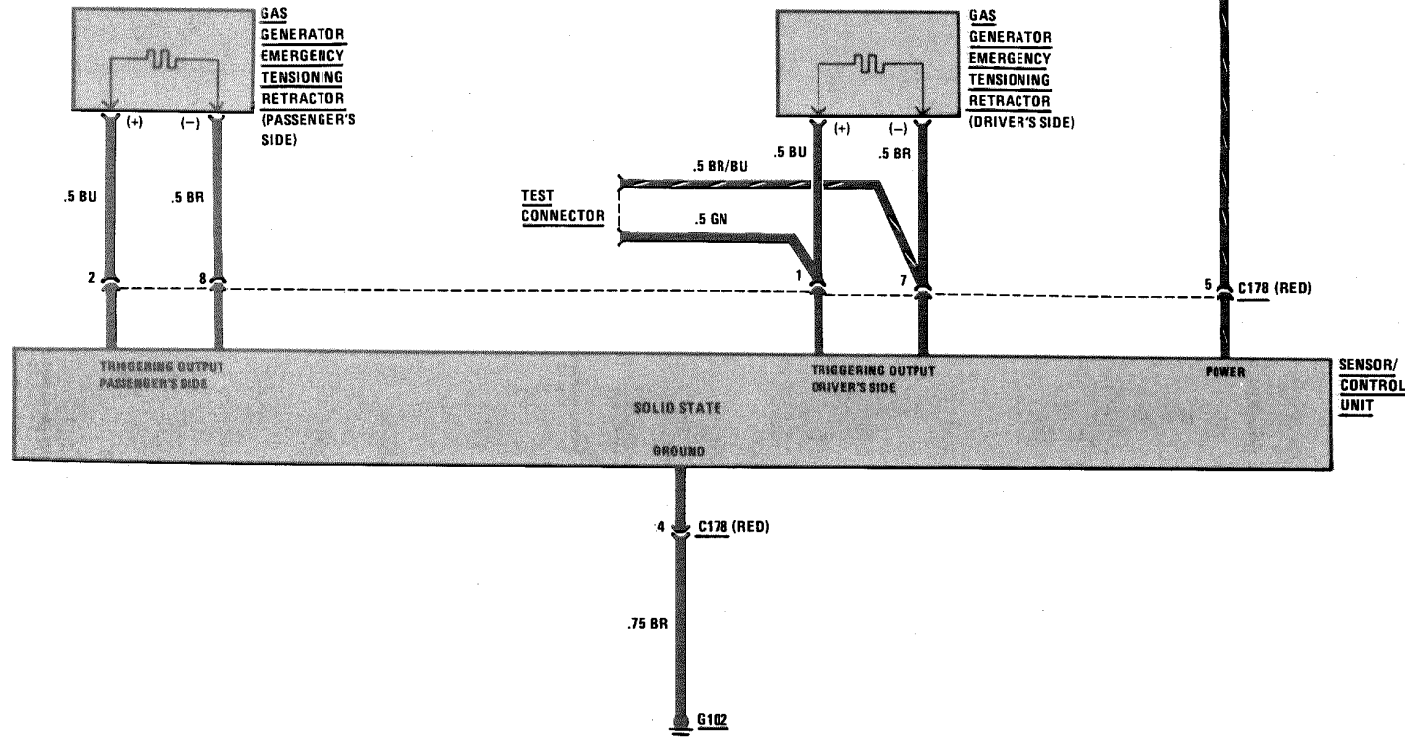

REVISIONS:

147/1

126.032

4/86


SUPPLEMENTAL RESTRAINT SYSTEM (SRS) WITH AIR BAG

MY 1985

(For Component Locations See Page 216)

WARNING:

GAS GENERATORS ARE TI PYROTECHNIC DEVICES, WHICH CAN CAUSE SEVERE INJURY IF ACCIDENTALLY DETONATED. BEFORE TESTING, REPAIRING OR HANDLING ANY PART OF THIS SYSTEM, DISCONNECT THE VEHICLE BATTERY AND SEPARATE THE RED 10-PIN CONNECTOR (C178). THE CONNECTOR IS LOCATED UNDER THE RH FRONT FOOTREST. GROUP B1 OF THE SERVICE MICROFICHE SYSTEM AND GROUP 91 OF THE 1985 "INTRODUCTION MANUAL" CONTAIN PROCEDURES FOR TESTING, REMOVING, REPLACING, STORING AND DISPOSING OF SYSTEM COMPONENTS. OBSERVE ALL CAUTIONS FOUND IN THIS INFORMATION.

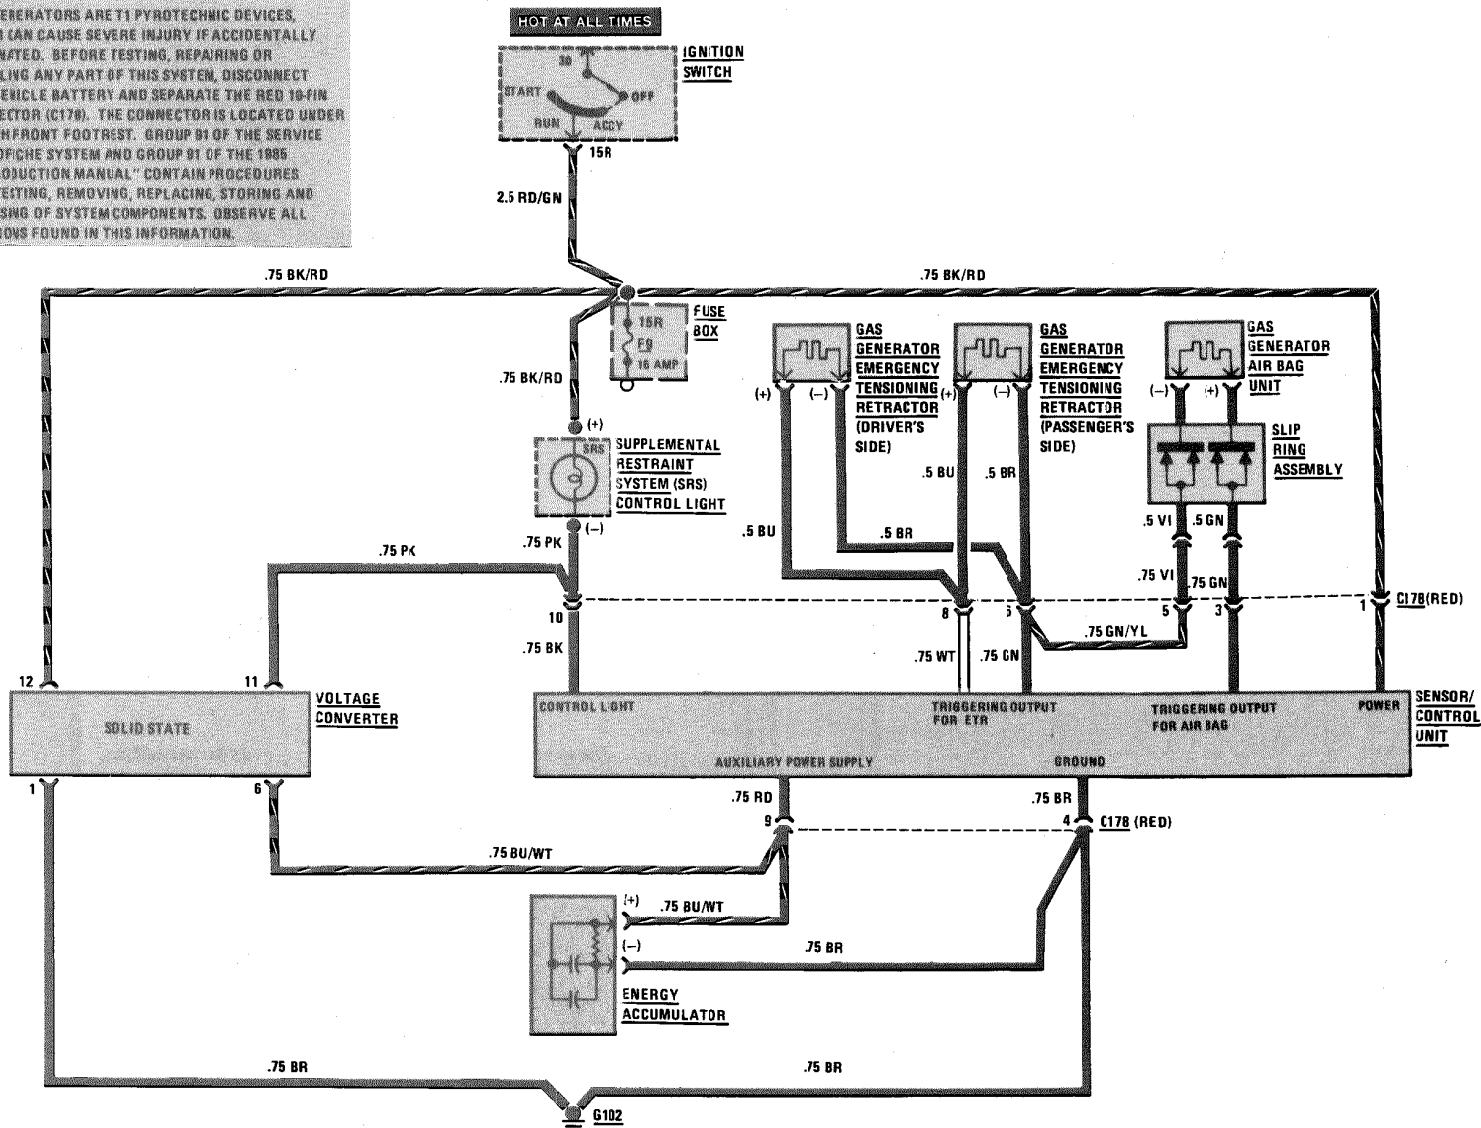

REVISIONS:

126.032/.037/.044



147/2

TRUNK LIGHT/REAR CIGAR LIGHTERS

(For Component Locations See Page 216)

MY 1983/MY 1984/MY 1985

380/380 SE, 500 SEL

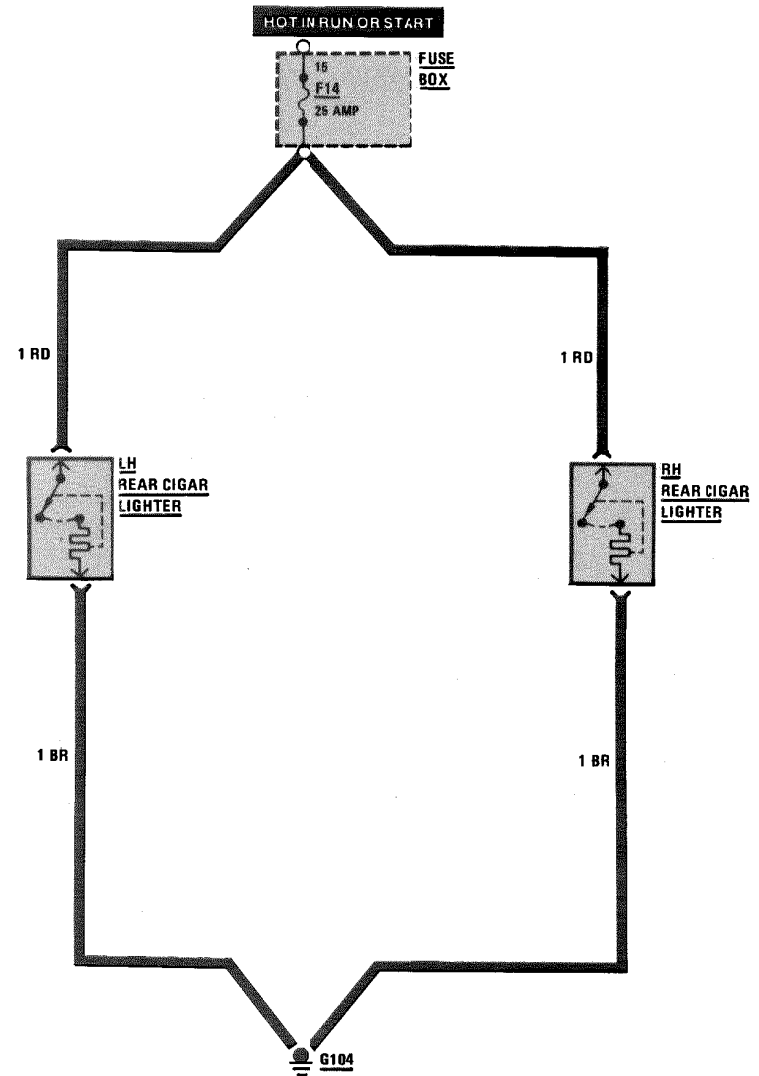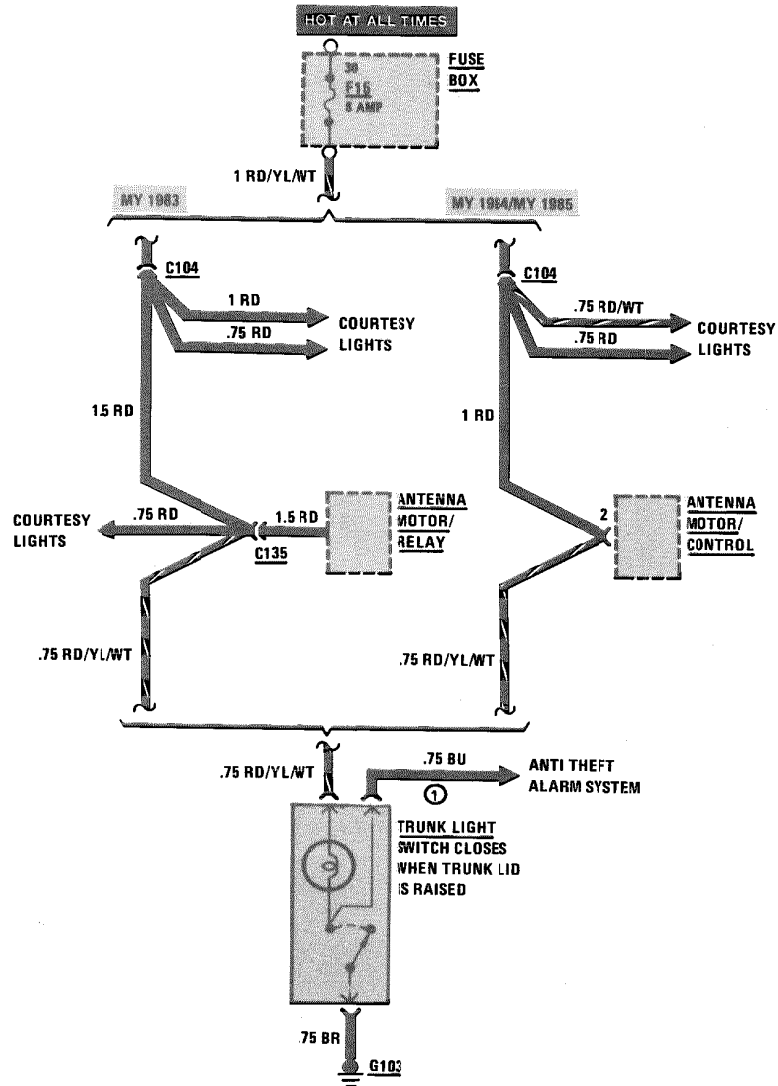


REVISIONS: ① AS OF MODEL YEAR 1984

TRUNK LIGHT/REAR CIGAR LIGHTERS

(For Component Locations See Page 216)

MY 1984 / MY 1985
380/500 SEC

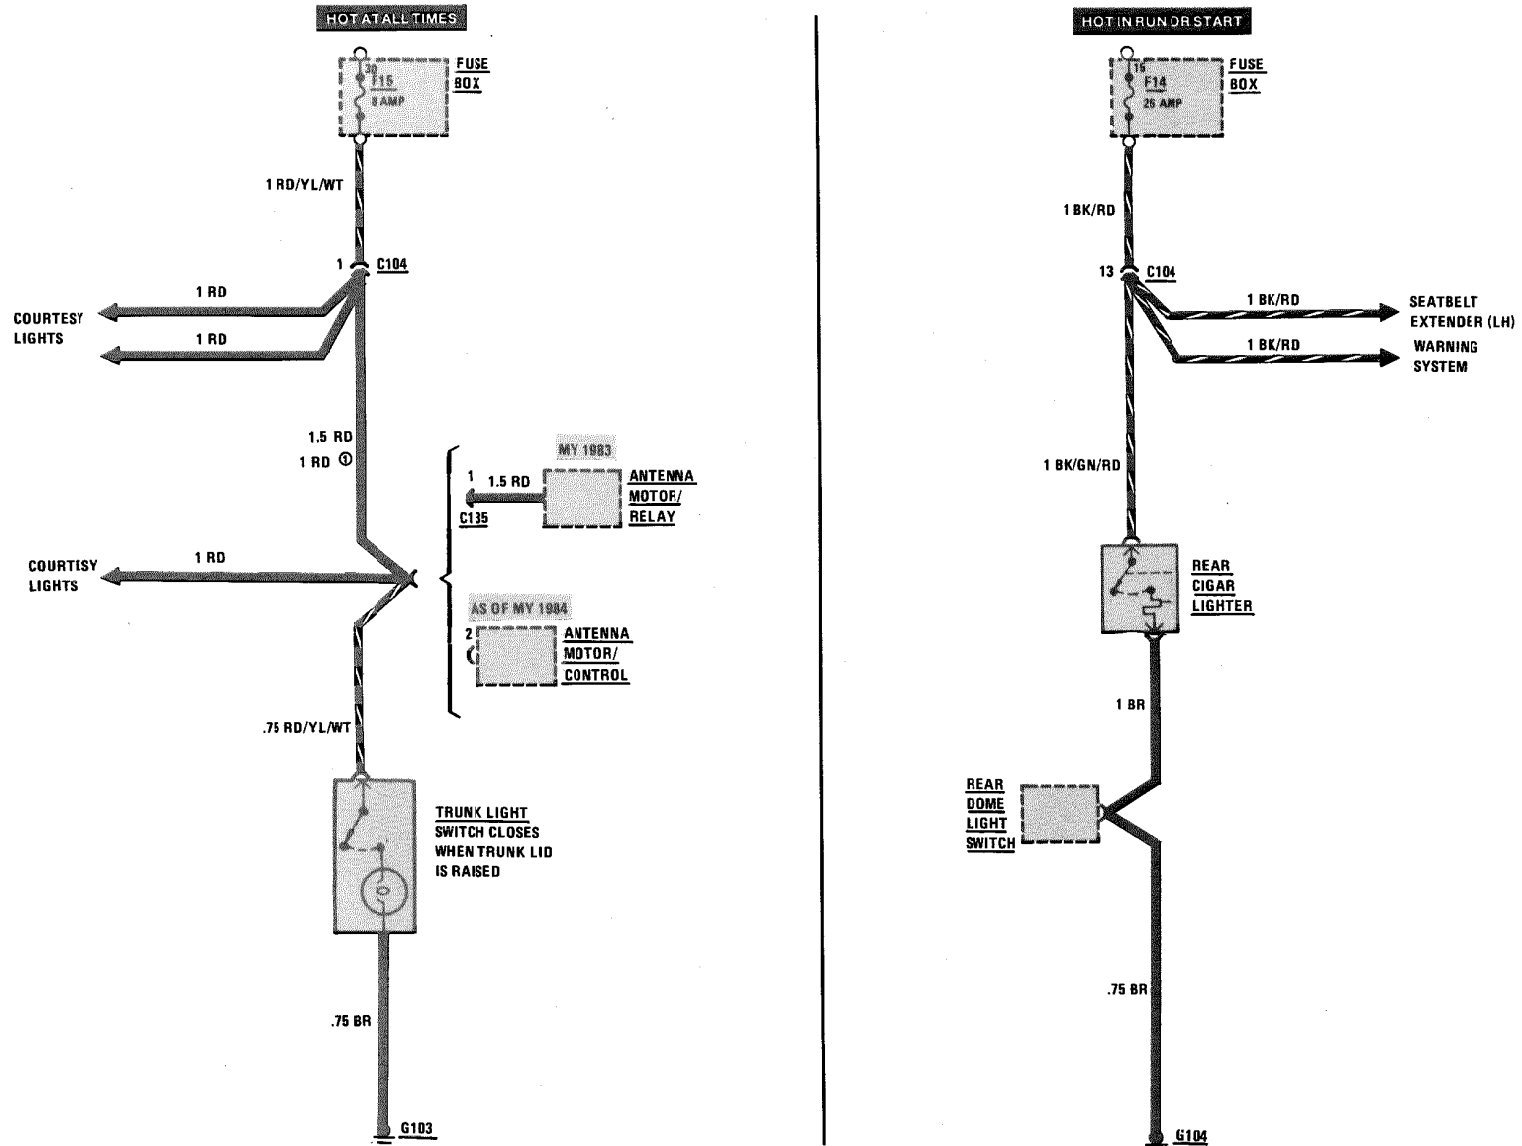

REVISIONS: ① AS OF MODEL YEAR 1984

THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

4/86

126.032/.037/.044

149




REVISIONS:

ANTI LOCK BRAKE SYSTEM

MY 1985

(For Component Locations See Page 201)

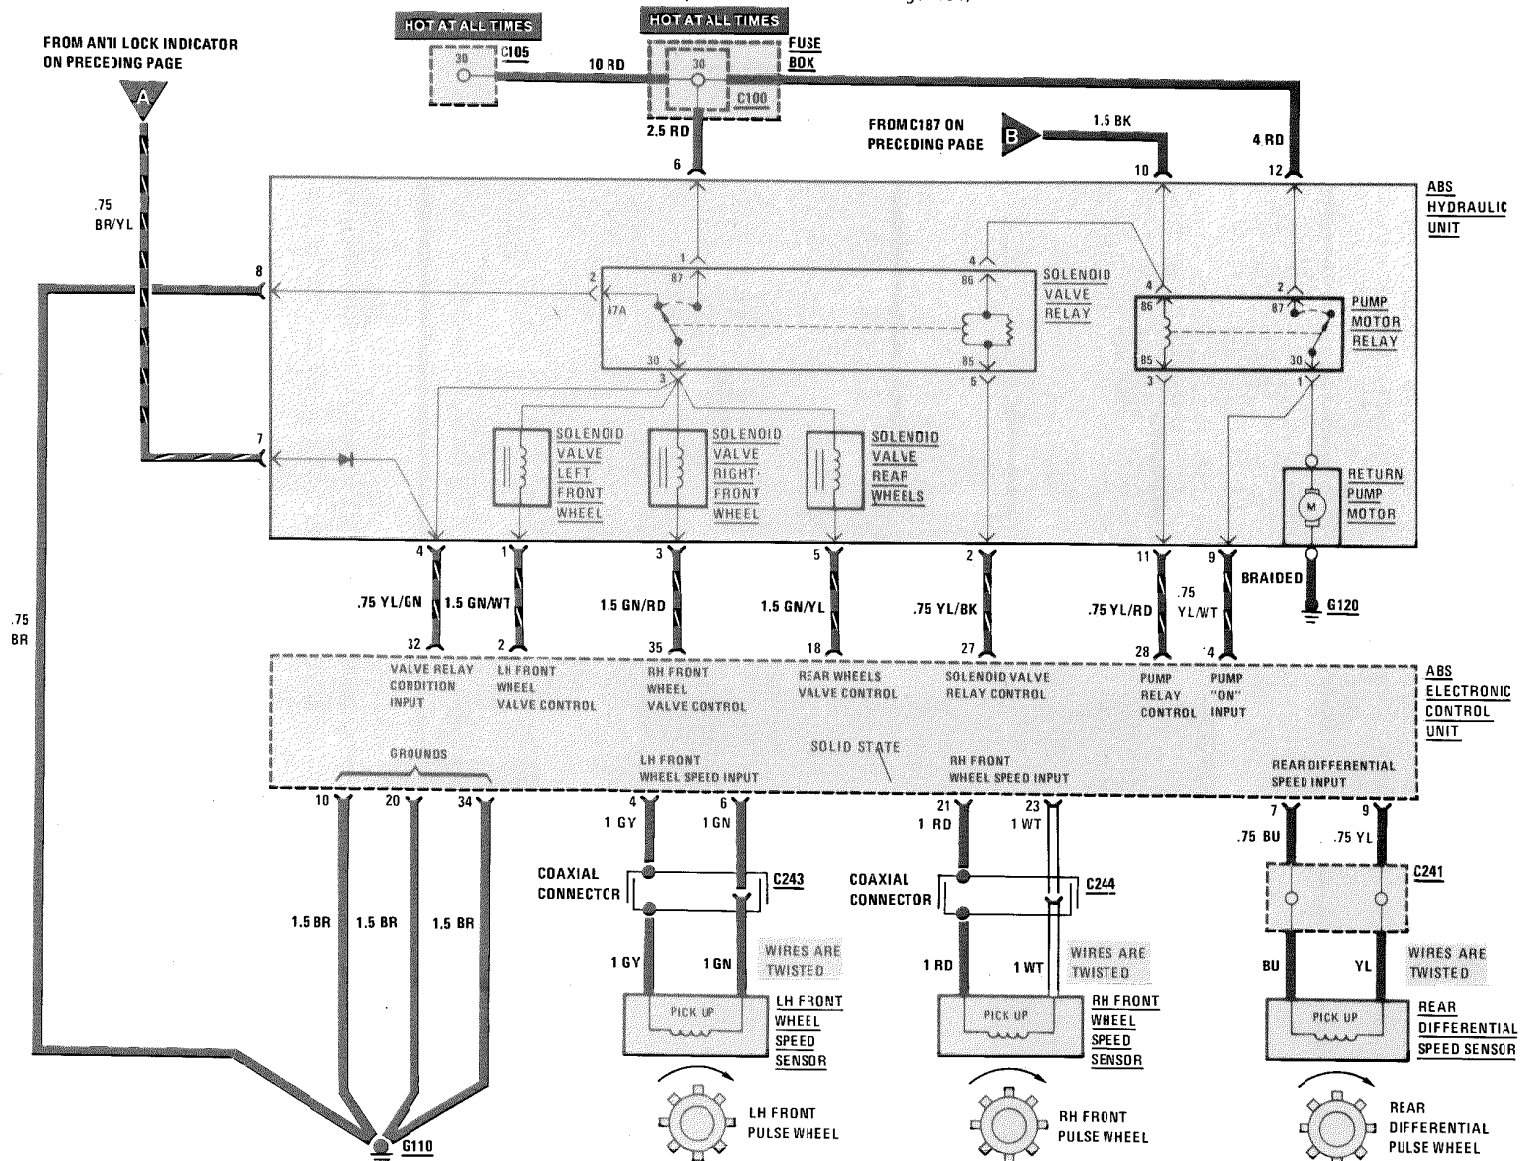

REVISIONS:


150

126.032/.037/.044

4/86

MY 1984

1187

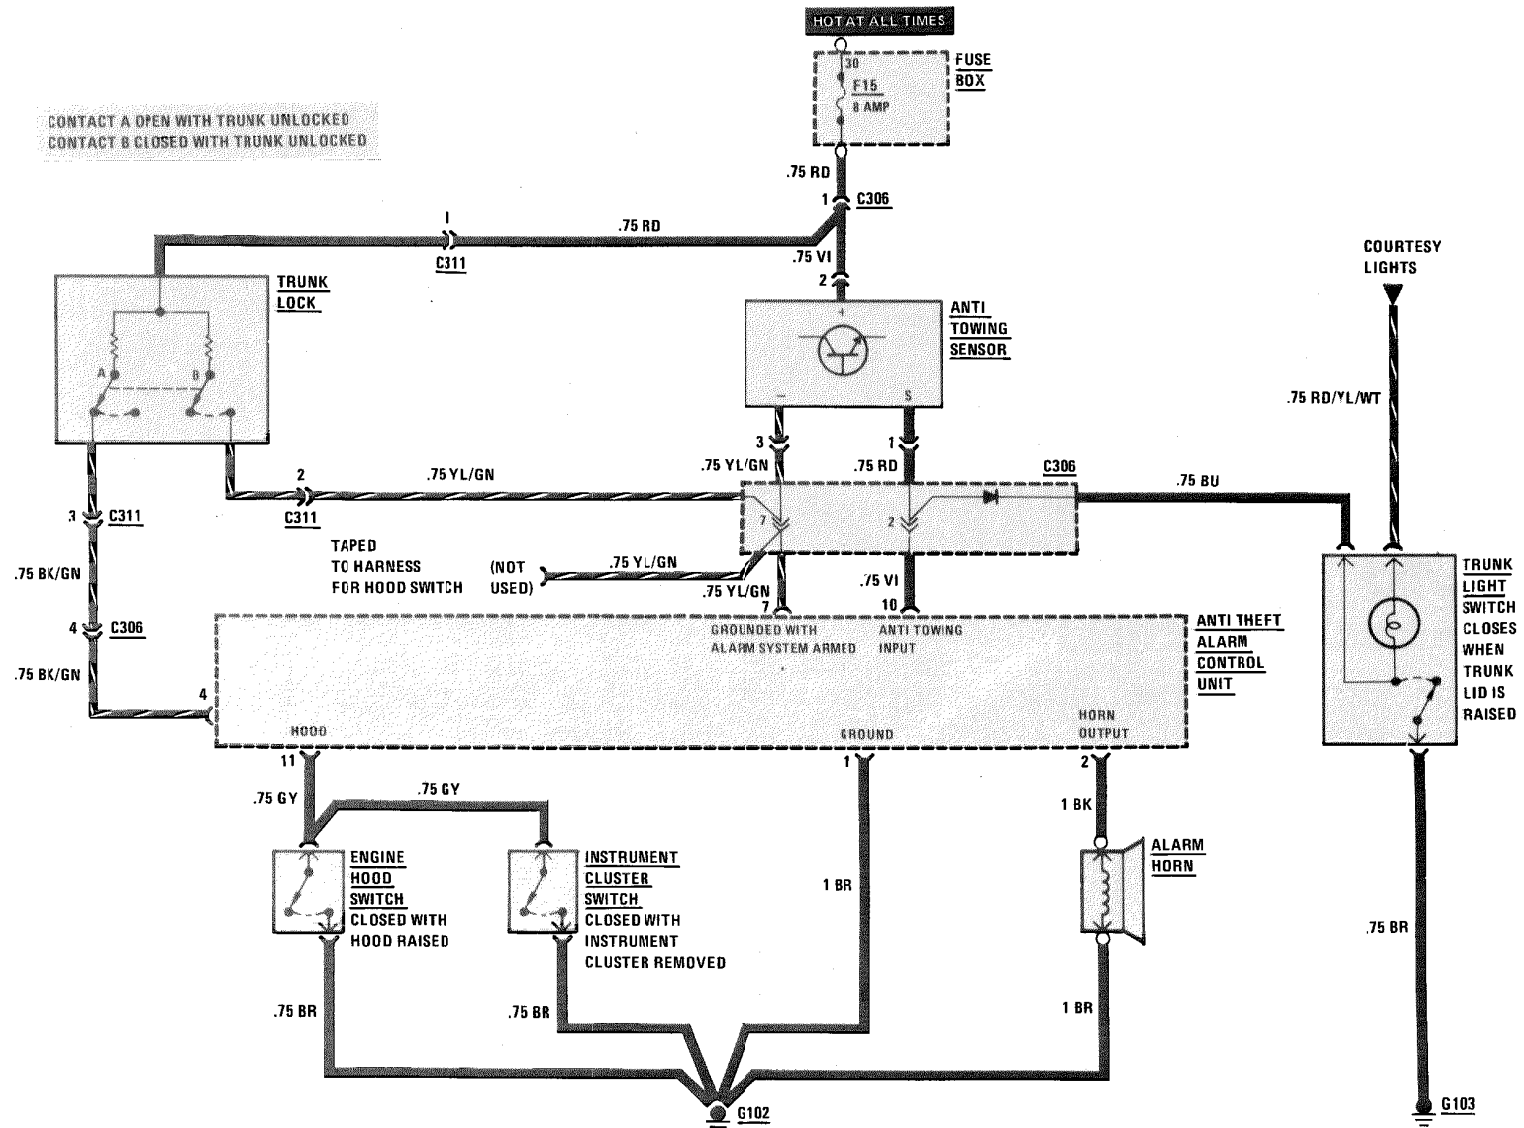

REVISIONS:


126.032/.037/.044

150/1

ANTI THEFT ALARM SYSTEM

(For Component Locations See Page 201)

MY 1984

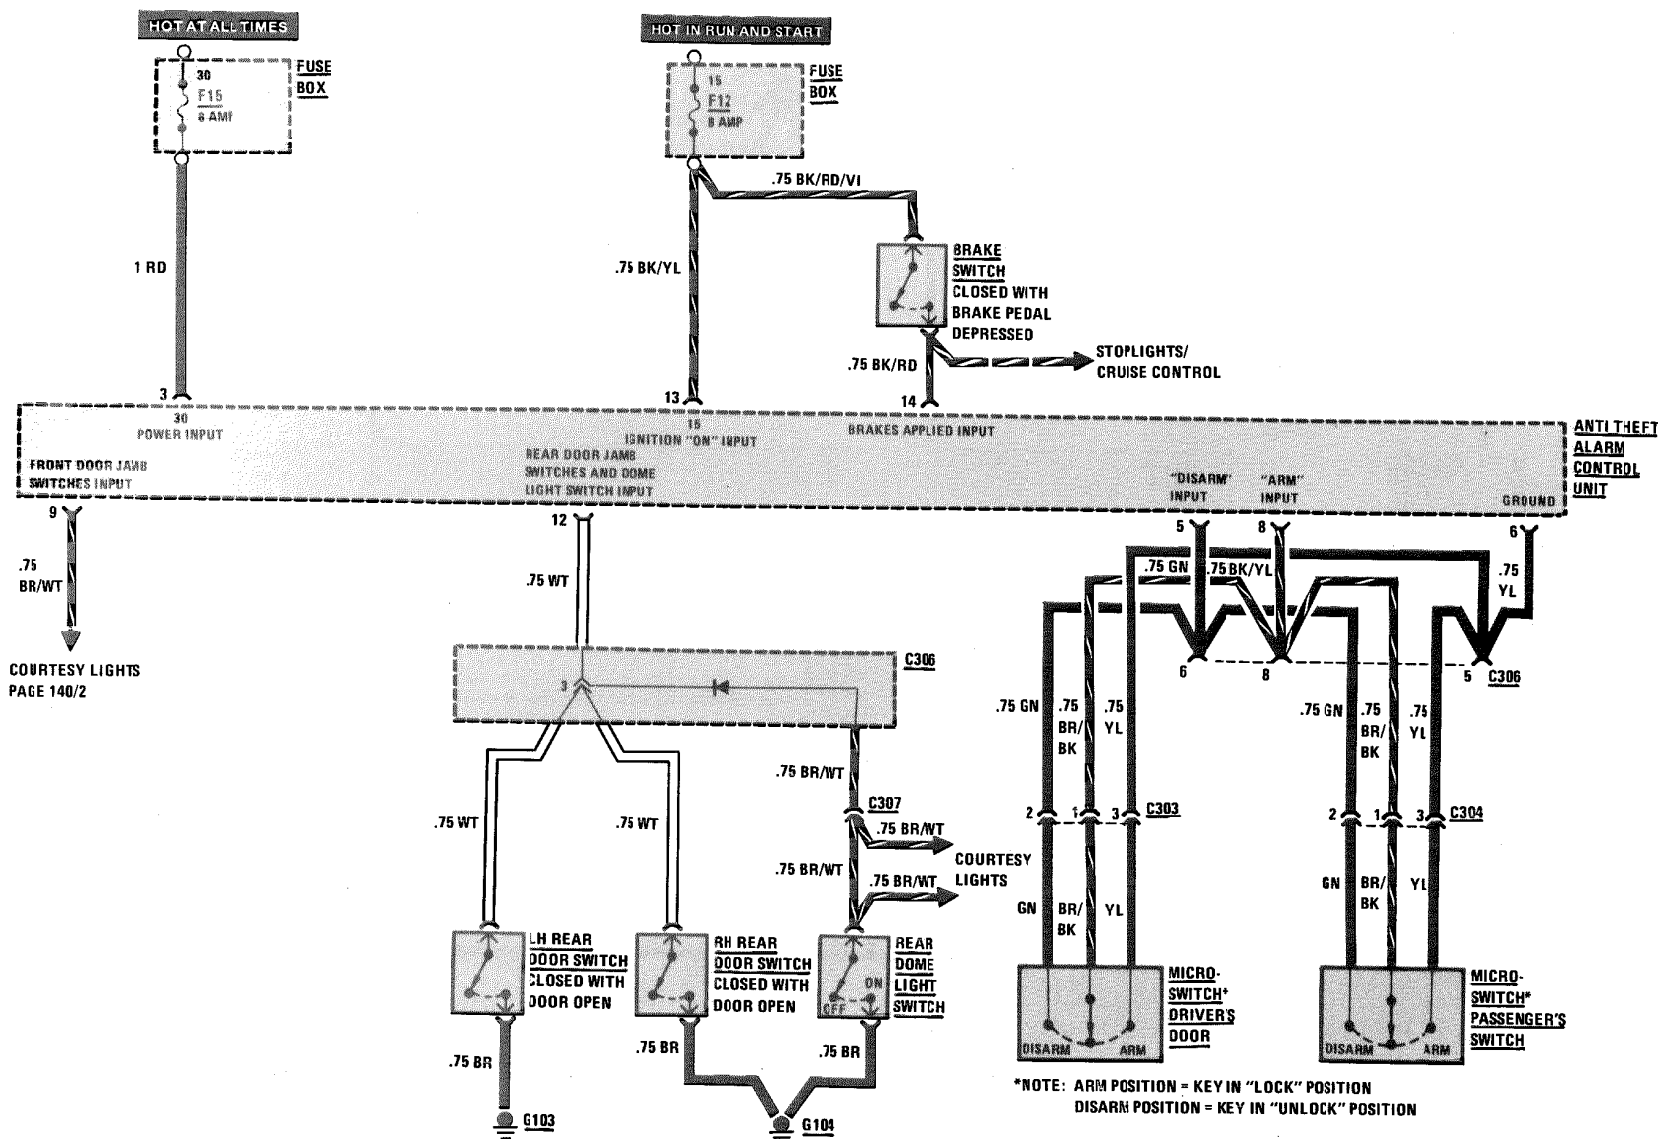

REVISIONS:

150/2

 
126.032/.037/.044

1/87

1187

126.032/.037/.044

151




*NOTE: ARM POSITION = KEY IN "LOCK" POSITION
DISARM POSITION = KEY IN "UNLOCK" POSITION

ANTI THEFT ALARM SYSTEM

(For Component Locations See Page 201)

MY 1985

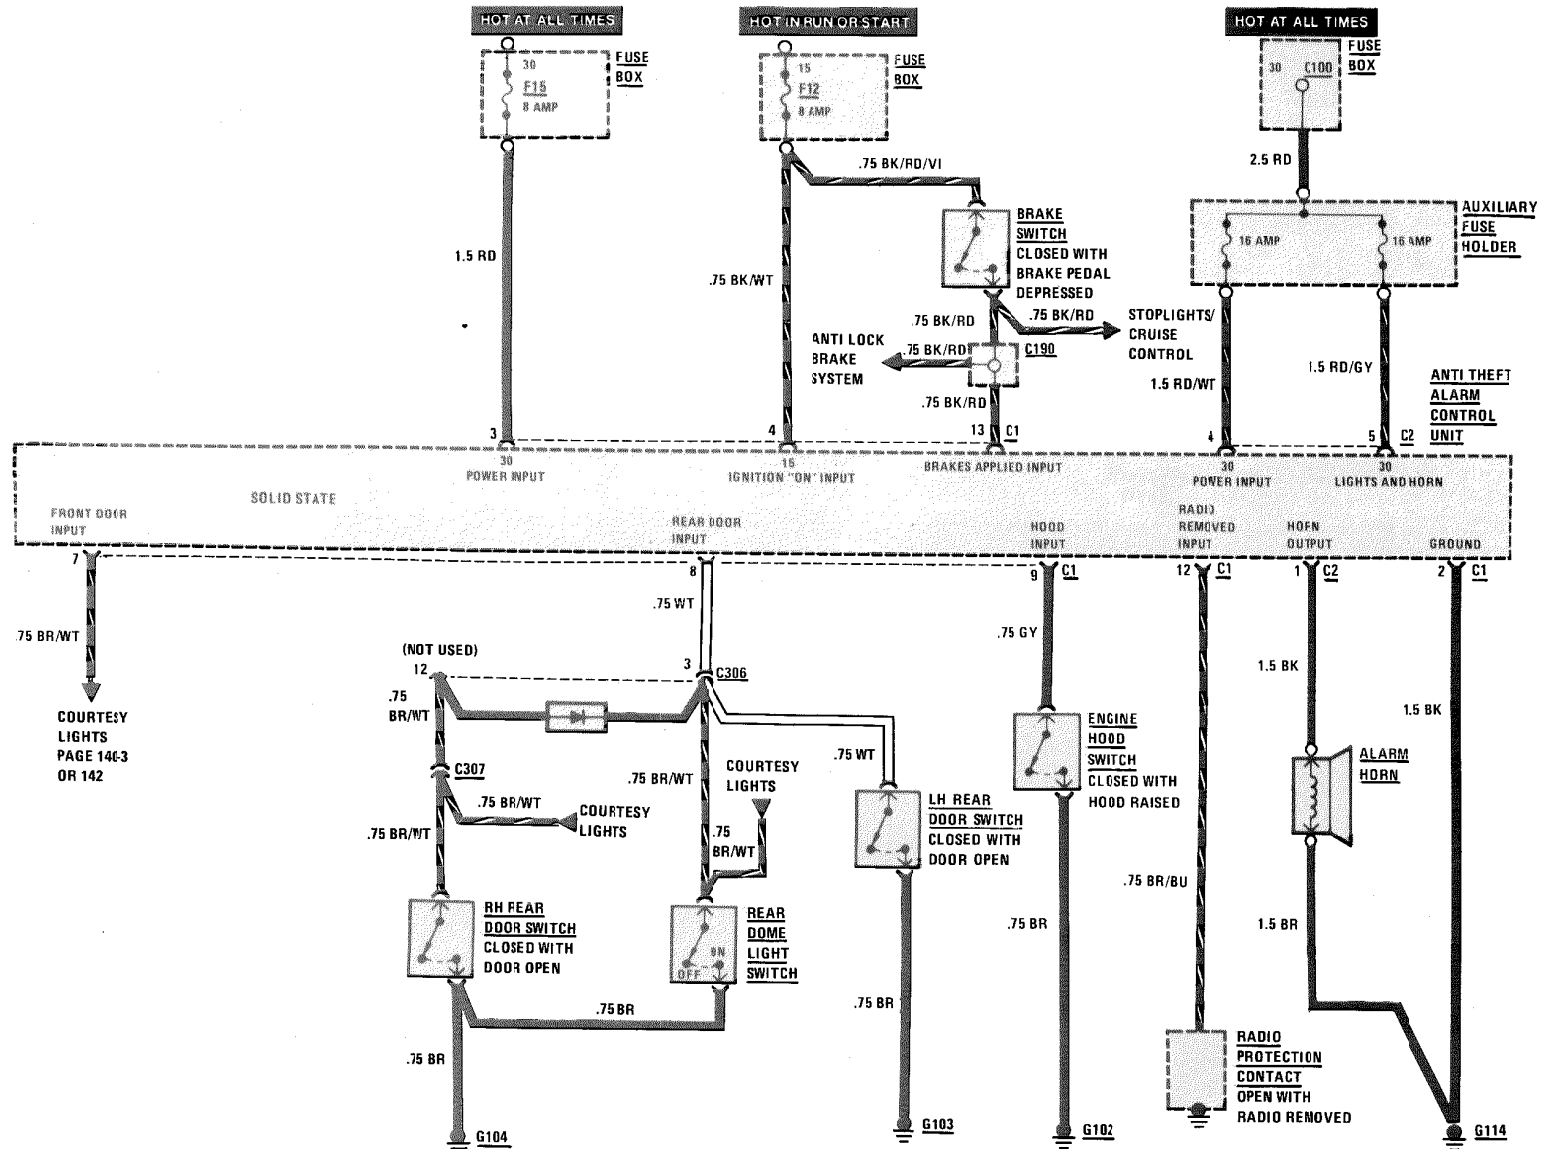


REVISIONS

ANTI THEFT ALARM SYSTEM

(For Component Locations See Page.201)

MY 1985

4/86

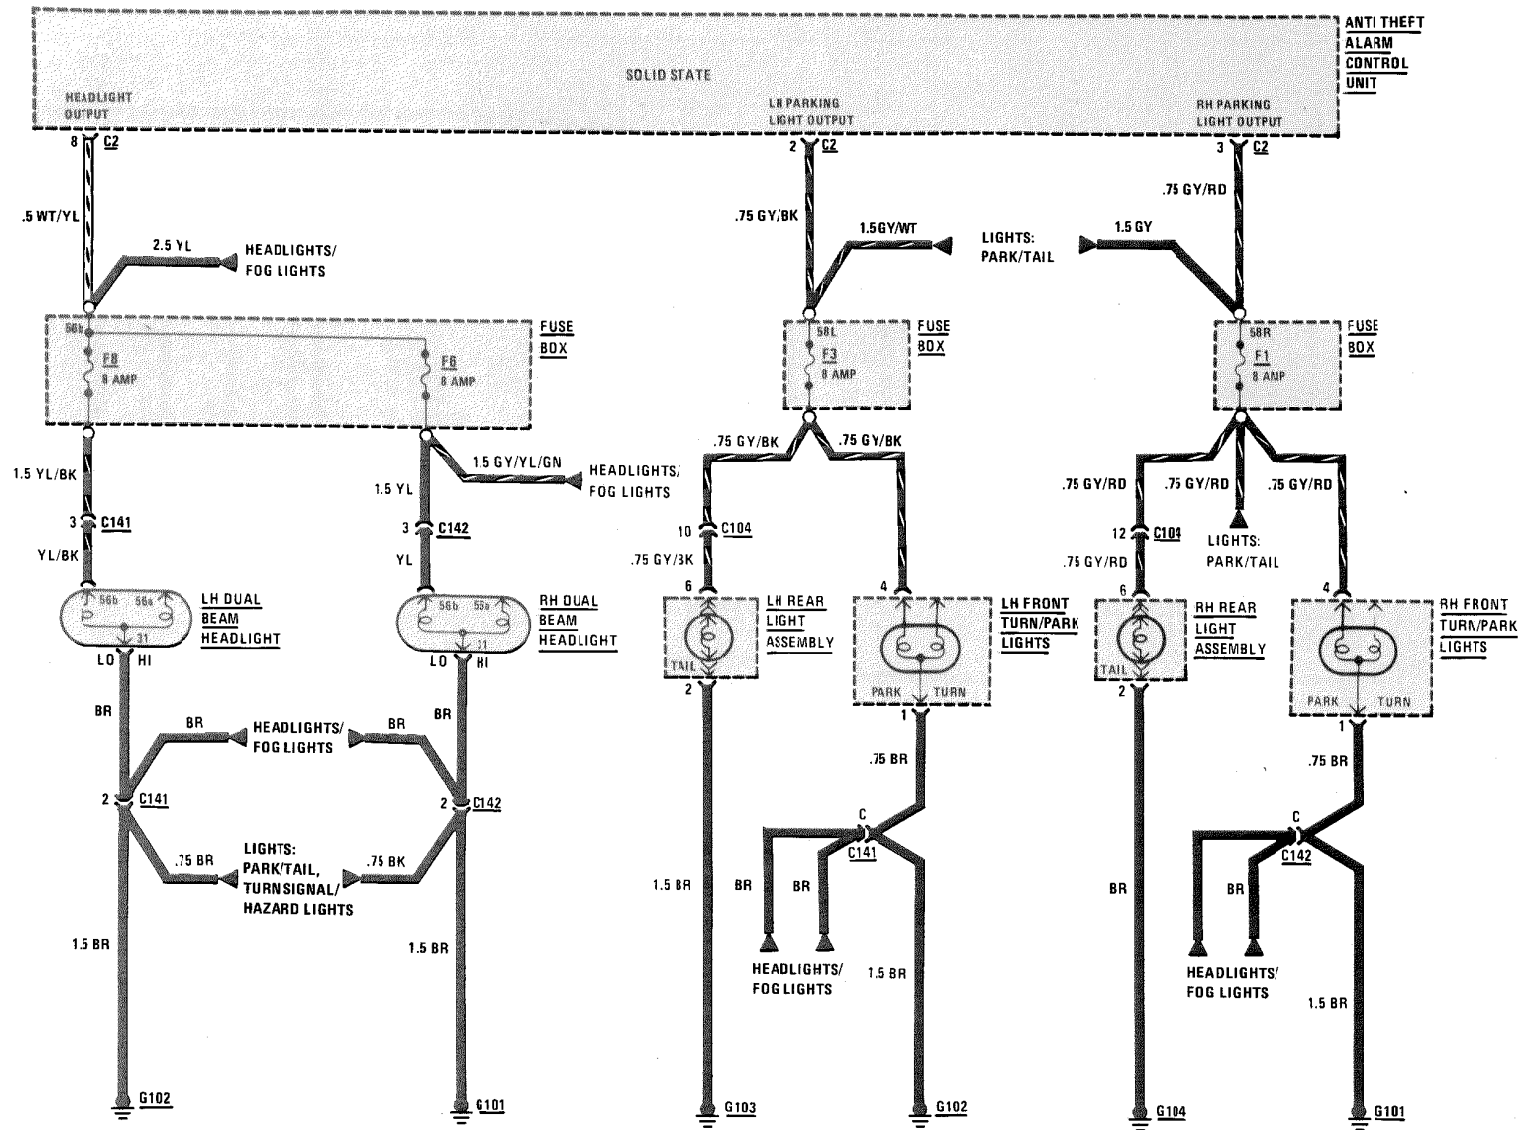


REVISIONS:

126.032/.037/.044

153

GROUND DISTRIBUTION


MY 1983/MY 1984/MY 1985

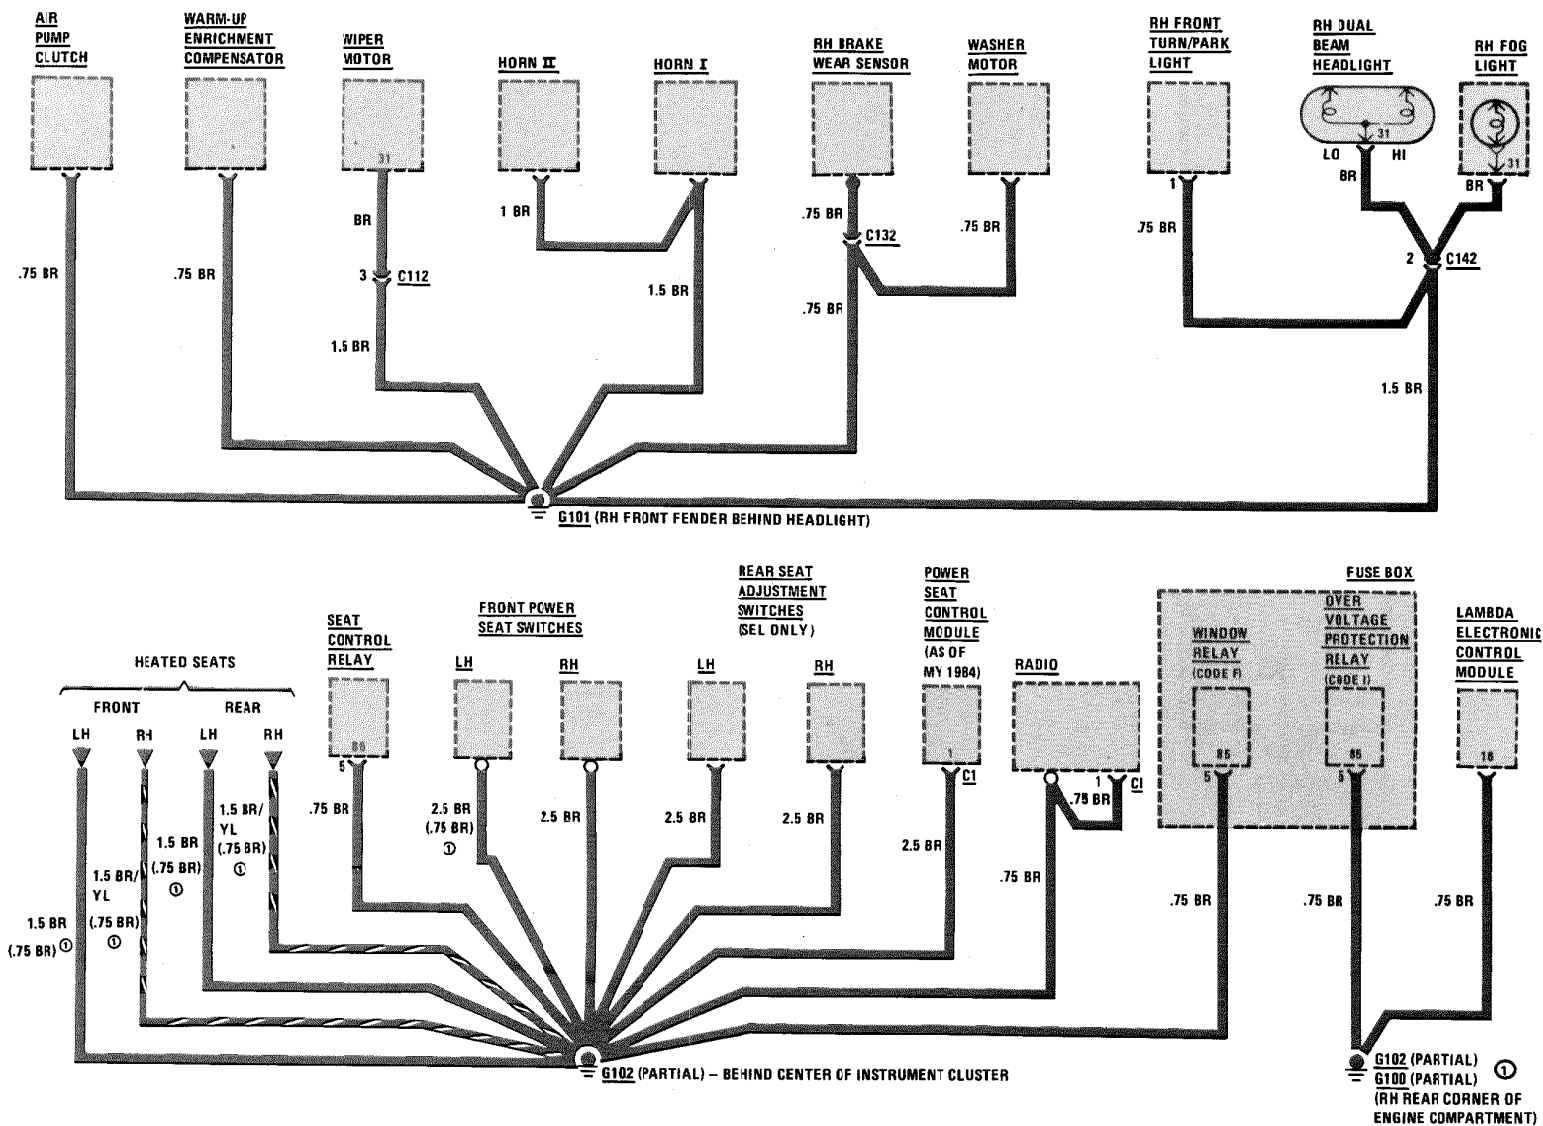

REVISIONS: ① AS OF MODEL YEAR 1985

GROUND DISTRIBUTION

MY 1983/MY 1984/MY 1985

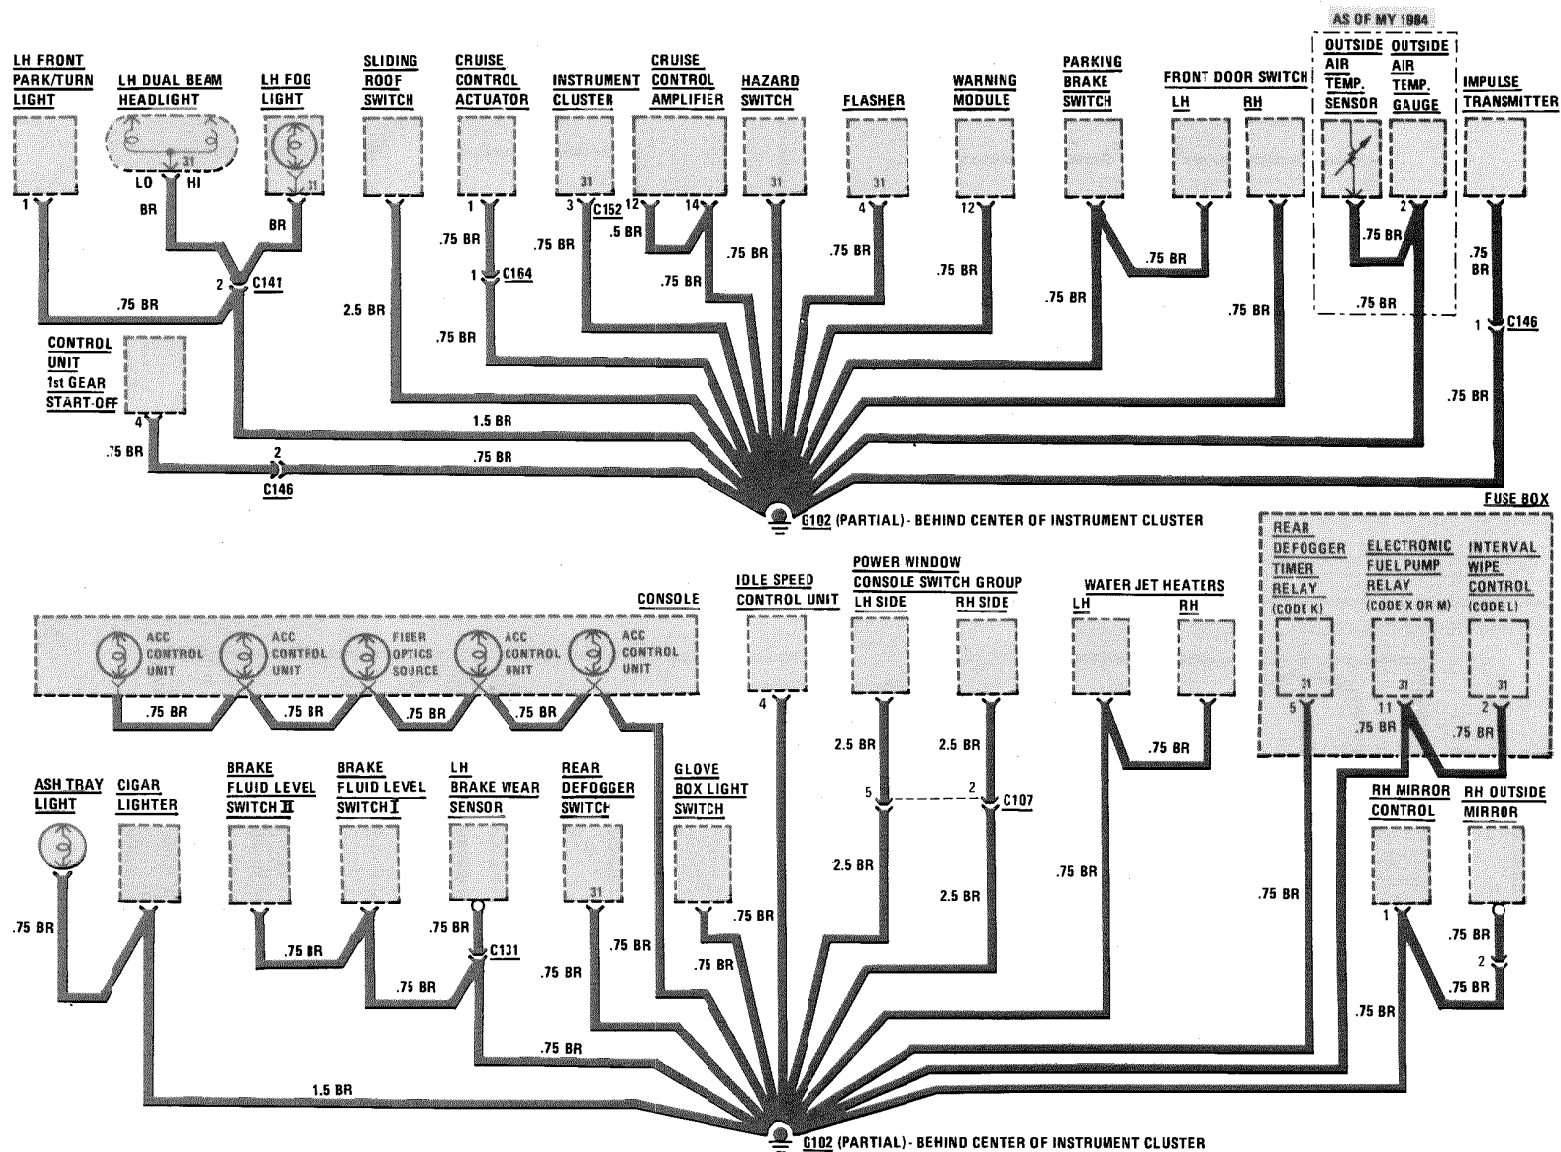


REVISIONS:


GROUND DISTRIBUTION

MY 1983/MY 1984/MY 1985


380 SE/SEL/SEC, 500 SEL/SEC

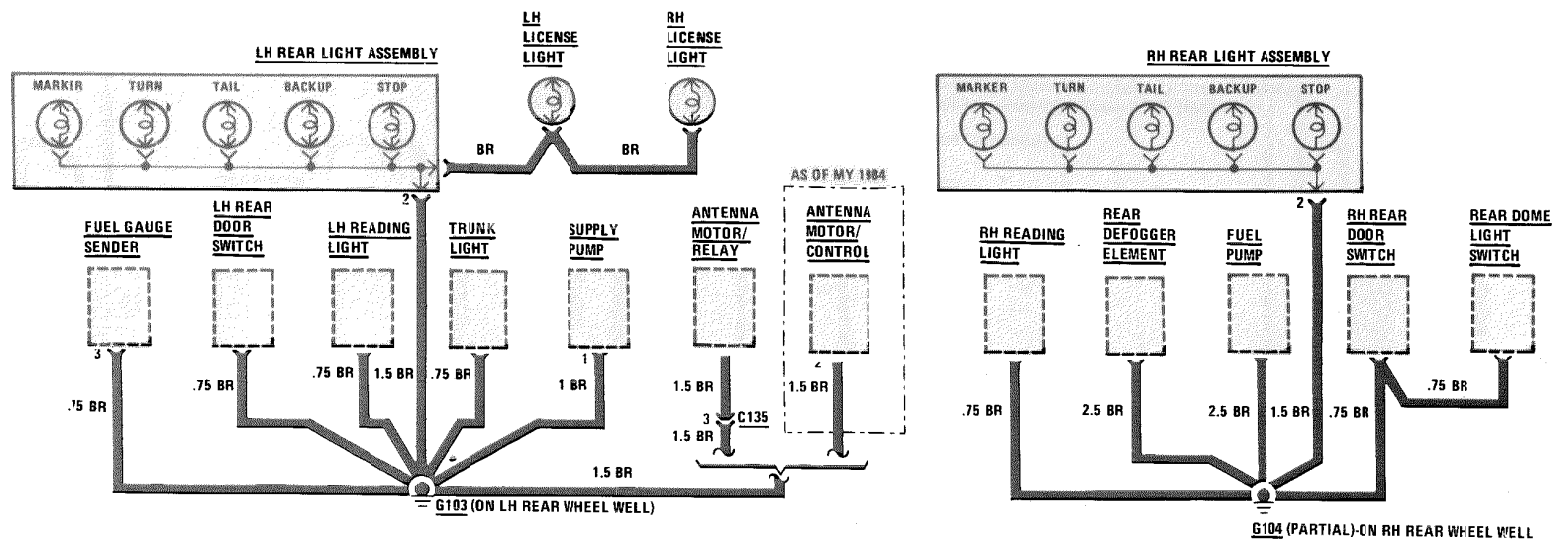

380 SE, 500 SEL/SEC AS OF MY 1984

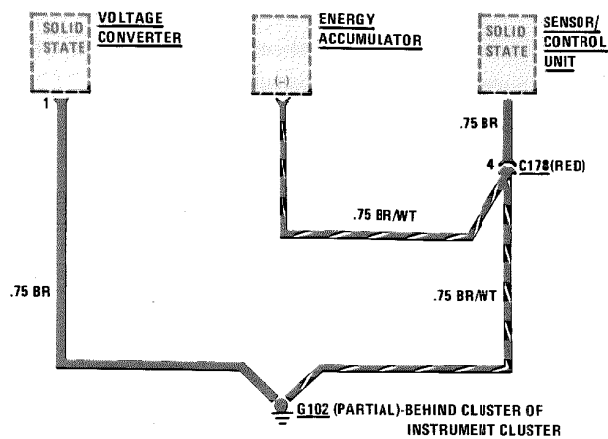

ALL MODELS

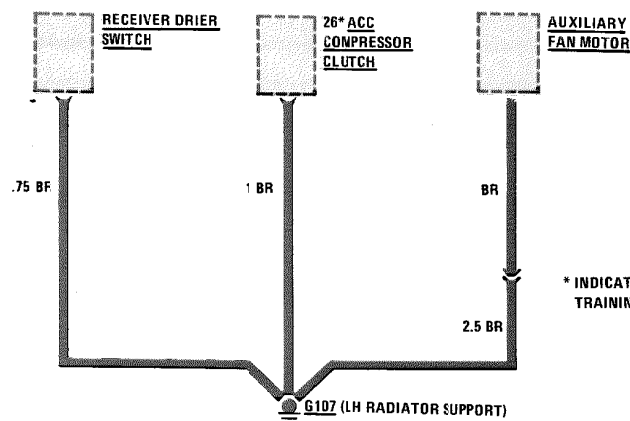



* INDICATES TRAINING NUMBER

REVISIONS:

GROUND DISTRIBUTION

MY 1983/ MY 1984/ MY 1985

380/500 SEC

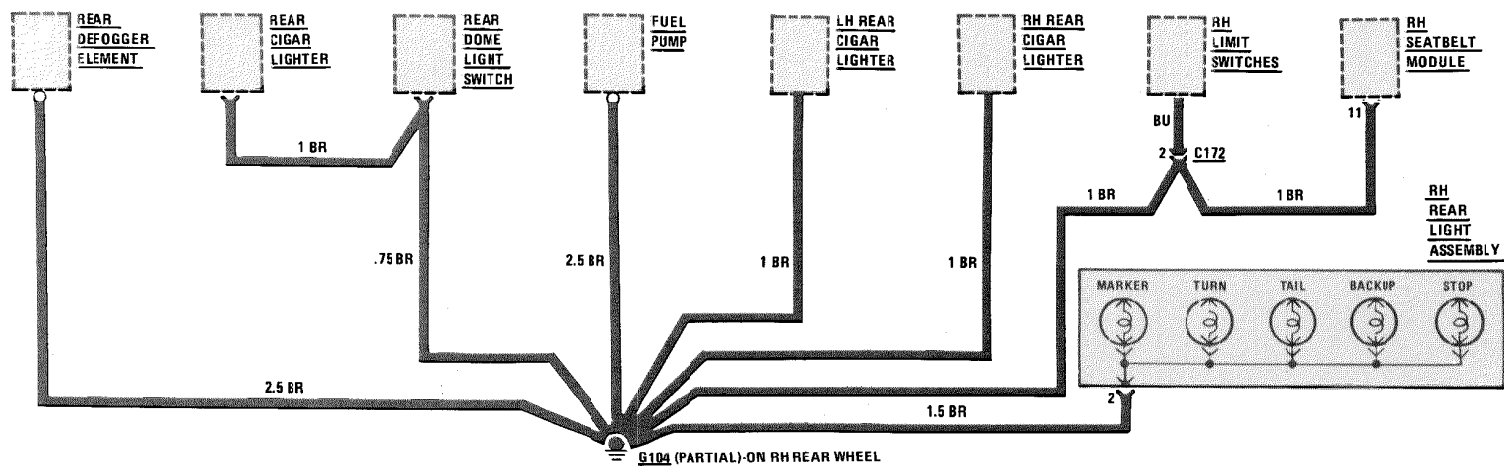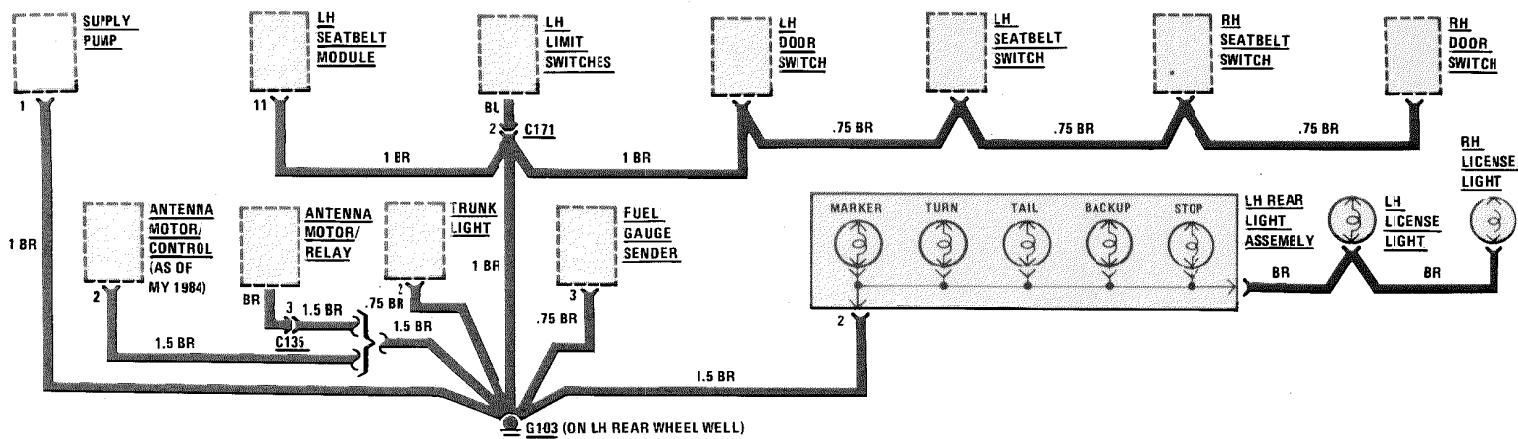

REVISIONS:

COMPONENT LOCATIONS

ANTI LOCK BRAKE SYSTEM

		Page-Figure
ABS Electronic Control Unit . . .	Center of components compartment, engine compartment.	209-2
ABS Hydraulic Unit	LH front corner of engine compartment.	207-4
Battery	RH rear corner of engine compartment	
Brake Switch	Top of brake pedal support	
Fuse Box	LH rear corner of engine compartment.	203-2
Lambda Electronic Control Module	RH side of passenger's footwell	218-2
Rear Differential Speed Sensor.	In rear differential, under car	211-2
Wheel Speed Sensor.	Inside of each respective wheel	212-1
C105 (2 terminal)	RH front wheel well	209-3
C187 (1 terminal)	Under fuse box	208-1
C190 (1 terminal)	Behind instrument cluster	216-2
C241 (2 pir).	Under RH side of rear seat	220-4
C243 (2 pir).	LH rear of engine compartment	
C244 (2 pir).	RH rear of engine compartment	209-3
G100	RH rear corner of engine compartment	205-1
G110	RH front wheel well	
G120	On ABS hydraulic unit support	

ANTI THEFT ALARM SYSTEM

		Page-Figure
Alarm Horn	RH front of engine compartment	208-2
Antenna Motor/Control.	LH rear wheel well	221-1
Anti Theft Alarm Control Unit	Front of passenger's footwell	219-1
Anti Towing Sensor.	LH front corner of trunk	221-3
Auxiliary Fuse Holder.	LH side of engine compartment	209-1
Brake Switch	Top of brake pedal support	
Door Actuators	In each door	
Door Switches	In each door jamb.	219-4
Engine Hood Switch	RH rear of engine compartment	209-2
Fuse Box.	LH rear corner of engine compartment.	203-2
Instrument Cluster Switch	Behind instrument cluster	
Microswitches	In each front door, near door handle	
Radio Protection Contact	Above radio.	218-1
Supply Pump	In spare tire well.	221-5

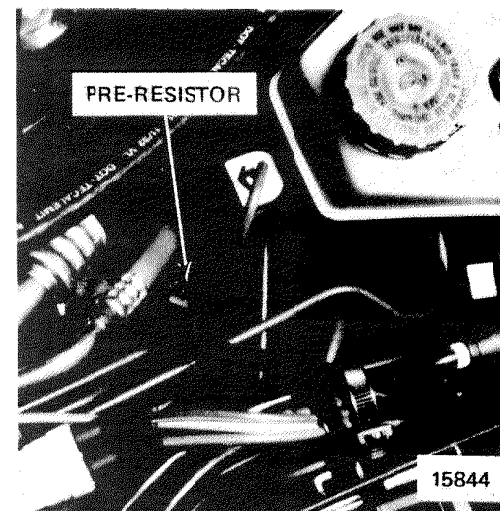


Figure 1- Under Power Brake Booster

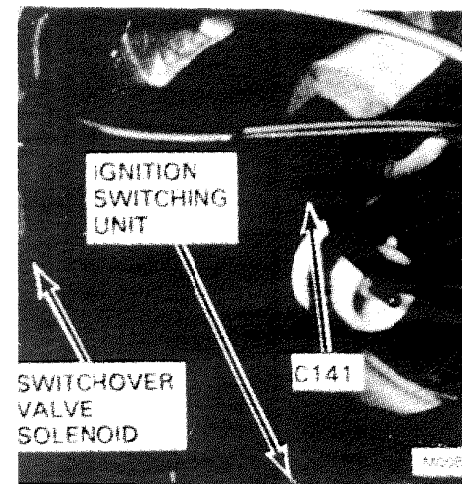


Figure 2- LH Front Corner of Engine Compartment

REVISIONS:

COMPONENT LOCATIONS

ANTI THEFT ALARM SYSTEM (Continued)

Page-Figure

Trunk Lock	In center of end panel	
C104 (14 pin)	LH side of driver's footwell	214-2
C141 (4 pin)	Behind LH headlights	201-2
C142 (4 pin)	Behind RH headlights	
C190 (1 terminal)	Behind instrument cluster	216-2
C302 (3 pin)	In trunk, near supply pump	
C303 (3 pin)	In driver's door	220-2
C304 (3 pin)	At passenger's door handle	220-2
C306 (12 pin)	Passenger's footwell area	
C311 (3 pin)	In center of end panel	
G101	On radiator support, near RH headlights	206-1
G102	Behind instrument cluster	215-2
G103	LH rear wheel well	221-1
G104	RH rear wheel well	220-6
G114	Top rear of engine	

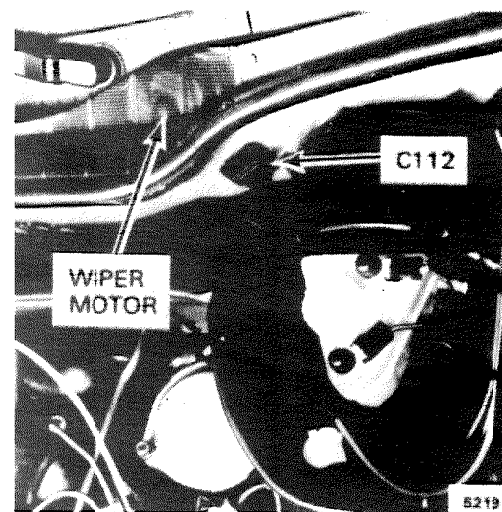


Figure 3 - LH Rear Corner of Engine Compartment

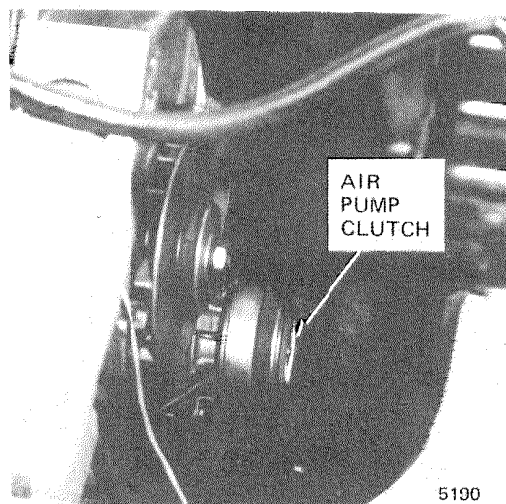


Figure 1 - Lower Front of Engine

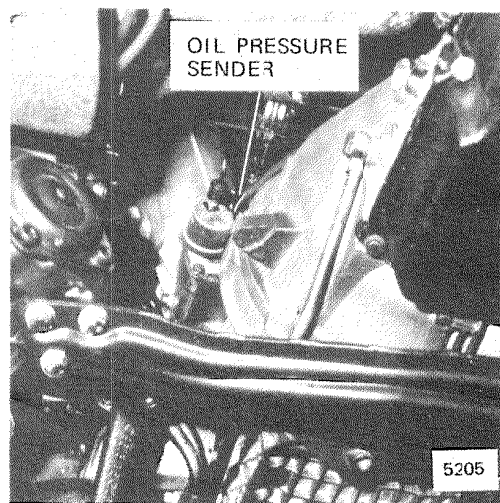


Figure 2 - Lower Rear LH Side of Engine

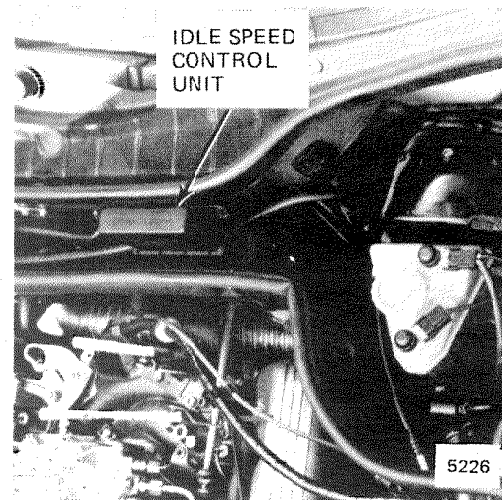


Figure 4 - Rear Center of Engine Compartment

REVISIONS:

COMPONENT LOCATIONS

AUXILIARY FAN

Auxiliary Fan Motor	Front of radiator	
Auxiliary Fan Temperature Switch	On water outlet	206-4
Fuse Box	LH rear corner of engine compartment	203-2
Pre-Resistor	Components compartment, below fuse box	201-1
Receiver Drier Switch	Behind LH headlights	204-1
G107	LH radiator support	205-2

BACKUP LIGHTS/HORNS/GLOVE BOX LIGHT

Fuse Box	LH rear corner of engine compartment	203-2
Horn Switch	In steering wheel	
Slip Ring Assembly	Underside of steering wheel	
Starter Lockout/Backup Light Switch	LH side of transmission	210-1
C104 (14 pin)	LH side of driver's footwell	214-2
C106 (14 pin)	LH side of driver's footwell	214-2
C146 (6 pin)	RH side of driver's footwell	214-1
G101	On radiator support, near RH headlights	206-1
G102	Behind instrument cluster	215-2
G103	LH rear wheel well	221-1
G104	RH rear wheel well	220-6

Page-Figure

Page-Figure

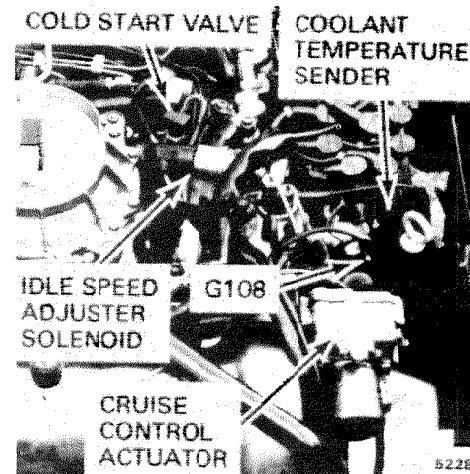


Figure 1 - Top Front of Engine

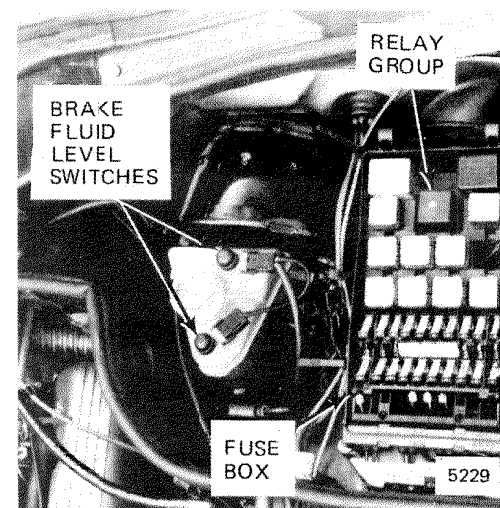


Figure 2 - LH Rear Corner of Engine Compartment

REVISIONS:

COMPONENT LOCATIONS

CENTRAL LOCKING SYSTEM

		Page-Figure
Door Actuators	In each door	
Fuse Box.	LH rear corner of engine compartment.	203-2
Key Warning Switch	Part of ignition switch	212-2
Supply Pump	In spare tire well.	221-5
Trunk Lock	In center of end panel	
C302 (3 pin)	In trunk, near supply pump	
C306 (12 pin)	Passenger's footwell area	
G102	Behind instrument cluster	215-2
G103	LH rear wheel well	221-1
S186	Central locking harness	
S187	Central locking harness	

CHARGING SYSTEM

		Page-Figure
Battery	RH rear corner of engine compartment	
Brake Fluid Level Switches ...	LH rear corner of engine compartment, at brake fluid reservoir	203-2
Fuse Box.	LH rear corner of engine compartment.	203-2
Ignition Switch	In dash panel, right of steering column	212-2
Parking Brake Switch	On parking brake support	
Starter Assembly	Lower RH rear of engine	
Warning Module	LH side of driver's footwell	214-2
C105 (2 terminal)	RH front wheel well	209-3
G100	RH rear corner of engine compartment	205-1

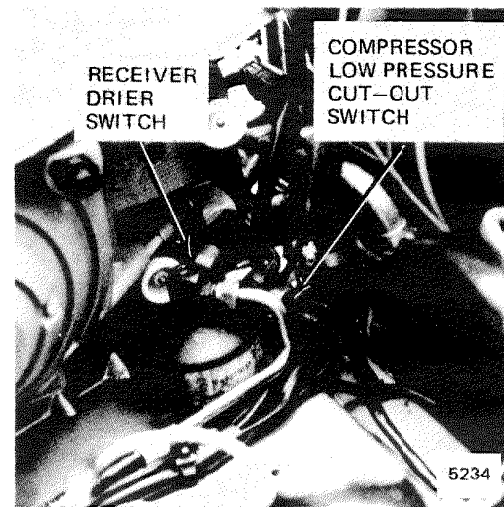


Figure 1 - Behind LH Headlights

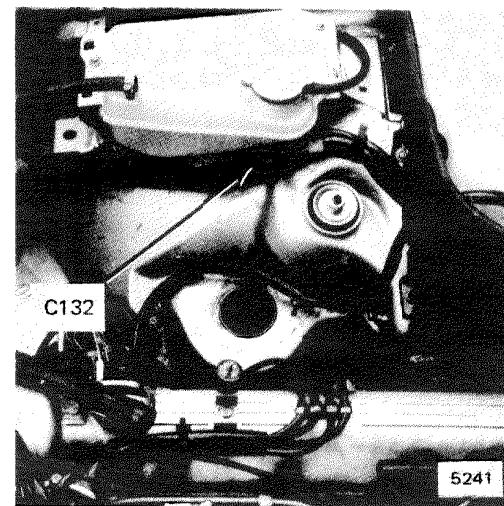


Figure 2 - RH Front Wheel Well

REVISIONS:

COMPONENT LOCATIONS

COURTESY LIGHTS

		Page-Figure
Antenna Motor/Control	LH rear wheel well	221-1
Antenna Motor/Relay	LH rear wheel well	221-1
Anti Theft Alarm Control Unit	Front of passenger's footwell	219-1
Door Switches	In each door jamb	219-4
Fuse Box	LH rear corner of engine compartment	203-2
Limit Switches	On extender arm, behind rear side panels	221-2
Parking Brake Switch	On parking brake support	
Seatbelt Modules	Behind LH and RH rear side panels	221-4
Seatbelt Switches	Part of seatbelt buckles	
Switchover Valve	LH side of driver's footwell	214-2
Warning Module	LH side of driver's footwell	214-2
C104 (14 pin)	LH side of driver's footwell	214-2
C135 (6 pin)	Above LH rear wheel well	221-1
C156 (1 pin)	Behind LH front door switch	
C157 (1 pin)	Behind LH front door switch	
C171 (8 pin)	Behind LH rear side panel	221-4
C200 (4 pin)	At LH kick panel	
C201 (4 pin)	At RH kick panel	
C306 (12 pin)	Passenger's footwell area	
G102	Behind instrument cluster	215-2
G103	LH rear wheel well	221-1
G104	RH rear wheel well	220-6
G111	Center of windshield header	217-1

LAMBDA CONTROL/DIAGNOSTIC SOCKET/AIR INJECTION MANAGEMENT/IDLE SPEED STABILIZATION

		Page-Figure
Acceleration Vacuum Switch ..	RH front corner of engine compartment	208-2
Air Pump Clutch	Below alternator	202-1
Battery	RH rear corner of engine compartment	
Coolant Temperature Switch ..	Top RH rear of engine, under tube	206-3
Diagnostic Socket	LH front wheel well	206-2
Frequency Valve	Left of throttle body	206-4
Fuse Box	LH rear corner of engine compartment	203-2
Idle Speed Adjuster Solenoid ..	Top of engine, at throttle body	203-1
Idle Speed Control Unit	Rear center of engine compartment	202-4

REVISIONS

Page-Figure

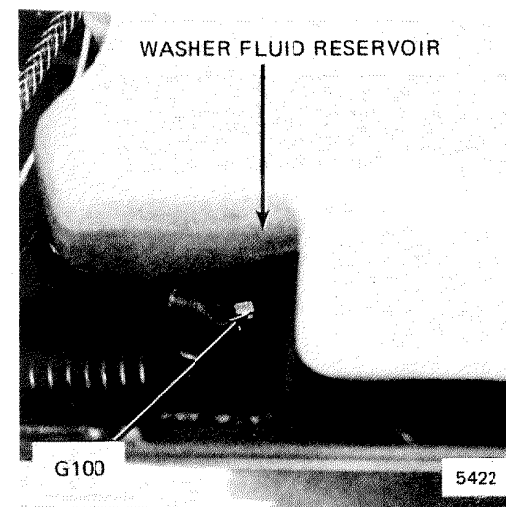


Figure 1- RH Inner Fender Panel, Near Battery

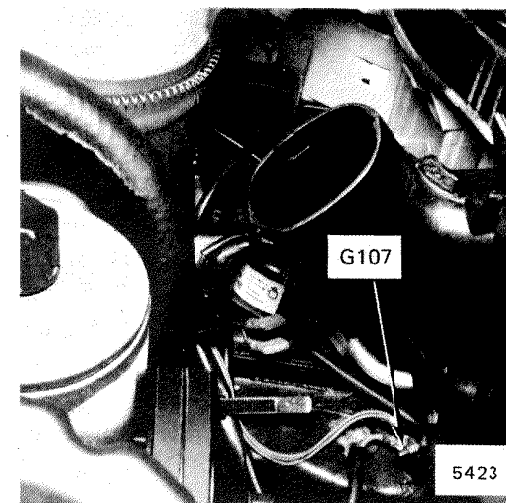


Figure 2 - Behind LH Headlights

COMPONENT LOCATIONS

LAMBDA CONTROL/DIAGNOSTIC SOCKET/AIR INJECTION MANAGEMENT/IDLE SPEED STABILIZATION (Continued)

Lambda Electronic Control

		Page-Figure
Module	RH side of passenger's footwell	218-2
Oil Temperature Switch	Next to oil filter	
Oxygen Sensor	Attached to catalytic converter	
Switchover Valve Solenoid	LH front wheel well, behind headlights	201-2
Throttle Switch	At throttle body	
C143 (2 pin)	Under car, behind RH front wheel well	
C144 (3 pin)	Below battery	
C187 (1 terminal)	Under fuse box	208-1
G100	RH rear corner of engine compartment	205-1
G101	On radiator support, near RH headlights	206-1
G102	Behind instrument cluster	215-2
G106	LH front wheel well	206-2
G108	Front top of engine, near ignition distributor ...	203-1

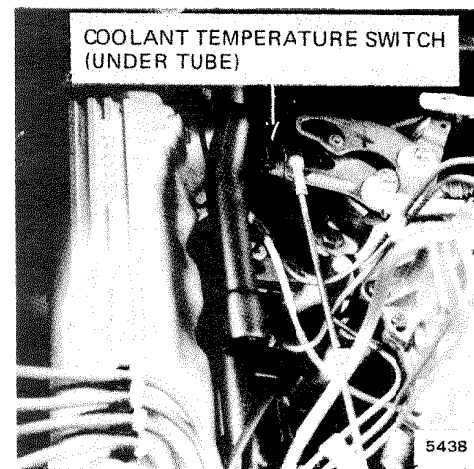


Figure 3- Top RH Rear of Engine

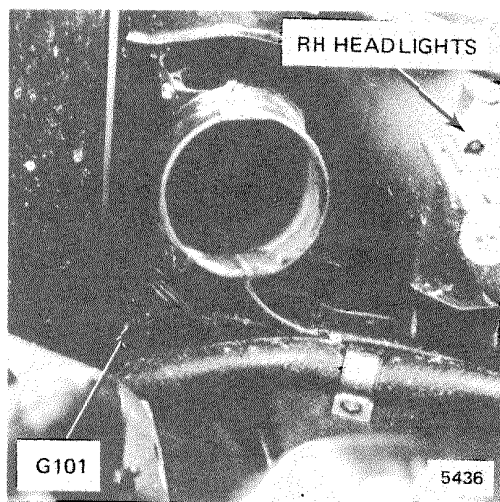


Figure 1- Left of RH Headlights

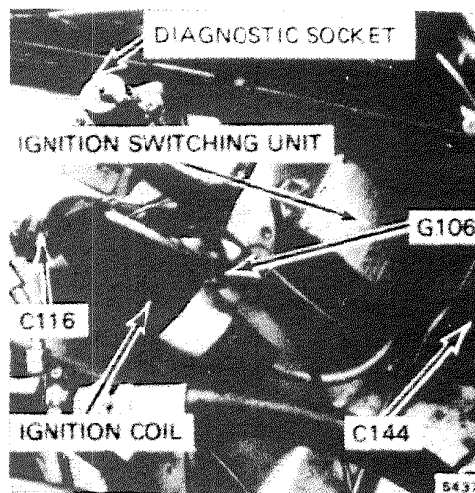


Figure 2- LH Front Wheel Well

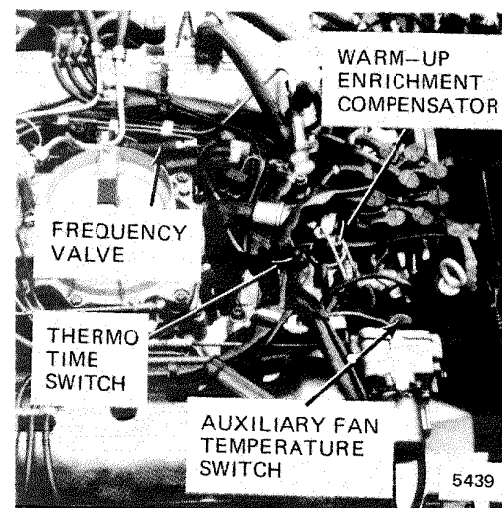


Figure 4- Top Front of Engine

REVISIONS:

COMPONENT LOCATIONS

FRONT CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

		Page-Figure
Antenna Motor/Control.....	LH rear wheel well	221-1
Antenna Motor/Relay	LH rear wheel well	221-1
Fuse Box.....	LH rear corner of engine compartment.....	203-2
C104 (14 pin).....	LH side of driver's footwell	214-2
C135 (6 pin).....	Above LH rear wheel well	221-1
G102	Behind instrument cluster	215-2
G103	LH rear wheel well	221-1
S101	Speaker harness	
S102	Speaker harness	

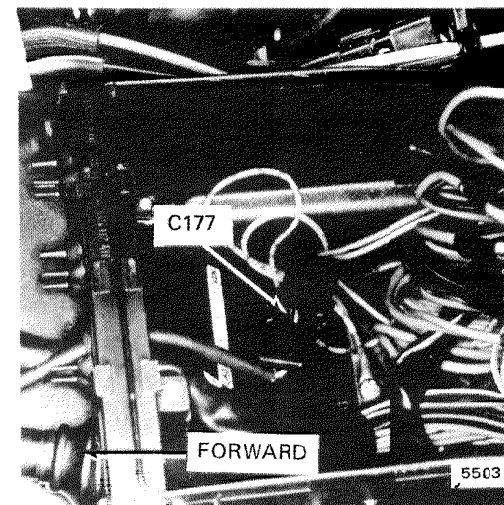


Figure 3 - Under Fuse Box

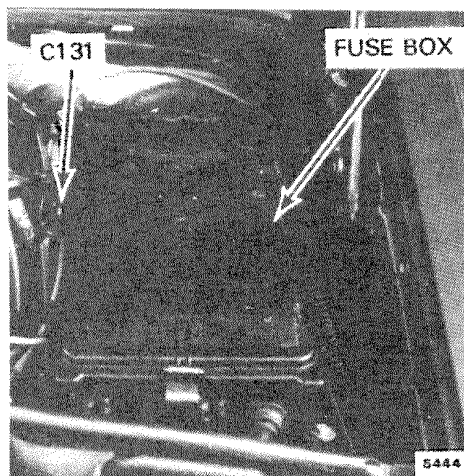


Figure 1 - LH Rear Corner of Engine Compartment

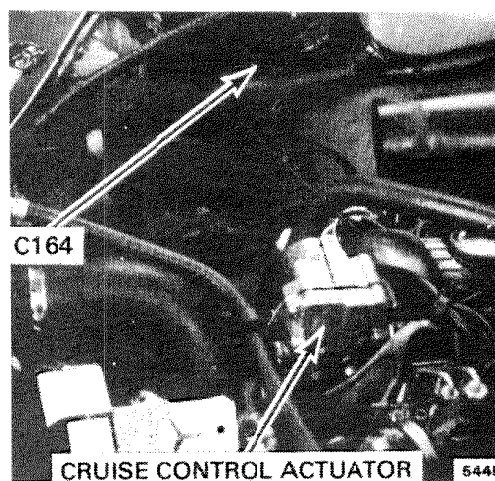


Figure 2 - RH Front Corner of Engine Compartment

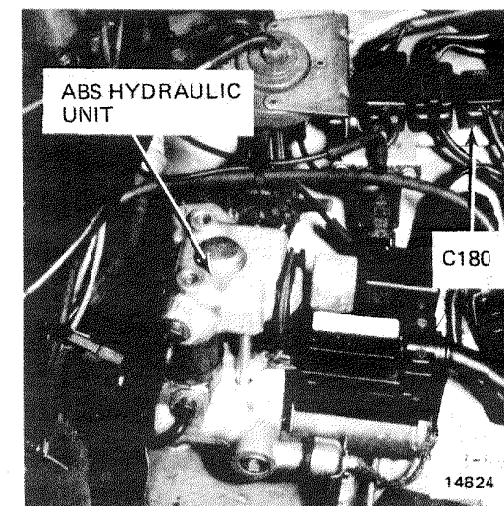


Figure 4 - LH Side of Engine Compartment

REVISIONS

COMPONENT LOCATIONS

HEADLIGHTS/FOG LIGHTS

	Page-Figure
Combination Switch	Top LH side of steering column
Fuse Box	LH rear corner of engine compartment 203-2
C106 (14 pin)	LH side of driver's footwell 214-2
C141 (4 pin)	Behind LH headlights 201-2
C142 (4 pin)	Behind RH headlights
G101	On radiator support, near RH headlights 206-1
G102	Behind instrument cluster 215-2

HEATED SEATS

	Page-Figure
Fuse Box	LH rear corner of engine compartment 203-2
Seat Heater Control/Relays (Front)	Under each front seat, on air duct 220-1
Seat Heater Control/Relays (Rear)	Behind rear seat backrest 220-5
Seat Heaters	In each seat cushion
G102	Behind instrument cluster 215-2

IGNITION/FUEL DELIVERY/DIAGNOSTIC SOCKET/ TRANSMISSION KICKDOWN

	Page-Figure
Control Unit 1st Gear Start-Off	Above accelerator pedal 213-2
Diagnostic Socket	LH front wheel well 206-2
Fuel Pump	To right of differential 211-1
Fuse Box	LH rear corner of engine compartment 203-2
Ignition Coil	LH front wheel well 206-2
Ignition Switching Unit	LH front wheel well 206-2
Kick Down Solenoid	RH rear of transmission 209-4
Shift Lever Switch	RH side of shifter assembly 217-2
Starter Lockout/Backup Light Switch	LH side of transmission 210-1
Transmission Kick Down Switch	Under accelerator pedal 214-1
Warm-Up Enrichment Compensator	Top of engine, in front of throttle body 206-4
C104 (14 pin)	LH side of driver's footwell 214-2
C116 (1 terminal)	LH front wheel well 206-2

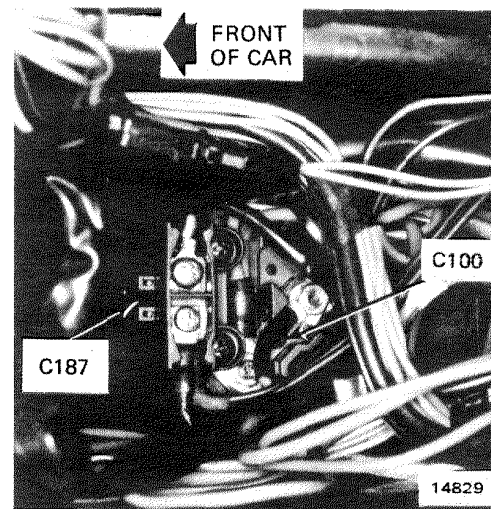


Figure 1 - Under Fuse Box

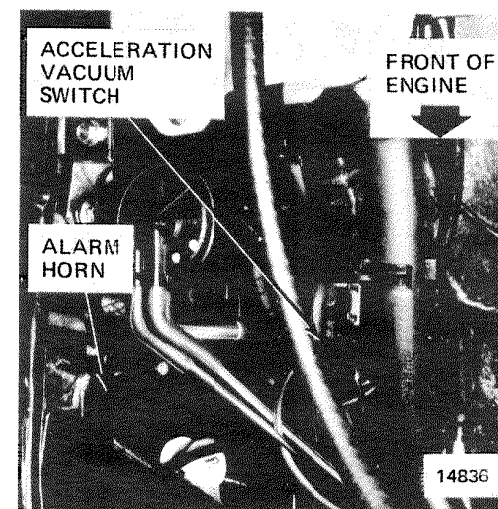


Figure 2 - RH Front Corner of Engine Compartment

REVISIONS:

COMPONENT LOCATIONS

IGNITION/FUEL DELIVERY/DIAGNOSTIC SOCKET/ TRANSMISSION KICKDOWN (Continued)

		Page-Figure
C146 (6 pin).....	RH side of driver's footwell.....	214-1
C175 (2 pin).....	Above accelerator pedal.....	215-1
G101.....	On radiator support, near RH headlights.....	206-1
G102.....	Behind instrument cluster.....	215-2
G104.....	RH rear wheel well.....	220-6
G106.....	LH front wheel well.....	206-2

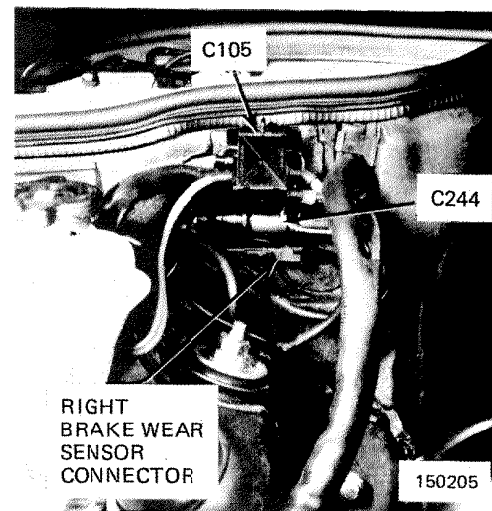


Figure 3- RH Rear of Engine Compartment

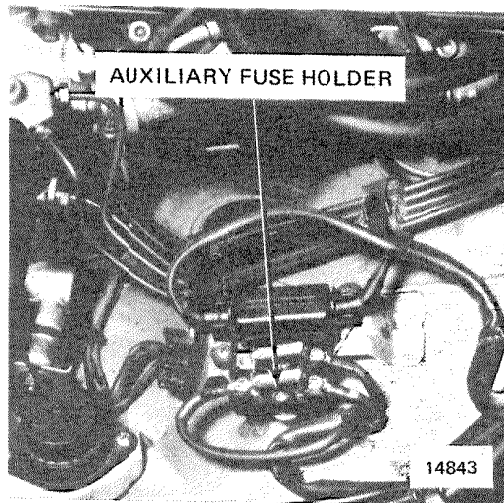


Figure 1- LH Side of Engine Compartment

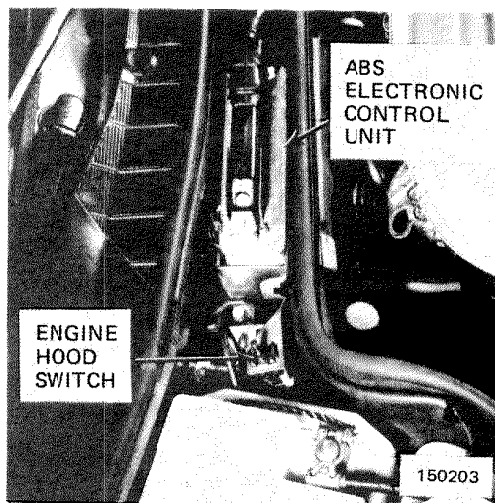


Figure 2- Rear of Engine Compartment

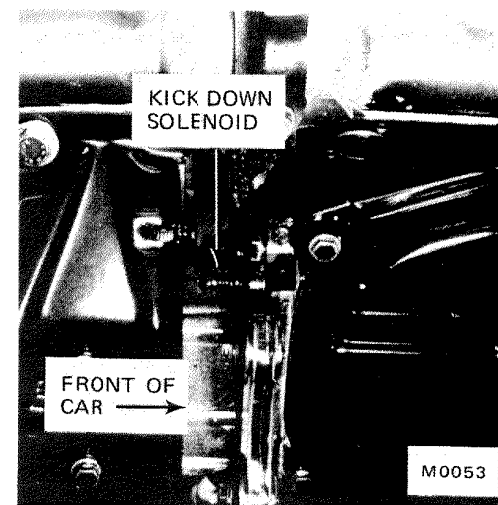


Figure 4- Rear RH Side of Transmission

REVISIONS:

126.032/.033/.037/.043/.044

COMPONENT LOCATIONS

ILLUMINATION: INSTRUMENT CLUSTER/CENTER CONSOLE

		Page-Figure
Fuse Box.....	LH rear corner of engine compartment.....	203-2
C107 (6 pin).....	Under center console	
C108 (2 pin).....	Under center console	
C124 (1 terminal)	RH side of driver's footwell	
G102	Behind instrument cluster.....	215-2

LIGHTS: PARK/TAIL/LICENSE

		Page-Figure
Fuse Box.....	LH rear corner of engine compartment.....	203-2
C104 (14 pin).....	LH side of driver's footwell.....	214-2
C141 (4 pin).....	Behind LH headlights.....	201-2
C142 (4 pin).....	Behind RH headlights	
G101	On radiator support, near RH headlights.....	206-1
G102	Behind instrument cluster.....	215-2
G103	LH rear wheel well.....	221-1
G104	RH rear wheel well.....	220-6

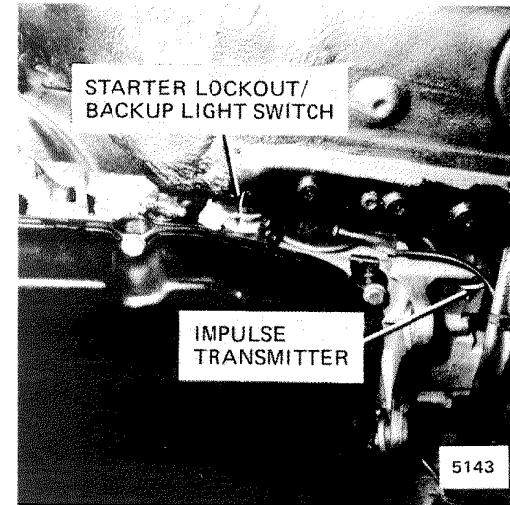


Figure 1 - LH Side of Transmission

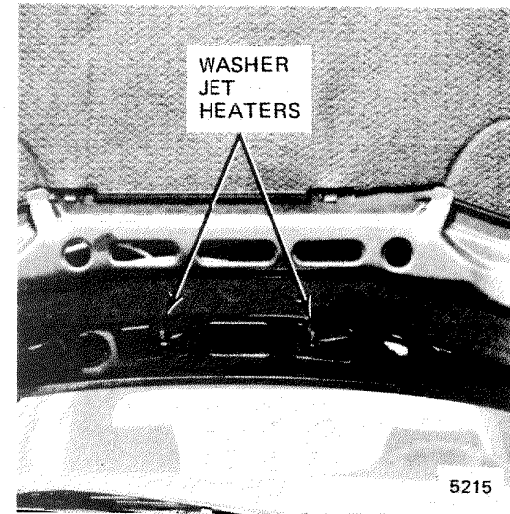


Figure 2 - Rear Center of Hood

REVISIONS:

COMPONENT LOCATIONS

ORTHOPEDIC SEATS

Air Pressure Reservoir	Above RH rear wheel well	
Fuse Box.....	LH rear corner of engine compartment.....	203-2
Supply Pump	In spare tire well.....	221-5
G103	LH rear wheel well	221-1

OUTSIDE HEATED MIRRORS

Fuse Box.....	LH rear corner of engine compartment.....	203-2
C310 (2 pin).....	In LH front door	
G102	Behind instrument cluster.....	215-2

POWER DISTRIBUTION

Battery	RH rear corner of engine compartment	
Fuse Box.....	LH rear corner of engine compartment.....	203-2
Ignition Switch	In dash panel, right of steering column	212-2
Seatbelt Modules	Behind LH and RH rear side panels	221-4
Starter Assembly.....	Lower RH rear of engine	
C104 (14 pin).....	LH side of driver's footwell.....	214-2
C105 (2 terminal)	RH front wheel well	209-3
G100	RH rear corner of engine compartment	205-1

Page-Figure

Page-Figure

Page-Figure

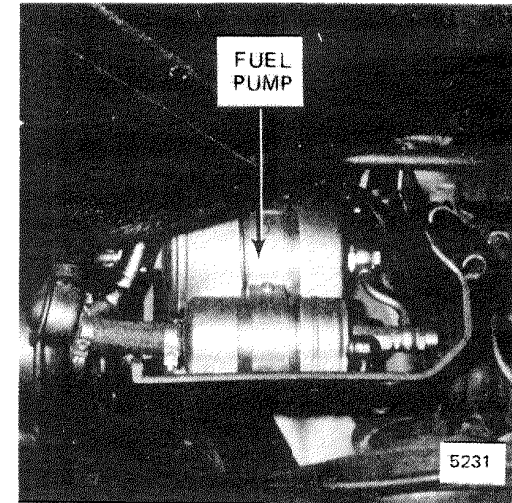


Figure 1- Underside of Car, Right of Differential

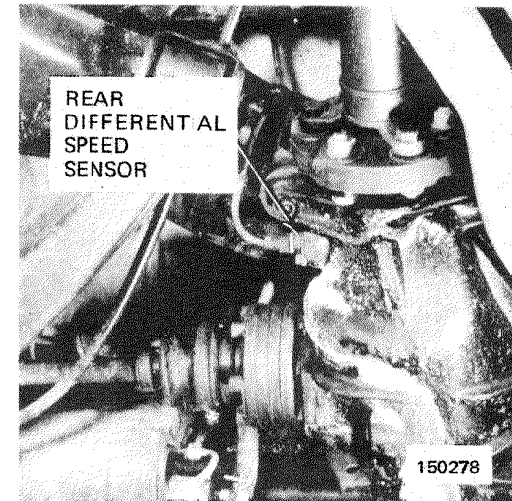


Figure 2- Rear Underside of Car

REVISIONS:

COMPONENT LOCATIONS

POWER SEATS

		Page-Figure
Door Switches	In each door jamb.....	219-4
Fuse Box.....	LH rear corner of engine compartment.....	203-2
Parking Brake Switch	On parking brake support	
Power Seat Control Module ...	Under front of driver's seat.....	219-3
Power Seat Motors	Under front seats	
Switchover Valve.....	LH side of driver's footwell.....	214-2
Warning Module	LH side of driver's footwell.....	214-2
C156 (1 pin).....	Behind LH front door switch	
C157 (1 pin).....	Behind LH front door switch	
C181 (4 pin).....	Under driver's seat	
C182 (2 pin).....	Under driver's seat	
C201 (4 pin).....	At RH kick panel	
G102	Behind instrument cluster.....	215-2

POWER WINDOWS

		Page-Figure
Fuse Box.....	LH rear corner of engine compartment.....	203-2
Window Motor.....	Below each side window.....	221-2
C107 (6 pin).....	Under center console	
C108 (2 pin).....	Under center console	
C169 (6 terminal)	Behind LH side of rear panel.....	221-2
C170 (6 terminal)	Behind RH side of rear panel	
G102	Behind instrument cluster.....	215-2

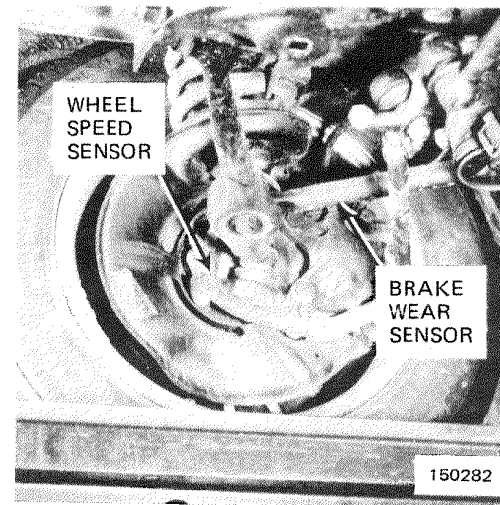


Figure 1 - Inside of RH Front Wheel

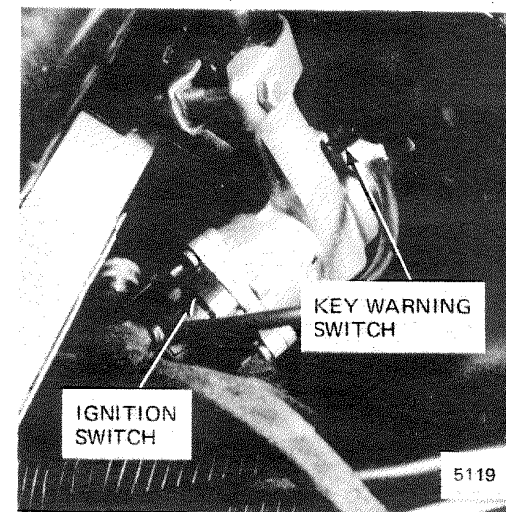


Figure 2 - Behind LH Side of Dash

REVISIONS:

COMPONENT LOCATIONS

REAR DEFOGGER/SLIDING ROOF

		Page-Figure
Fuse Box.....	LH rear corner of engine compartment.....	203-2
Sliding Roof Motor.....	Front LH side of trunk.....	221-1
C104 (14 pin).....	LH side of driver's footwell.....	214-2
C168 (2 pin).....	Above LH rear wheel well.....	221-1
G102.....	Behind instrument cluster.....	215-2
G104.....	RH rear wheel well.....	220-6

REAR SEAT ADJUSTMENT

		Page-Figure
Fuse Box.....	LH rear corner of engine compartment.....	203-2
Rear Seat Motor.....	Under rear seat.....	220-5
C124 (1 terminal).....	RH side of driver's footwell.....	
C163 (2 terminal).....	Under RH side of rear seat.....	220-3
G102.....	Behind instrument cluster.....	215-2

RH OUTSIDE MIRROR

		Page-Figure
Fuse Box.....	LH rear corner of engine compartment.....	203-2
G102.....	Behind instrument cluster.....	215-2

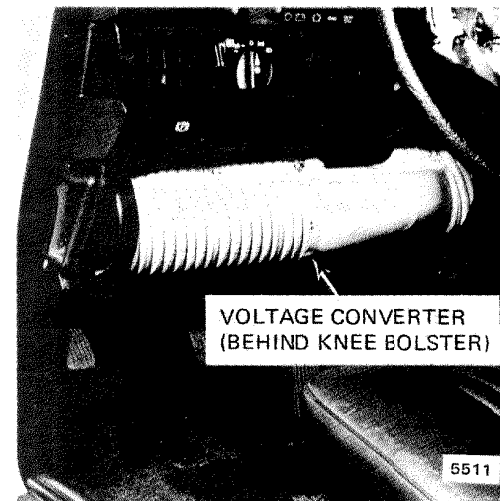


Figure 1- Lower LH Side of Dash Panel

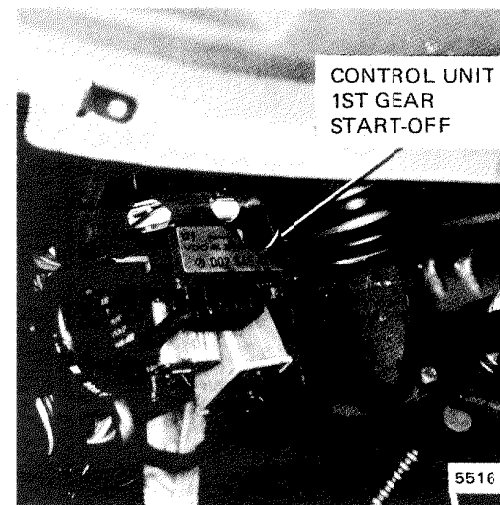


Figure 2- Under LH Side of Dash Panel

REVISIONS:

COMPONENT LOCATIONS

SEAT BACKREST LOCKING SYSTEM

		Page-Figure
Anti Theft Alarm Control Unit	Front of passenger's footwell	219-1
Door Switches	In each door jamb	219-4
Fuse Box	LH rear corner of engine compartment	203-2
Parking Brake Switch	On parking brake support	
Switchover Valve	LH side of driver's footwell	214-2
Warning Module	LH side of driver's footwell	214-2
G102	Behind instrument cluster	215-2

SEATBELT EXTENDERS

		Page-Figure
Door Switches	In each door jamb	219-4
Extender Motors	Behind rear panels in passenger compartment ..	221-2
Fuse Box	LH rear corner of engine compartment	203-2
Limit Switches	On extender arm, behind rear side panels	221-2
Seatbelt Modules	Behind LH and RH rear side panels	221-4
Seatbelt Switches	Part of seatbelt buckles	
Seatbelt Warning Relay	LH side of driver's footwell	
C104 (14 pin)	LH side of driver's footwell	214-2
C171 (8 pin)	Behind LH rear side panel	221-4
C172 (8 pin)	Behind RH rear side panel	221-4
G103	LH rear wheel well	221-1
G104	RH rear wheel well	220-6

START/COLD START

		Page-Figure
Battery	RH rear corner of engine compartment	
Cold Start Valve	Top RH front of engine	203-1
Fuse Box	LH rear corner of engine compartment	203-2
Idle Speed Control Unit	Rear center of engine compartment	202-4
Ignition Switch	In dash panel, right of steering column	212-2
Starter Assembly	Lower RH rear of engine	
Starter Lockout/Backup Light Switch	LH side of transmission	210-1
Thermo-Time Switch	Top front of engine	206-4
C105 (2 terminal)	RH front wheel well	209-3
C146 (6 pin)	RH side of driver's footwell	205-1

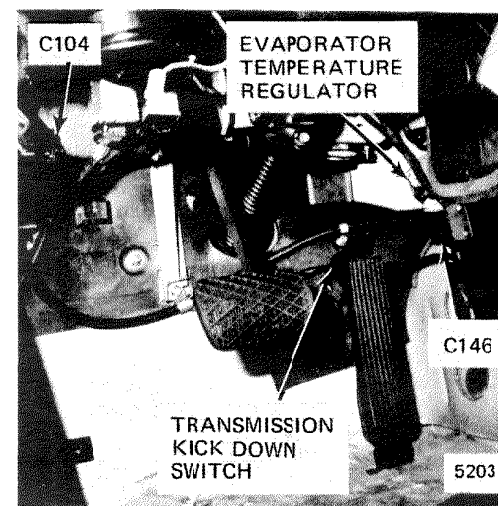


Figure 1- Driver's Footwell Area

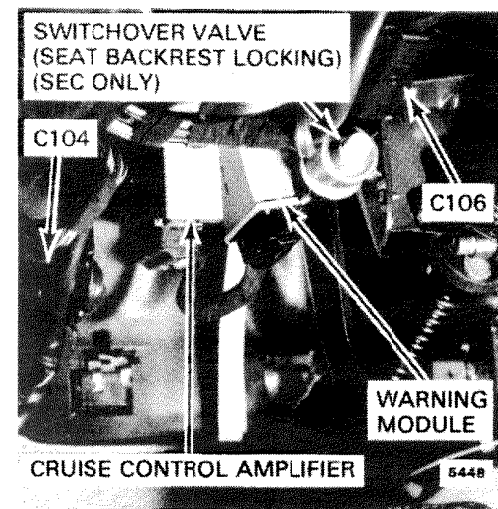


Figure 2- LH Side of Driver's Footwell

REVISIONS:

COMPONENT LOCATIONS

STOPLIGHTS/BACKUP LIGHTS/CRUISE CONTROL

		Page-Figure
Brake Switch	Top of brake pedal support	
Cruise Control Actuator	RH front of engine	207-2
Cruise Control Amplifier	LH side of driver's footwell	214-2
Fuse Box	LH rear corner of engine compartment	203-2
C104 (14 pin)	LH side of driver's footwell	214-2
C140 (6 pin)	Behind LH side of dash panel, at base of steering column	
C164 (8 pin)	RH front wheel well	207-2
C176 (1 pin)	Behind instrument cluster	216-1
C190 (1 terminal)	Behind instrument cluster	216-2
G102	Behind instrument cluster	215-2
G103	LH rear wheel well	221-1
G104	RH rear wheel well	220-6

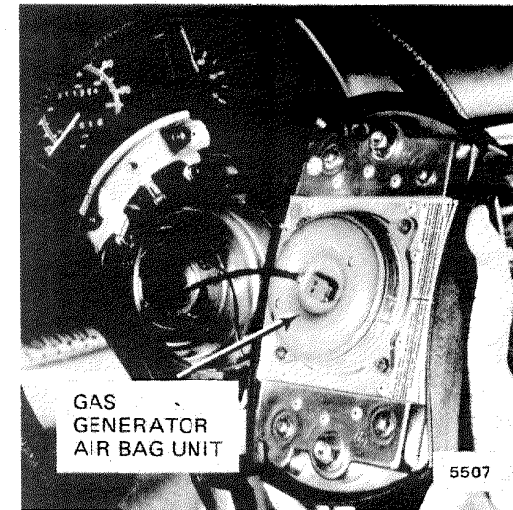


Figure 3 - Steering Wheel

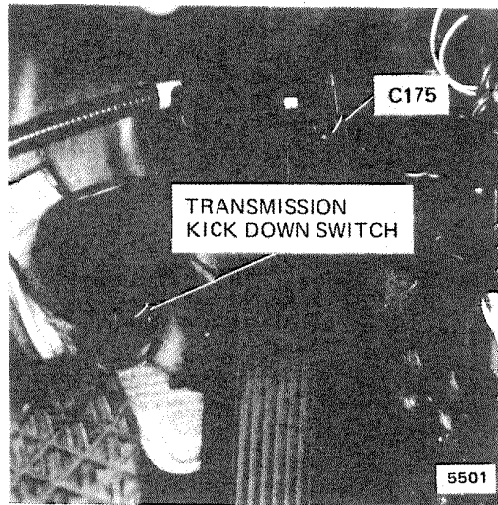


Figure 1 - RH Side of Driver's Footwell

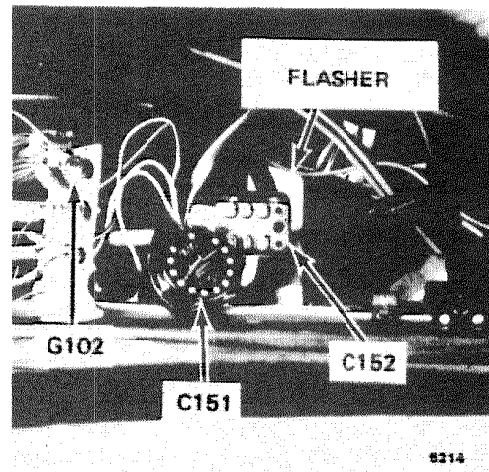


Figure 2 - Behind Instrument Cluster

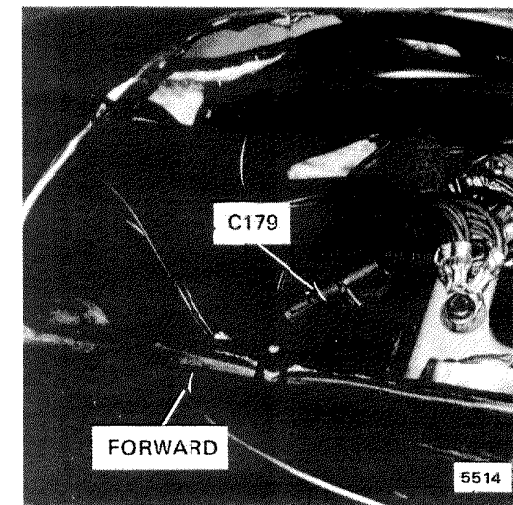


Figure 4 - Behind Instrument Cluster

REVISIONS:

COMPONENT LOCATIONS

SUPPLEMENTAL RESTRAINT SYSTEM

		Page-Figure
Energy Accumulator.....	Behind RH front footrest	
Fuse Box.....	LH rear corner of engine compartment.....	203-2
Gas Generator Air Bag Unit...	Behind steering wheel insert.....	215-3
Gas Generator Emergency Tensioning Retractor.....	In base of door pillars.....	219-2
Ignition Switch.....	In dash panel, right of steering column.....	212-2
Sensor/Control Unit.....	Below front of console.....	218-1
Slip Ring Assembly.....	Underside of steering wheel	
Voltage Converter.....	Behind LH side of dash panel.....	213-1
C178 (10 pin).....	In passenger's footwell area	
C179 (2 pin).....	Behind instrument cluster.....	215-4
G102.....	Behind instrument cluster.....	215-2

TRUNK LIGHT/REAR CIGAR LIGHTERS

		Page-Figure
Antenna Motor/Control.....	LH rear wheel well.....	221-1
Antenna Motor/Relay.....	LH rear wheel well.....	221-1
Fuse Box.....	LH rear corner of engine compartment.....	203-2
C104 (14 pin).....	LH side of driver's footwell.....	214-2
C135 (6 pin).....	Above LH rear wheel well.....	221-1
G103.....	LH rear wheel well.....	221-1
G104.....	RH rear wheel well.....	220-6

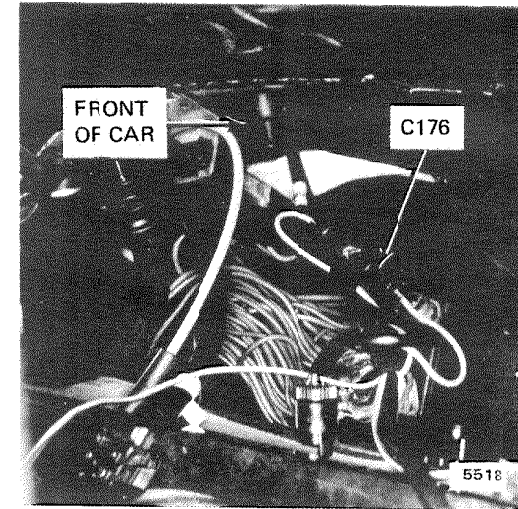


Figure 1- Behind Instrument Cluster

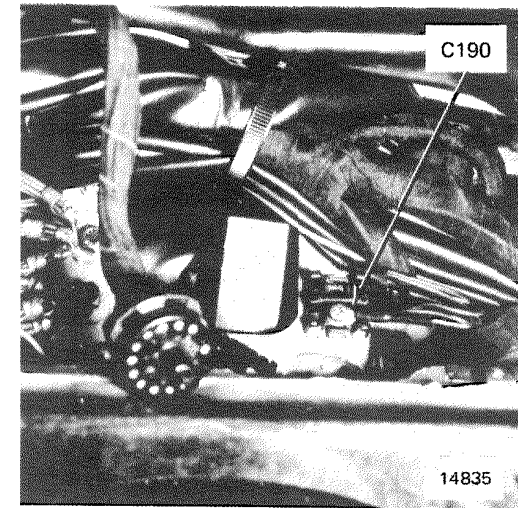


Figure 2- Behind Instrument Cluster

REVISIONS:

COMPONENT LOCATIONS

TURN SIGNAL/HAZARD LIGHTS

		Page-Figure
Combination Switch	Top LH side of steering column	
Flasher	Behind instrument cluster	215-2
Fuse Box	LH rear corner of engine compartment.	203-2
C104 (14 pin)	LH side of driver's footwell	214-2
C106 (14 pin)	LH side of driver's footwell	214-2
C141 (4 pin)	Behind LH headlights	201-2
C142 (4 pin)	Behind RH headlights	
G101	On radiator support, near RH headlights.	206-1
G102	Behind instrument cluster	215-2
G103	LH rear wheel well	221-1
G104	RH rear wheel well	220-6

WARNING INDICATORS/GAUGES/CLOCK/

		Page-Figure
Brake Wear Sensors	In front brake pads.	212-1
Coolant Temperature Sender ..	Top front of engine	203-1
Diagnostic Socket	LH front wheel well	206-2
Fuel Gauge Sender	Under first aid kit tray	
Fuse Box	LH rear corner of engine compartment.	203-2
Ignition Switching Unit	LH front wheel well	206-2
Impulse Transmitter	Rear of LH side of transmission	210-1
Oil Pressure Sender	Lower LH rear of engine	202-2
Outside Air Temperature Sensor	Behind front license bracket	
C104 (14 pin)	LH side of driver's footwell	214-2
C116 (1 terminal)	LH front wheel well	206-2
C131 (2 pin)	RH side of fuse box	207-1
C132 (2 pin)	Top of RH front wheel well	204-2
C146 (6 pin)	RH side of driver's footwell	214-1
C177 (2 pin)	LH rear corner of engine compartment, under fuse box	207-3
G101	On radiator support, near RH headlights.	206-1
G102	Behind instrument cluster	215-2
G103	LH rear wheel well	221-1
G106	LH front wheel well	206-2

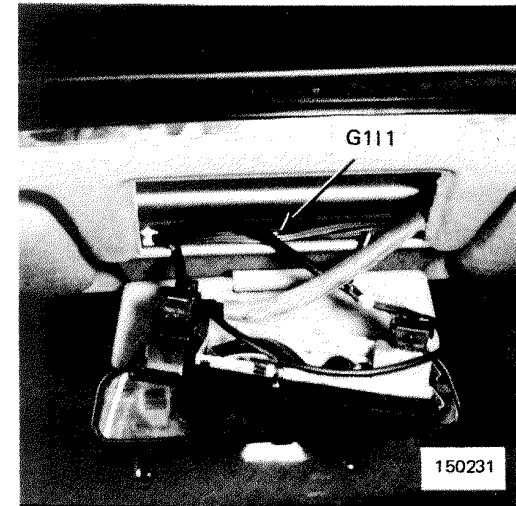


Figure 1 - Center of Windshield Header

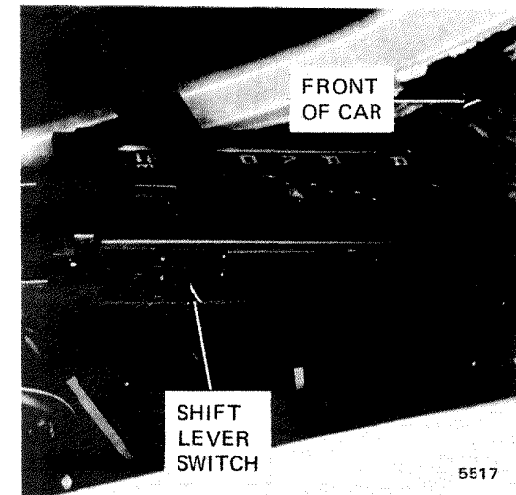


Figure 2 - RH Side of Shifter Assembly

REVISIONS:

--

COMPONENT LOCATIONS

WARNING SYSTEM

		Page-Figure
Brake Fluid Level Switches . . .	LH rear corner of engine compartment, at brake fluid reservoir	203-2
Door Switches	In each door jamb	219-4
Driver's Seatbelt Switch	In driver's seatbelt buckle	
Fuse Box	LH rear corner of engine compartment	203-2
Key Warning Switch	Part of ignition switch	212-2
Limit Switches	On extender arm, behind rear side panels	221-2
Parking Brake Switch	On parking brake support	
Seatbelt Modules	Behind LH and RH rear side panels	221-4
Seatbelt Warning Relay	LH side of driver's footwell	
Warning Module	LH side of driver's footwell	214-2
C104 (14 pin)	LH side of driver's footwell	214-2
C131 (2 pin)	RH side of fuse box	207-1
C156 (1 pin)	Behind LH front door switch	
C166 (2 pin)	Under driver's seat	
C171 (8 pin)	Behind LH rear side panel	221-4
C200 (4 pin)	At LH kick panel	
G102	Behind instrument cluster	215-2
G103	LH rear wheel well	221-1

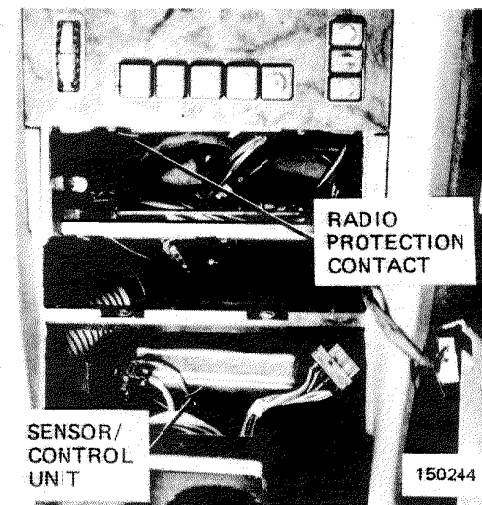


Figure1 - Front of Console

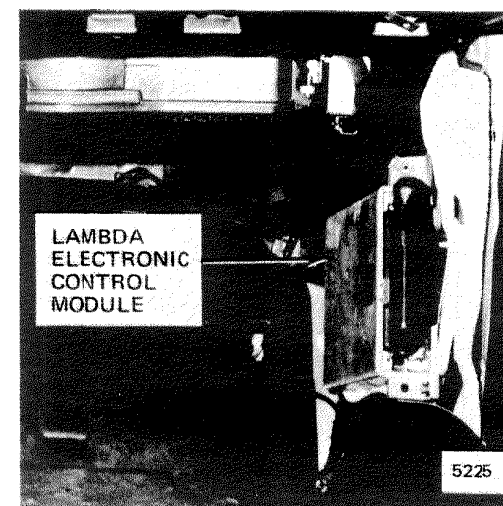


Figure 2 - RH Side of Passenger's Footwell

REVISIONS:

COMPONENT LOCATIONS

WIPER/WASHER

		Page-Figure
Brake Wear Sensors	In front brake pads.	212-1
Combination Switch	Top LH side of steering column	
Fuse Box.	LH rear corner of engine compartment.	203-2
Washer Jet Heaters.	In water jets, rear center of hood	210-2
Washer Motor	In washer fluid reservoir	
Wiper Motor.	In center of fresh air duct	202-3
C106 (14 pin).	LH side of driver's footwell	214-2
C112 (6 pin).	To right of power brake booster	202-3
C132 (2 pin).	Top of RH front wheel well	204-2
G101	On radiator support, near RH headlights.	206-1
G102	Behind instrument cluster	215-2

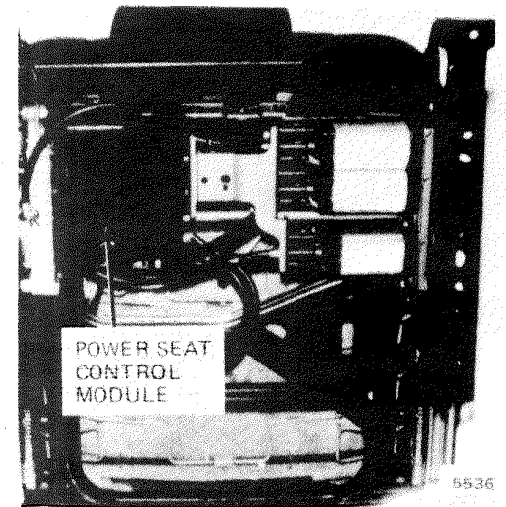


Figure 3 - Underside of Driver's Seat

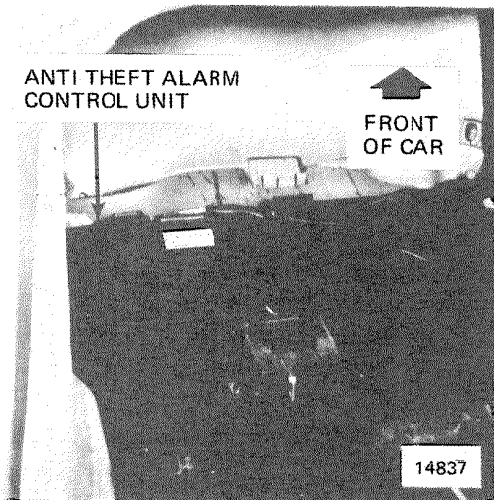


Figure 1 - Passenger's Footwell Area

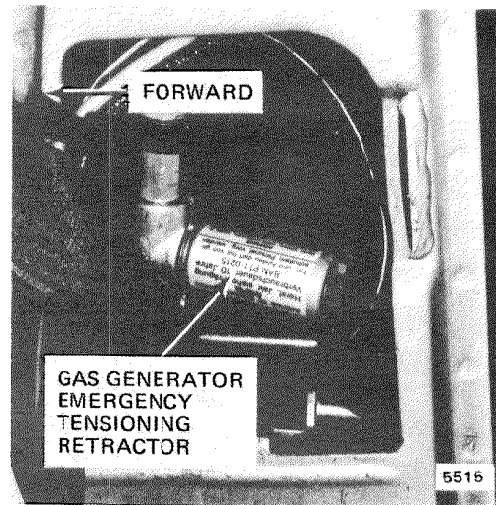


Figure 2 - Inside of RH Door Pillar

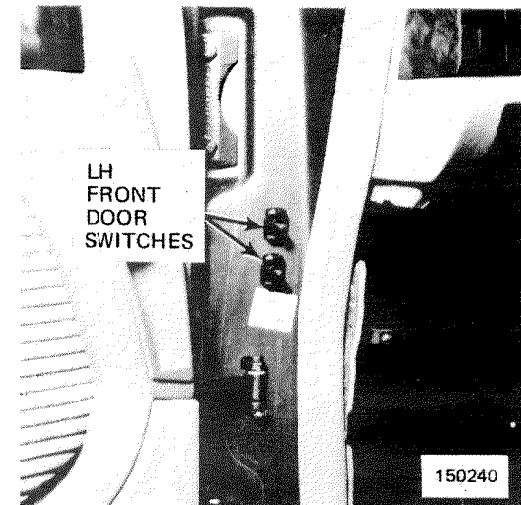


Figure 4 - LH Front Door Jamb (RH Similar)

REVISIONS:

1/87

126.032/.033/.037/.043/.044

219

COMPONENT LOCATIONS

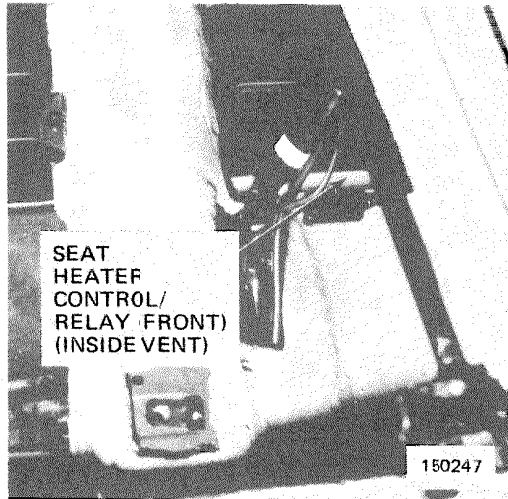


Figure 1 - Below Driver's Seat

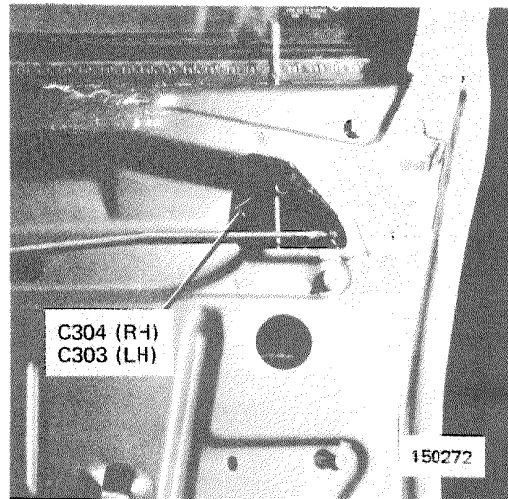


Figure 2 - RH Front Door (LH Similar)

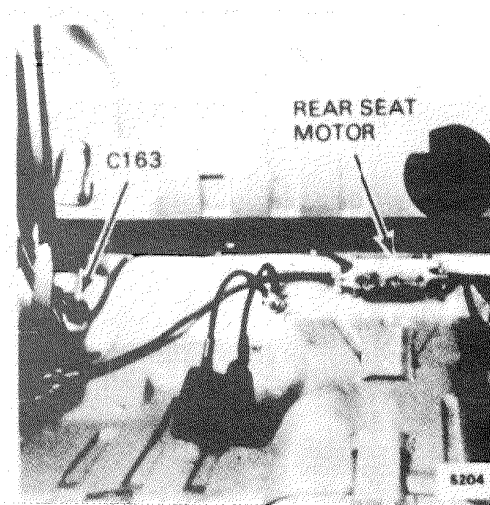


Figure 3 - Under Rear Seat

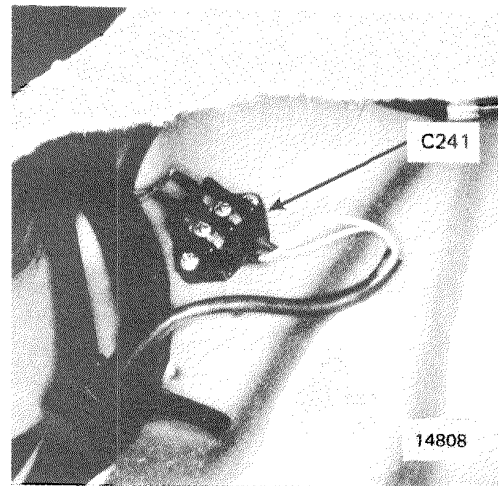


Figure 4 - Under RH Side of Rear Seat

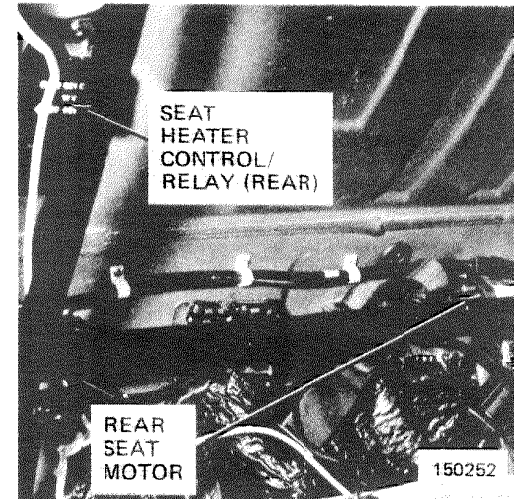


Figure 5 - Behind Rear Seat (RH Side Shown, LH Similar)

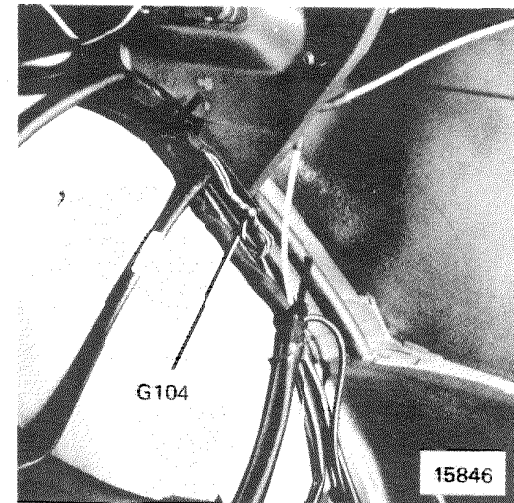


Figure 6 - RH Rear Wheel Well, in Trunk

REVISIONS:

COMPONENT LOCATIONS

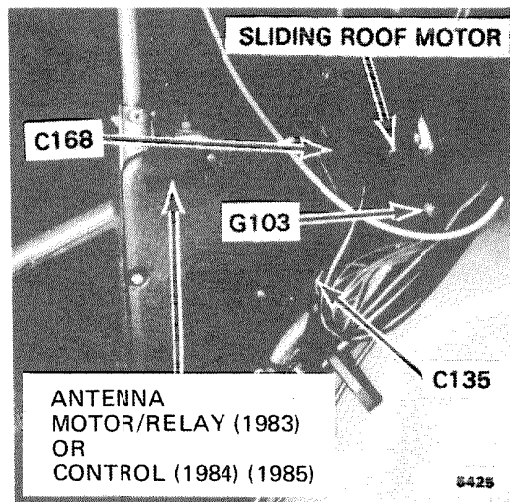


Figure 1 - LH Rear Wheel Well, in Trunk

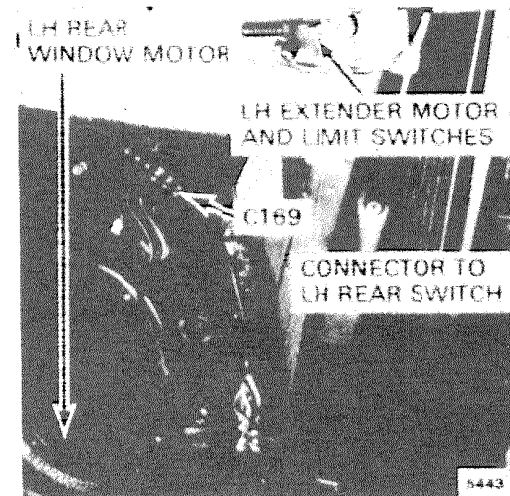


Figure 2 - Behind LH Rear Side Panel

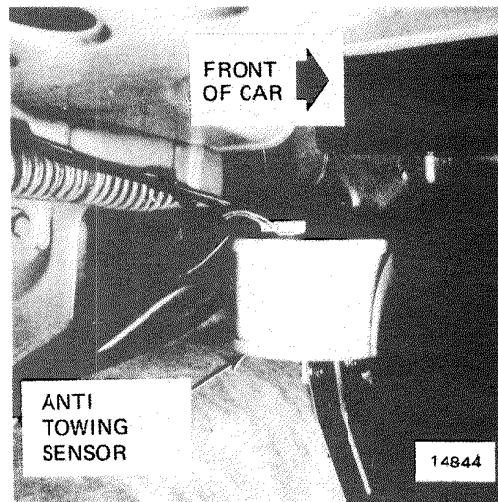


Figure 3 - LH Front Corner of Trunk

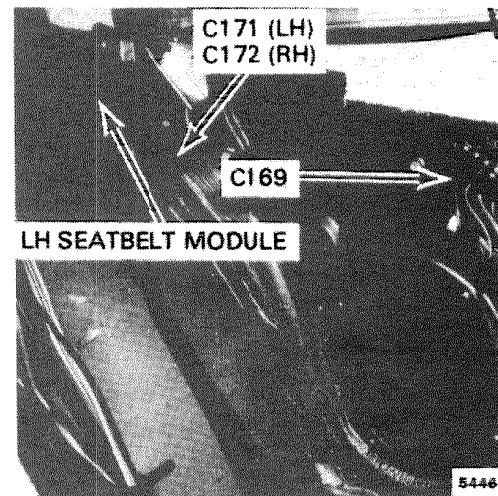


Figure 4 - Behind LH Rear Side Panel

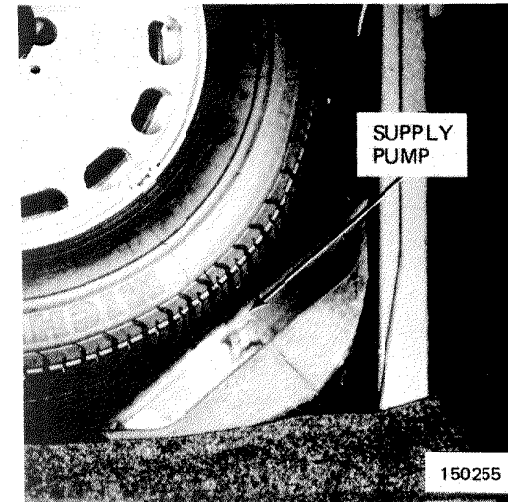


Figure 5 - Bottom of Trunk

REVISIONS: